

## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in the ACC or ON position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

#### 1. PRECAUTION (SEE PAGE RS-1 AND RS-3)

#### 2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

#### 3. REMOVE SEAT TRACK COVERS

Using a screwdriver, remove the seat track covers.

### HINT:

Tape the screwdriver tip before use.


#### 4. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors.
- (c) w/ Side airbag:  
Disconnect the airbag connector.
- (d) Remove the front seat.

### NOTICE:

Be careful not to damage the body.

#### 5. REMOVE HEADRESTS

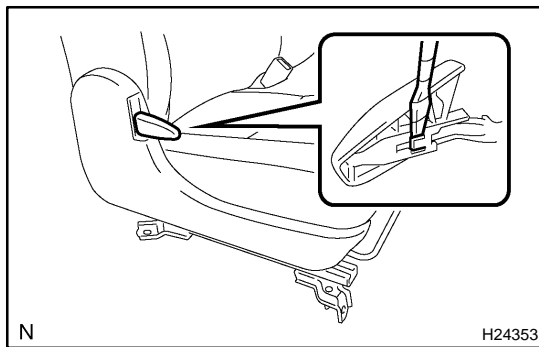


#### 6. REMOVE RECLINING ADJUSTER RELEASE HANDLE

Using a screwdriver, remove the reclining adjuster release handle.

### HINT:

Tape the screwdriver tip before use.

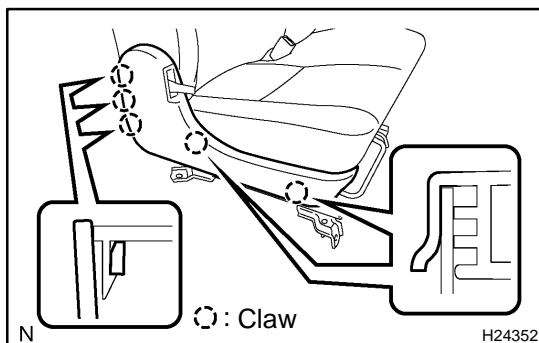


#### 7. REMOVE RH SEAT CUSHION SHIELD

Disengage the claws and remove the RH seat cushion shield.


#### 8. REMOVE SEAT CUSHION LOWER SHIELD

Remove the 2 screws and seat cushion lower shield.

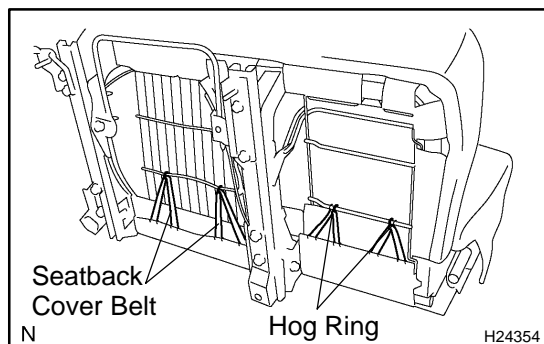


## 9. REMOVE SEATBACK ASSEMBLY


- (a) Remove the hog rings from the seatback cover belt.
- (b) Remove the seatback cover belt from the hook.

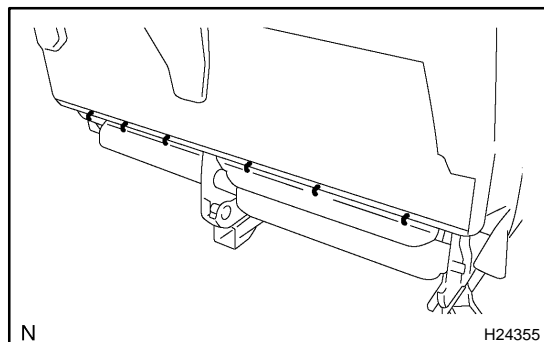


- (c) Remove the hog rings from the seatback cover.
- (d) Open the fastener.
- (e) Remove the bolt and center armrest assembly.
- (f) Remove the 2 bushings.

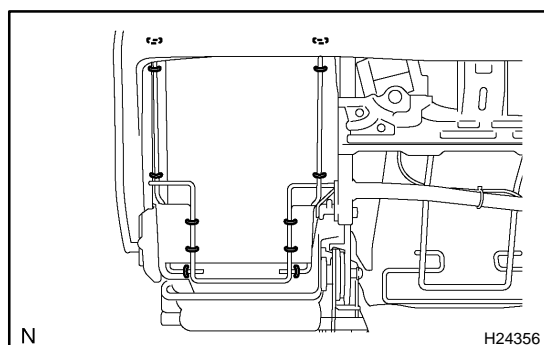


- (g) Remove the hog rings from the seatback cover.

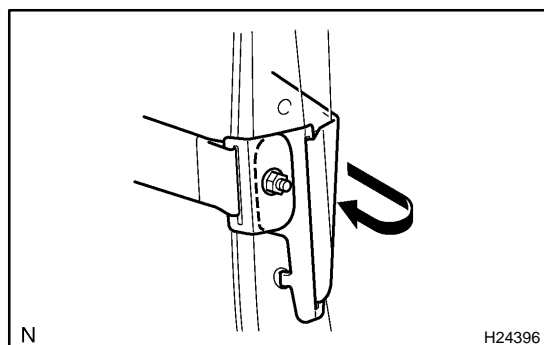


- (h) w/ Side airbag:  
Remove the nut and disconnect the seatback cover brackets from the seatback frame.

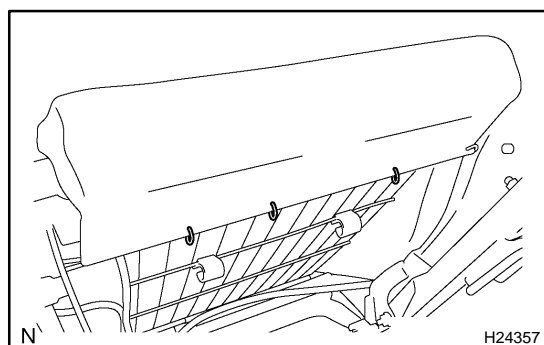

- (i) Remove the hog rings from the seat cushion cover.

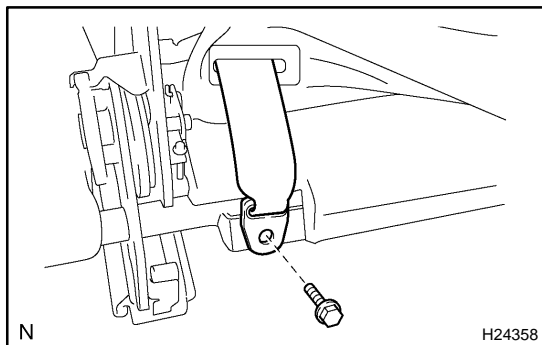

- (j) Remove the bolt and disconnect the front seat center belt from the seat cushion assembly.
- (k) Remove the screw and RH seat cushion lower shield.
- (l) Remove the 2 screws and RH reclining adjuster inside cover.

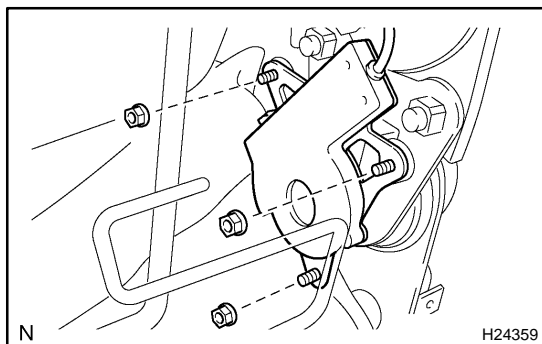

- (m) Remove the 3 nuts and disconnect the front seat center belt.

- (n) Remove the 3 bolts.
- (o) Using a torx® socket wrench, remove the 2 torx® screws and seatback assembly from the seat cushion assembly.
- (p) Remove the bushing from the seatback frame.
- (q) Remove the 4 headrest supports from the seatback assembly.
- (r) Remove the seatback lock upper bezel.
- (s) Remove the seatback frame from the seatback pad.

