

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the seat position sensor assembly with a new one.

- The seat position sensor assembly has been found to be faulty in troubleshooting.
- The seat position sensor assembly has been dropped.

CAUTION:

For removal and installation procedures of the seat position sensor assembly, see page [RS-118](#) and [RS-122](#). Be sure to follow the correct procedure.