

## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in the ON or ACC position, DTCs will be recorded.
  - Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.
1. PRECAUTION (SEE PAGE [RS-1](#) AND [RS-3](#))
  2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
- Wait for 90 seconds after disconnecting the cable to prevent the airbag working.
3. REMOVE STEERING WHEEL PAD (SEE PAGE [SR-18](#) AND [SR-33](#))
  4. REMOVE STEERING WHEEL (SEE PAGE [SR-18](#) AND [SR-33](#))
  5. REMOVE STEERING COLUMN COVER LOWER (SEE PAGE [SR-18](#) AND [SR-33](#))
  6. REMOVE SPIRAL CABLE (SEE PAGE [SR-18](#) AND [SR-33](#))