


REMOVAL

1. REMOVE FRONT WHEEL

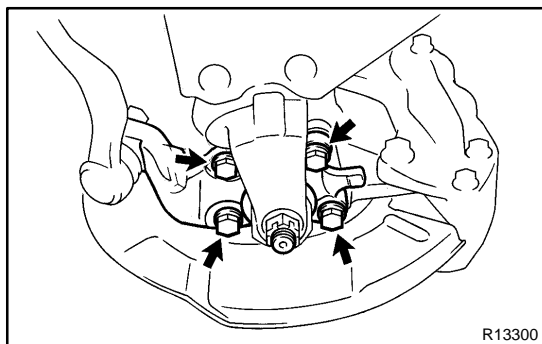


2. LOOSEN 4 LOWER BALL JOINT SET BOLTS

HINT:

Do not remove the bolts.

3. DISCONNECT TIE ROD END

- (a) Remove the cotter pin and nut from the tie rod end.

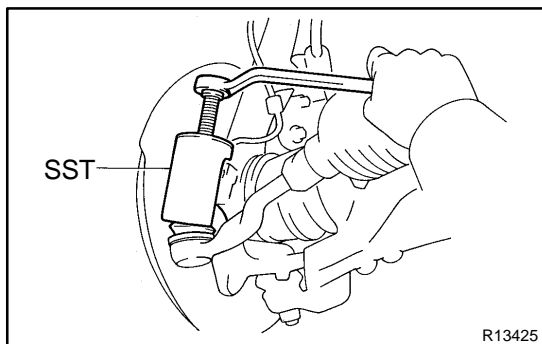


- (b) Using SST, disconnect the tie rod end from the lower ball joint.

SST 09610-20012

4. REMOVE LOWER BALL JOINT WITH LOWER BALL JOINT DUST COVER PROTECTOR

- (a) Remove the cotter pin and nut from the lower ball joint.

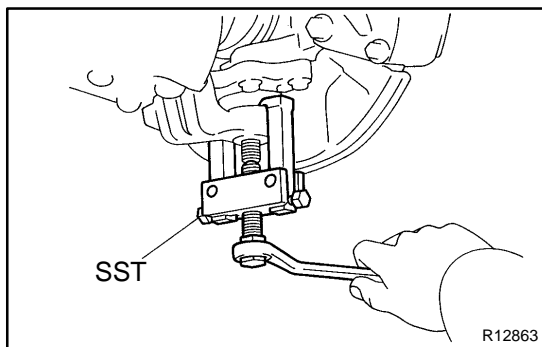

- (b) Using SST, disconnect the lower ball joint from the lower suspension arm.

SST 09628-62011

- (c) Remove the 4 lower ball joint set bolts.
 (d) Remove the lower ball joint dust cover protector.
 (e) While lifting the upper suspension arm and steering knuckle, remove the lower ball joint.
 (f) Support the upper suspension arm and steering knuckle securely.