


REASSEMBLY

1. INSTALL COIL SPRING TO SHOCK ABSORBER

- (a) Using SST, compress the coil spring.
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:

- Do not compress the coil spring more than necessary.
- Do not use an impact wrench. It will damage the SST.

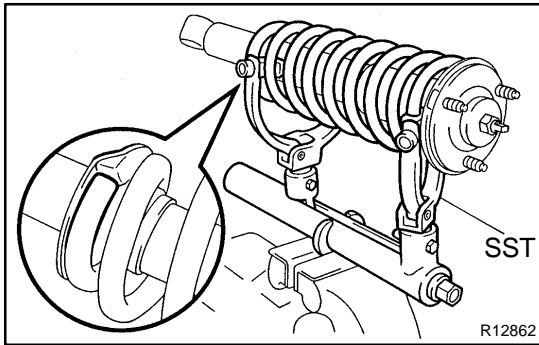


- (b) Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring seat of the shock absorber.

2. INSTALL SUSPENSION SUPPORT

- (a) Install the cushion, 2 retainers and suspension support to the piston rod.
(b) Temporarily tighten a new suspension support center nut.

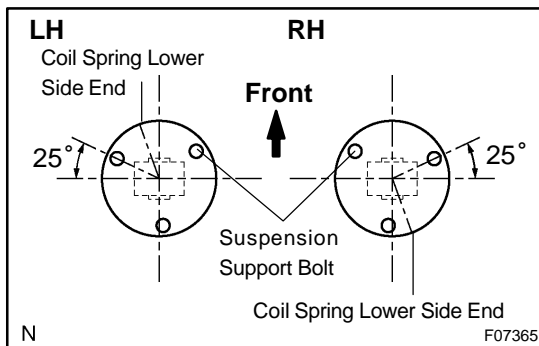

- (c) Position the suspension support as shown in the illustration.

- (d) Remove the SST.

SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:

Do not place yourself over the top of the shock absorber.

HINT:

After removing the SST, recheck the direction of the suspension support.

- (e) Torque the suspension center nut.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)