


## REMOVAL

### 1. REMOVE FRONT WHEEL

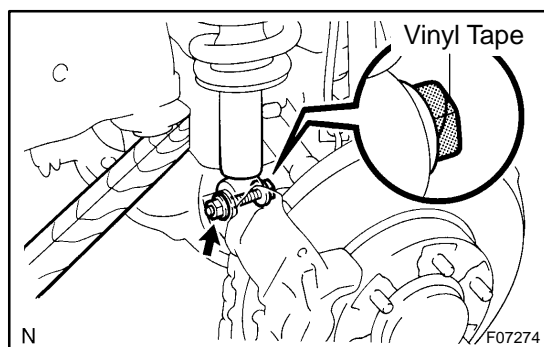


### 2. DISCONNECT SHOCK ABSORBER FROM LOWER SUSPENSION ARM

- (a) Remove the shock absorber lower side set nut and washer.

#### NOTICE:

**Do not remove the bolt.**

- (b) Wrap the bolt's head with vinyl tape to prevent the drive shaft boot from being damaged.
- (c) Pry down the lower suspension arm to remove the bolt and disconnect the shock absorber.

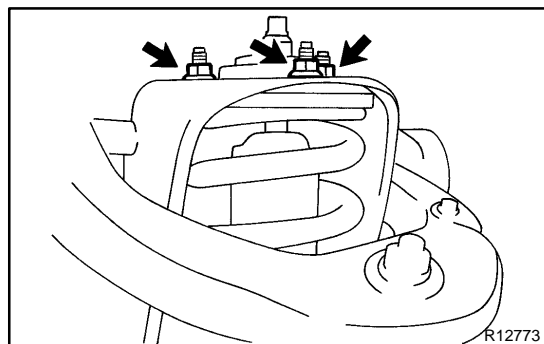

### 3. REMOVE SHOCK ABSORBER WITH COIL SPRING

Remove the 3 nuts and shock absorber with the coil spring.