


REMOVAL

1. **REMOVE STEERING KNUCKLE WITH AXLE HUB**
(See page [SA-20](#))
2. **REMOVE UPPER BALL JOINT**
 - (a) Remove the wire and boot.
 - (b) Using a snap ring expander, remove the snap ring.

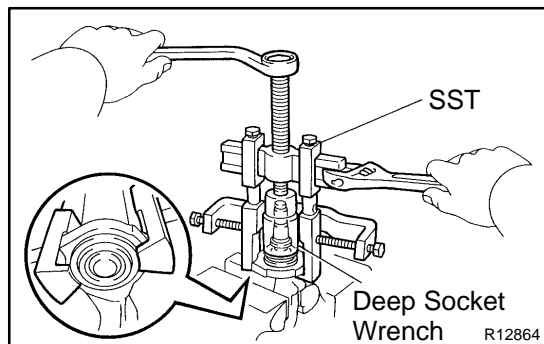

-
-
- (c) Using SST and a deep socket wrench, remove the upper ball joint.

SST 09950-40011 (09951-04010, 09952-04010, 09953-04020, 09954-04010, 09955-04031, 09957-04010, 09958-04011)