


REMOVAL

1. **REMOVE REAR WHEELS**
Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)
2. **SUPPORT REAR AXLE HOUSING WITH JACK**

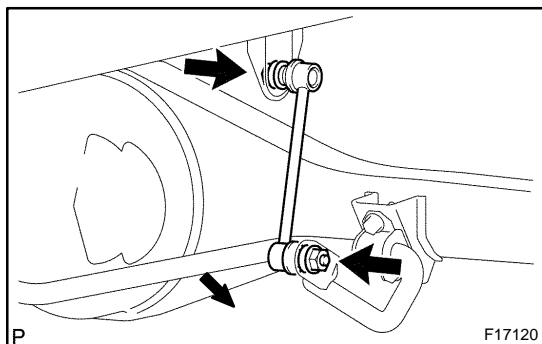


3. **REMOVE STABILIZER BAR LINKS**
 - (a) Remove the 2 nuts and stabilizer bar link.
Torque: 69 N·m (704 kgf·cm, 51 ft·lbf)

HINT:

If the ball joint stud turns together with the nut, use a hexagon wrench to hold the stud.

- (b) Use the same procedure described above to the other side.

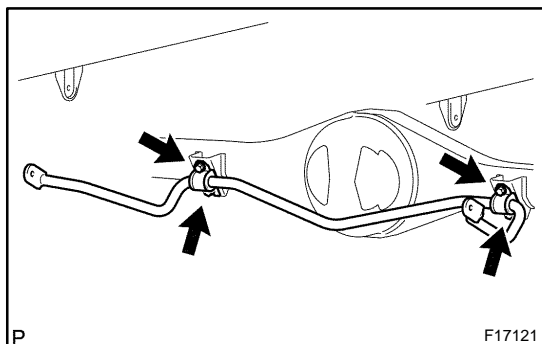

4. **REMOVE STABILIZER BAR FROM REAR AXLE HOUSING**
 - (a) Remove the 4 bolts and stabilizer bar with the bushings and brackets.
Torque: 29 N·m (296 kgf·cm, 21 ft·lbf)
 - (b) Remove the 2 brackets and 2 bushings from the stabilizer bar.