


CIRCUIT OPENING RELAY INSPECTION

SF1Z3-01

1. REMOVE CIRCUIT OPENING RELAY

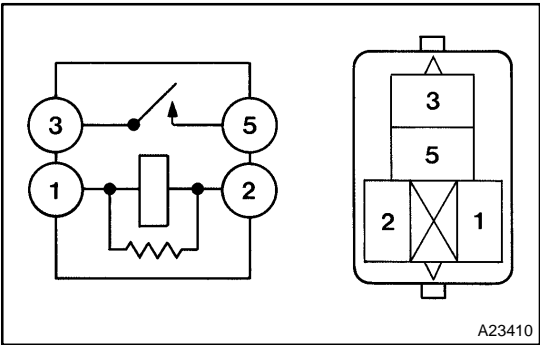

2. INSPECT CIRCUIT OPENING RELAY

- (a) Using an ohmmeter, check for continuity between each terminal.

Specified condition:

Terminal No.	Specified condition
1 – 2	Continuity
3 – 5	No continuity

- (b) Using an ohmmeter, check for continuity between terminals 3 and 5 when the battery voltage is applied across terminals 1 and 2.

Specified condition: Continuity

3. INSTALL CIRCUIT OPENING RELAY