


FUEL PRESSURE PULSATION DAMPER REMOVAL

SF1YL-01

1. PREVENT GASOLINE FROM SPILLING OUT
(See page [SF-1](#))
2. REMOVE V-BANK COVER

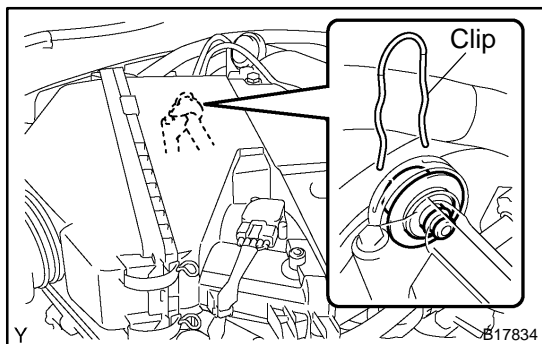

3. REMOVE FUEL PRESSURE PULSATION DAMPER
 - (a) Remove the clip.
 - (b) Pull out the fuel pressure pulsation damper from the fuel delivery pipe.