



INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- (a) Install the vacuum hose.
- (b) Apply a light coat of spindle oil or gasoline to a new O-ring and install it to the fuel pressure regulator.
- (c) Install the fuel pressure regulator with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in.·lbf)

2. CONNECT FUEL PIPE NO.2

3. INSTALL AIR CLEANER (See page [EM-89](#))

4. INSTALL V-BANK COVER

5. CHECK FOR FUEL LEAKS