


FUEL PRESSURE REGULATOR REMOVAL

SF1YD-01

1. PREVENT GASOLINE FROM SPILLING OUT
(See page [SF-1](#))
2. REMOVE V-BANK COVER
3. REMOVE AIR CLEANER (See page [EM-62](#))
4. DISCONNECT FUEL PIPE NO.2

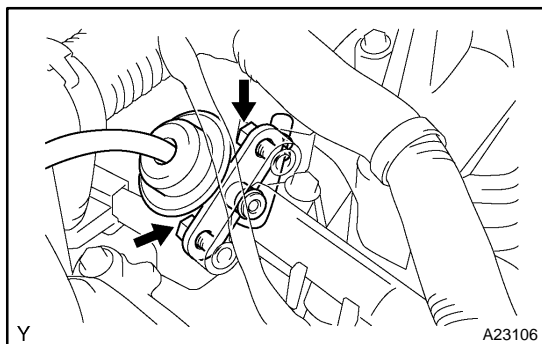

5. REMOVE FUEL PRESSURE REGULATOR
 - (a) Remove the 2 bolts and fuel pressure regulator.
 - (b) Remove the vacuum hose.