



SF1Z6-01

FUEL PUMP RESISTOR INSPECTION

INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between terminals.

Resistance: 0.70 to 0.76 Ω at 20°C (68°F)