


REASSEMBLY


1. REMOVE FUEL SUCTION PLATE NO.2

- (a) Install the 2 springs and suction plate No.2 to the suction plate No.1.
- (b) Using needle-nose pliers, install 2 new E-rings to the suction plate No.2.

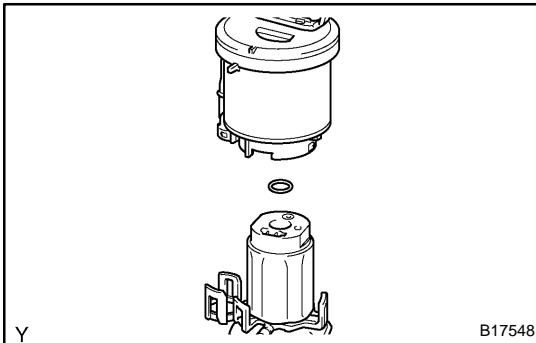


2. INSTALL FUEL PUMP


- (a) Apply a light coat of gasoline or spindle oil to a new O-ring, and install it to the fuel pump.

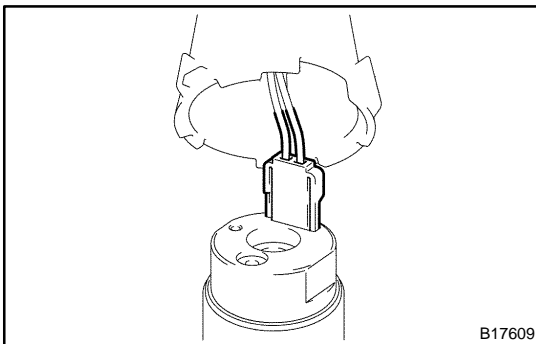

- (b) Connect the fuel pump harness connector to the fuel pump.

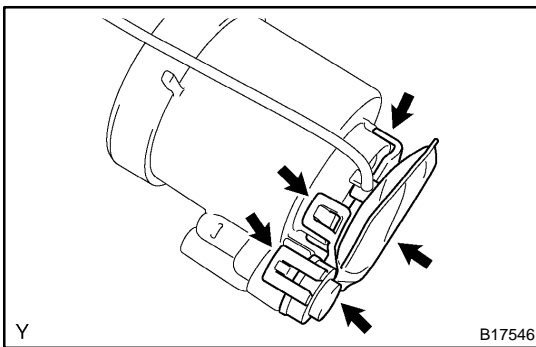


- (c) Install the fuel pump with the suction filter to the fuel filter.

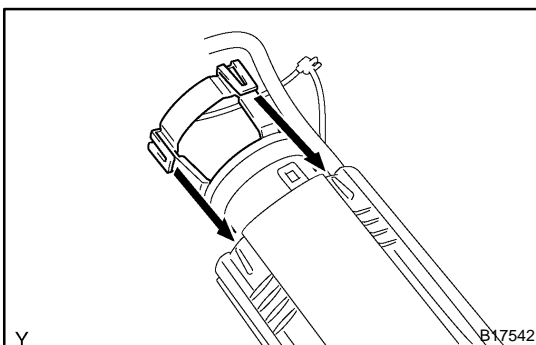


3. INSTALL FUEL FILTER

Install the fuel filter to the fuel sub-tank.

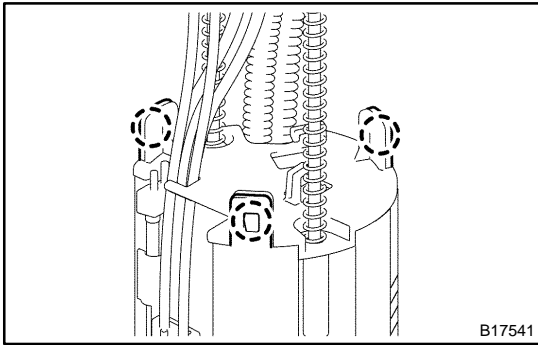


4. INSTALL FUEL SUB-TANK


- (a) Connect the fuel suction plate No.2 to the fuel sub-tank with the 3 snap-claws engaged.

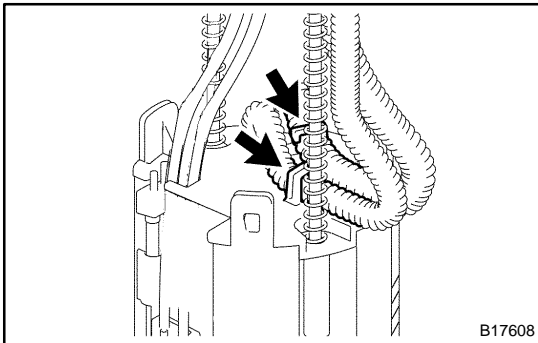


- (b) Connect the 2 tubes to the tube clamps.

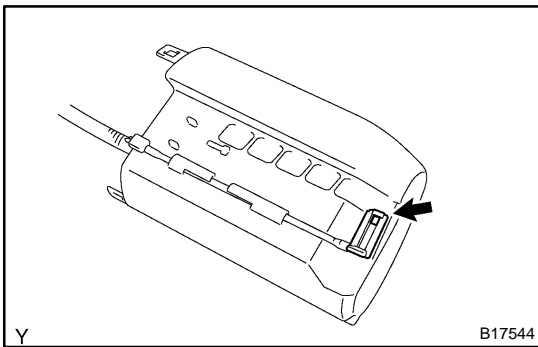

- (c) Connect the suction filter hose to the fuel sub-tank.

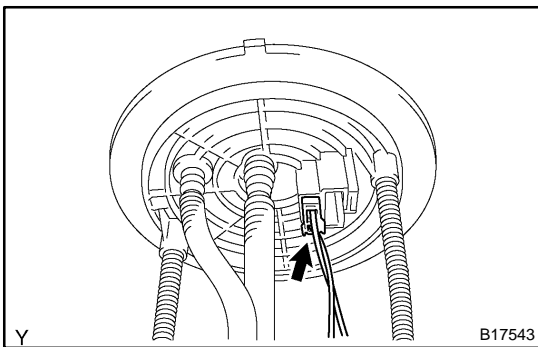


- (d) Connect the fuel pump harness connector to the fuel suction plate No.1.

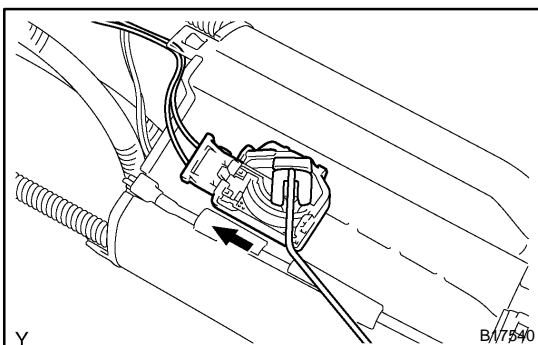

5. INSTALL FUEL SENDER GAUGE

- (a) Install the fuel sender gauge to the fuel suction support.

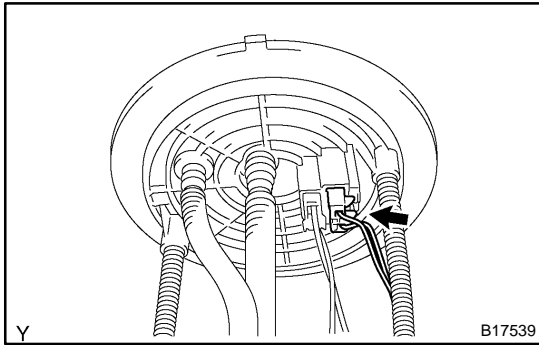

- (b) Connect the sender gauge connector to the fuel suction plate No.1.