



INSPECTION

1. INSPECT KNOCK SENSOR

Using an ohmmeter, measure the resistance between terminals.

Resistance: 120 to 280 k Ω at 20 °C (68 °F)

HINT:

If the resistance is not as specified, replace the sensor.