


ACOUSTIC CONTROL INDUCTION SYSTEM (ACIS)

SF0PD-04


ON-VEHICLE INSPECTION

INSPECT INTAKE AIR CONTROL VALVE OPERATION

(a) Start the engine.

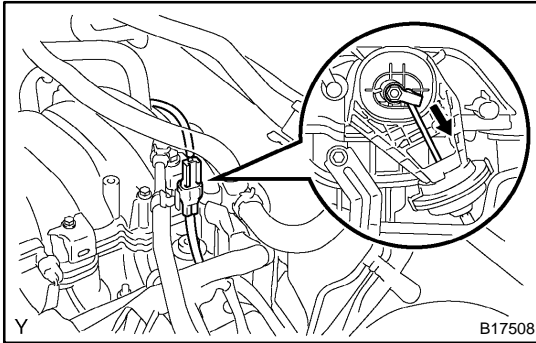

(b) While the engine idling, check that the actuator rod moves.

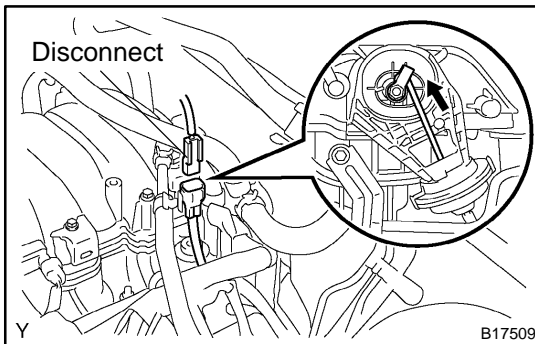

(c) Disconnect the VSV connector, and check that the actuator rod is returned.

If the operation is not as specified, inspect the intake air control valve, VSV and ECM.