


# CAMSHAFT TIMING OIL CONTROL VALVE

## ON-VEHICLE INSPECTION

SF0P8-03

- (a) Remove the throttle body cover.
- (b) Remove the intake air connector.
- (c) Disconnect the oil control valve connector.

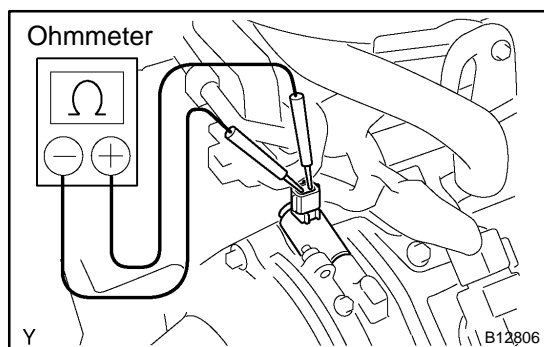

- (d) Using an ohmmeter, measure the resistance between the terminals.

**Resistance: 6.9 to 7.9  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the valve.

- (e) Reconnect the oil control valve connector.
- (f) Reinstall the intake air connector.
- (g) Reinstall the throttle body cover.