


REMOVAL

1. REMOVE THROTTLE BODY COVER
2. REMOVE INTAKE AIR CONNECTOR

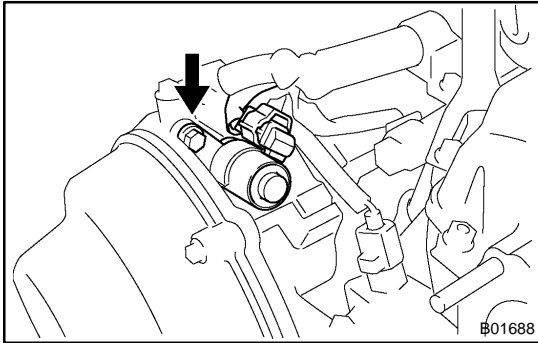

3. REMOVE CAMSHAFT TIMING OIL CONTROL VALVE
 - (a) Disconnect the 2 camshaft oil control valve connectors.
 - (b) Remove the bolt, camshaft oil control valve and O-ring.
Torque: 7.5 N·m (76 kgf·cm, 66 in.-lbf)
 - (c) Remove the O-ring from the each camshaft oil control valve.

HINT:

At the time of installation, please refer to the following items.
Use a new O-rings.