



## REMOVAL

1. REMOVE THROTTLE BODY COVER
2. DRAIN ENGINE COOLANT
3. REMOVE INTAKE AIR CONNECTOR
4. REMOVE THROTTLE BODY
  - (a) Disconnect the throttle control connector.

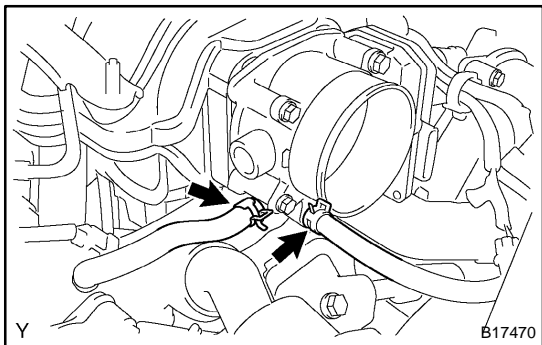

- (b) Disconnect the 2 water bypass hoses from the throttle body.

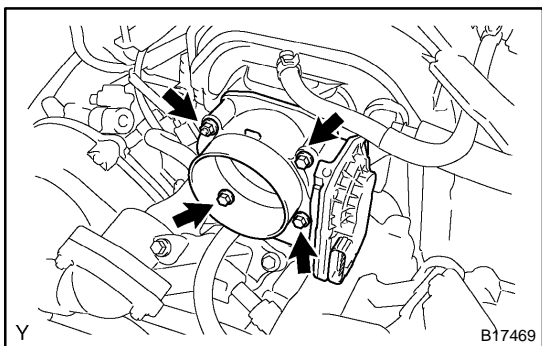

- (c) Remove the nut and 3 bolts, and remove the throttle body from the intake manifold.