



# INSPECTION

## INSPECT SWITCH

Measure the resistance between the terminals as shown.

**Standard:**

Switch Condition	Specified Condition
Pushed	Below 1 Ω
Free	10 k Ω or higher

If the result is not as specified, replace the switch.