
ALPHABETICAL INDEX

A

	Page
ABBREVIATIONS USED IN THIS MANUAL (TERMS)	IN-34
ABS ACTUATOR	BR-53
AIR CONDITIONER AMPLIFIER	AC-77
AIR CONDITIONER UNIT	AC-24
AIR CONDITIONING (PREPARATION)	PP-47
AIR CONDITIONING (SERVICE SPECIFICATIONS)	SS-23
AIR CONDITIONING SYSTEM	AC-1
AIR INLET SERVOMOTOR	AC-61
AIR REFINER FILTER	AC-97
AIRBAG SENSOR ASSEMBLY	RS-52
ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD) (DIAGNOSTICS)	DI-58
AUDIO SYSTEM	BE-124
AUTOMATIC TRANSAXLE (DIAGNOSTICS)	DI-1
AUTOMATIC TRANSAXLE (PREPARATION)	PP-11
AUTOMATIC TRANSAXLE (SERVICE SPECIFICATIONS)	SS-9
AUTOMATIC TRANSAXLE SYSTEM	AX-1
AUTOMATIC TRANSAXLE UNIT	AX-23

B

BACK DOOR	BO-26
BACK DOOR GLASS	BO-63
BACK-UP LIGHT SYSTEM	BE-39
BLOWER MOTOR	AC-58
BLOWER RESISTOR	AC-60
BODY (PREPARATION)	PP-42
BODY (SERVICE SPECIFICATIONS)	SS-21
BODY ELECTRICAL (PREPARATION)	PP-38
BODY ELECTRICAL (SERVICE SPECIFICATIONS)	SS-20
BODY ELECTRICAL SYSTEM	BE-1
BODY OUTSIDE MOULDING	BO-42
BRAKE (PREPARATION)	PP-23
BRAKE (SERVICE SPECIFICATIONS)	SS-14
BRAKE BOOSTER ASSEMBLY	BR-14
BRAKE FLUID	BR-4
BRAKE MASTER CYLINDER	BR-10
BRAKE PEDAL	BR-6
BRAKE SYSTEM	BR-1

C

CIRCUIT INSPECTION (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-69
CIRCUIT INSPECTION (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-22
CIRCUIT INSPECTION (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-250
CIRCUIT INSPECTION (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-114
CLIP	BO-1
CLOCK	BE-154
CLUTCH (PREPARATION)	PP-1
CLUTCH (SERVICE SPECIFICATIONS)	SS-4
CLUTCH MASTER CYLINDER	CL-4
CLUTCH PEDAL	CL-2
CLUTCH RELEASE CYLINDER	CL-9

CLUTCH UNIT	CL-14
COIL SPRING AND REAR SHOCK ABSORBER	SA-46
COMBINATION METER	BE-48
COMPRESSOR AND MAGNETIC CLUTCH	AC-43
CONDENSER	AC-50
CONDENSER FAN	AC-70
CONDENSER FAN RESISTOR	AC-76
COOLING FAN RELAY	AC-69
CUSTOMER PROBLEM ANALYSIS CHECK (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-59
CUSTOMER PROBLEM ANALYSIS CHECK (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-3
CUSTOMER PROBLEM ANALYSIS CHECK (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-242
CUSTOMER PROBLEM ANALYSIS CHECK (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-101

D

DEFOGGER SYSTEM	BE-65
DIAGNOSTIC TROUBLE CODE CHART (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-63
DIAGNOSTIC TROUBLE CODE CHART (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-16
DIAGNOSTIC TROUBLE CODE CHART (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-246
DIAGNOSTIC TROUBLE CODE CHART (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-108
DIFFERENTIAL CASE	MX-38
DIFFERENTIAL OIL SEAL	AX-10
DIRECT CLUTCH SPEED SENSOR	AX-4
DOUBLE LOCKING SYSTEM	BE-95
DRIVE BELT	AC-16
DRIVE BELT	SR-3

E

ENGINE IMMOBILISER SYSTEM (DIAGNOSTICS)	DI-241
EXPANSION VALVE	AC-56

F

FLOOR SHIFT ASSEMBLY	AX-13
FOG LIGHT SYSTEM	BE-30
FOR ALL OF VEHICLES	IN-10
FRONT AIRBAG SENSOR	RS-57
FRONT AXLE HUB	SA-8
FRONT BRAKE CALIPER	BR-23
FRONT BRAKE PAD	BR-20
FRONT BUMPER	BO-4
FRONT DOOR	BO-11
FRONT DRIVE SHAFT	SA-16
FRONT LOWER SUSPENSION ARM	SA-31
FRONT PASSENGER AIRBAG ASSEMBLY	RS-28
FRONT SEAT	BO-103
FRONT SHOCK ABSORBER	SA-24
FRONT SPEED SENSOR	BR-58
FRONT STABILIZER BAR	SA-35
FRONT WHEEL ALIGNMENT	SA-4

	Page
FRONT WHEEL HUB BOLT	SA-15
FRONT WIPER AND WASHER	BO-32
FUEL TANK AND LINE	BO-137

G

GENERAL INFORMATION (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-18
GENERAL INFORMATION (HOW TO USE THIS MANUAL)	IN-1
GENERAL INFORMATION (REPAIR INSTRUCTIONS)	IN-4

H

HEADLIGHT AND TAILLIGHT SYSTEM	BE-17
HEADLIGHT BEAM LEVEL CONTROL SYSTEM	BE-28
HEATER CONTROL ASSEMBLY	AC-84
HEATER CONTROL ASSEMBLY (Center Cluster Integration)	AC-92
HEATER MAIN RELAY	AC-66
HEATER SUB RELAY	AC-67
HEATER UNIT	AC-35
HOOD	BO-10
HOW TO PROCEED WITH TROUBLESHOOTING (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-58
HOW TO PROCEED WITH TROUBLESHOOTING (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-1
HOW TO PROCEED WITH TROUBLESHOOTING (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-241
HOW TO PROCEED WITH TROUBLESHOOTING (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-19
HOW TO PROCEED WITH TROUBLESHOOTING (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-100
HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS	IN-18
HOW TO USE THE DIAGNOSTIC CHART AND INSPECTION PROCEDURE (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-29
HOW TO USE THIS MANUAL	IN-1

I

IDENTIFICATION INFORMATION	IN-3
IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH	BE-15
INPUT SHAFT	MX-23
INSTRUMENT PANEL	BO-83
INTERIOR LIGHT SYSTEM	BE-36

L

LOAD SENSING PROPORTIONING VALVE (LSPV)	BR-48
--	-------

M

MAGNETIC CLUTCH RELAY	AC-68
MANIFOLD GAUGE SET	AC-19
MANUAL STEERING GEAR	SR-34

	Page
MANUAL TRANSAXLE (PREPARATION)	PP-5
MANUAL TRANSAXLE (SERVICE SPECIFICATIONS)	SS-6
MANUAL TRANSAXLE ASSEMBLY	MX-9
MANUAL TRANSAXLE UNIT	MX-2

N

NEUTRAL START SWITCH	AX-5
----------------------------	------

O

OUTPUT SHAFT	MX-30
--------------------	-------

P

PARKING BRAKE	BR-43
PARKING BRAKE LEVER	BR-9
PARTS LOCATION (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-65
PARTS LOCATION (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-17
PARTS LOCATION (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-247
PARTS LOCATION (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-110
POWER DOOR LOCK CONTROL SYSTEM	BE-86
POWER MIRROR CONTROL SYSTEM	BE-118
POWER SOURCE	BE-11
POWER STEERING FLUID	SR-5
POWER STEERING GEAR	SR-47
POWER STEERING VANE PUMP	SR-23
POWER WINDOW CONTROL SYSTEM	BE-68
PRE-CHECK (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-60
PRE-CHECK (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-4
PRE-CHECK (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-243
PRE-CHECK (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-102
PRECAUTION (FOR ALL OF VEHICLES)	IN-10
PRESSURE SWITCH	AC-63
PROBLEM SYMPTOMS TABLE (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-68
PROBLEM SYMPTOMS TABLE (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-19
PROBLEM SYMPTOMS TABLE (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-249
PROBLEM SYMPTOMS TABLE (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-113

Q

QUARTER WINDOW GLASS	BO-56
----------------------------	-------

R

	Page
REAR AXLE BEAM	SA-51
REAR AXLE HUB	SA-40
REAR BRAKE CALIPER	BR-37
REAR BRAKE PAD	BR-34
REAR BUMPER	BO-5
REAR COMBINATION LIGHT	BO-6
REAR DOOR	BO-19
REAR DRUM BRAKE	BR-29
REAR SEAT (Center)	BO-116
REAR SEAT (Outer Side)	BO-109
REAR SPEED SENSOR	BR-61
REAR WHEEL ALIGNMENT	SA-7
REAR WHEEL HUB BOLT	SA-45
REAR WIPER AND WASHER	BO-37
REFRIGERANT LINE	AC-21
REPAIR INSTRUCTIONS	IN-4
ROOF DRIP SIDE FINISH MOULDING	BO-46
ROOF HEADLINING	BO-96
ROOF RAIL	BO-135

S

SEAT BELT	BO-121
SEAT BELT PRETENSIONER	BO-124
SEAT HEATER SYSTEM	BE-121
SHIFT AND SELECT LEVER SHAFT	MX-37
SHIFT LEVER AND CONTROL CABLE	MX-44
SHIFT LOCK SYSTEM	AX-11
SIDE AIRBAG ASSEMBLY	RS-39
SIDE AIRBAG SENSOR ASSEMBLY	RS-63
SLIDING ROOF	BO-75
SLIDING ROOF SYSTEM	BE-114
SPOILER	BO-136
SRS AIRBAG	BO-3
SRS AIRBAG	RS-1
STANDARD BOLT (SERVICE SPECIFICATIONS)	SS-1
STEERING (PREPARATION)	PP-27
STEERING (SERVICE SPECIFICATIONS)	SS-16
STEERING SYSTEM	SR-1
STEERING WHEEL	SR-9
STEERING WHEEL PAD AND SPIRAL CABLE	RS-13
STOP LIGHT SYSTEM	BE-41
SUPPLEMENTAL RESTRAINT SYSTEM (DIAGNOSTICS)	DI-100
SUPPLEMENTAL RESTRAINT SYSTEM (PREPARATION)	PP-35
SUPPLEMENTAL RESTRAINT SYSTEM (SERVICE SPECIFICATIONS)	SS-19
SUSPENSION AND AXLE (PREPARATION)	PP-16
SUSPENSION AND AXLE (SERVICE SPECIFICATIONS)	SS-12

T

TERMINALS OF ECU (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)) (DIAGNOSTICS)	DI-67
TERMINALS OF ECU (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-18
TERMINALS OF ECU (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-248
TERMINALS OF ECU (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-111

TERMS	IN-34
THERMISTOR	AC-62
TILT MOON ROOF	BO-69
TILT STEERING COLUMN	SR-10
TIRE AND WHEEL	SA-2
TORQUE CONVERTER AND DRIVE PLATE	AX-31
TROUBLESHOOTING	AC-14
TROUBLESHOOTING	BE-2
TROUBLESHOOTING	BR-2
TROUBLESHOOTING	CL-1
TROUBLESHOOTING	MX-1
TROUBLESHOOTING	SA-1
TROUBLESHOOTING	SR-2
TURN SIGNAL AND HAZARD WARNING SYSTEM	BE-33

V

VALVE BODY ASSEMBLY	AX-6
VEHICLE IDENTIFICATION AND ENGINE SERIAL NUMBER (IDENTIFICATION INFORMATION)	IN-3
VEHICLE LIFT AND SUPPORT LOCATIONS (REPAIR INSTRUCTIONS)	IN-8
VEHICLE SPEED SENSOR	AX-3

W

WATER TEMPERATURE SWITCH	AC-96
WINDSHIELD	BO-49
WIPER AND WASHER SYSTEM	BE-43
WIRE HARNESS AND CONNECTOR	RS-69
WIRELESS DOOR LOCK CONTROL SYSTEM	BE-99

