
ALPHABETICAL INDEX

A

	Page
ABBREVIATIONS USED IN THIS MANUAL (TERMS)	IN-37
ABS ACTUATOR (1ND-TV)	BR-21
AIR CONDITIONER UNIT	AC-7
AIR CONDITIONING (PREPARATION)	PP-18
AIR CONDITIONING (SERVICE SPECIFICATIONS)	SS-16
AIR CONDITIONING SYSTEM	AC-1
ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD) (1ND-TV) (DIAGNOSTICS)	DI-1

B

BODY ELECTRICAL (PREPARATION)	PP-15
BODY ELECTRICAL (SERVICE SPECIFICATIONS)	SS-14
BRAKE (PREPARATION)	PP-8
BRAKE (SERVICE SPECIFICATIONS)	SS-9
BRAKE BOOSTER ASSEMBLY (1ND-TV)	BR-1

C

CIRCUIT INSPECTION (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD) (1ND-TV)) (DIAGNOSTICS)	DI-7
CIRCUIT INSPECTION (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-21
CLUTCH (PREPARATION)	PP-1
CLUTCH (SERVICE SPECIFICATIONS)	SS-4
CLUTCH ACCUMULATOR (1ND-TV)	CL-8
CLUTCH PEDAL (1ND-TV)	CL-1
CLUTCH RELEASE CYLINDER (1ND-TV)	CL-3
CLUTCH UNIT (1ND-TV)	CL-11
COMBINATION METER	BE-4
COMBUSTION TYPE POWER HEATER	AC-10
COMPRESSOR AND MAGNETIC CLUTCH	AC-25
CUSTOMER PROBLEM ANALYSIS CHECK (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-16

D

DIAGNOSTIC TROUBLE CODE CHART (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD) (1ND-TV)) (DIAGNOSTICS)	DI-5
DIAGNOSTIC TROUBLE CODE CHART (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-19
DRIVE BELT	AC-3
DRIVE BELT (1ND-TV)	SR-1

E

ENGINE IMMOBILISER SYSTEM (DIAGNOSTICS)	DI-15
-----------------------------------------------	-------

F

FOR ALL OF VEHICLES	IN-13
FRONT SPEED SENSOR	BR-26
FRONT WHEEL ALIGNMENT	SA-3

G

	Page
GENERAL INFORMATION (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-21
GENERAL INFORMATION (HOW TO USE THIS MANUAL)	IN-1
GENERAL INFORMATION (REPAIR INSTRUCTIONS)	IN-5

H

HOW TO PROCEED WITH TROUBLESHOOTING (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD) (1ND-TV)) (DIAGNOSTICS)	DI-1
HOW TO PROCEED WITH TROUBLESHOOTING (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-15
HOW TO PROCEED WITH TROUBLESHOOTING (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-22
HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS	IN-21
HOW TO USE THE DIAGNOSTIC CHART AND INSPECTION PROCEDURE (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-32
HOW TO USE THIS MANUAL	IN-1

I

IDENTIFICATION INFORMATION	IN-3
----------------------------------	------

L

LOAD SENSING PROPORTIONING VALVE (LSPV)	BR-19
-----------------------------------------------	-------

M

MANUAL STEERING GEAR (1ND-TV)	SR-24
MANUAL TRANSAXLE (C153) (PREPARATION)	PP-4
MANUAL TRANSAXLE (C153) (SERVICE SPECIFICATIONS)	SS-6
MANUAL TRANSAXLE UNIT (C153)	MX-1

P

POWER SOURCE	BE-1
POWER STEERING FLUID (1ND-TV)	SR-3
POWER STEERING GEAR (1ND-TV)	SR-30
POWER STEERING VANE PUMP (1ND-TV)	SR-13
PRE-CHECK (ANTI-LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD) (1ND-TV)) (DIAGNOSTICS)	DI-2
PRE-CHECK (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-17
PRECAUTION (FOR ALL OF VEHICLES)	IN-13

R

REAR WHEEL ALIGNMENT	SA-7
REFRIGERANT LINE	AC-6

ALPHABETICAL INDEX (R - V)

REPAIR INSTRUCTIONS	Page
	IN-5

S

STANDARD BOLT (SERVICE SPECIFICATIONS)	SS-1
STEERING (PREPARATION)	PP-11
STEERING (SERVICE SPECIFICATIONS)	SS-11
SUSPENSION AND AXLE (PREPARATION)	PP-7
SUSPENSION AND AXLE (SERVICE SPECIFICATIONS)	SS-7

T

TERMINALS OF ECU (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-20
TERMS	IN-37
TILT STEERING COLUMN (1ND-TV)	SR-6
TIRE AND WHEEL	SA-1
TROUBLESHOOTING	AC-2

V

VACUUM PUMP	BR-10
VEHICLE IDENTIFICATION AND ENGINE SERIAL NUMBER (IDENTIFICATION INFORMATION)	IN-3
VEHICLE LIFT AND SUPPORT LOCATIONS (REPAIR INSTRUCTIONS)	IN-9

