



F RELAY LOCATIONS


[Engine Compartment]

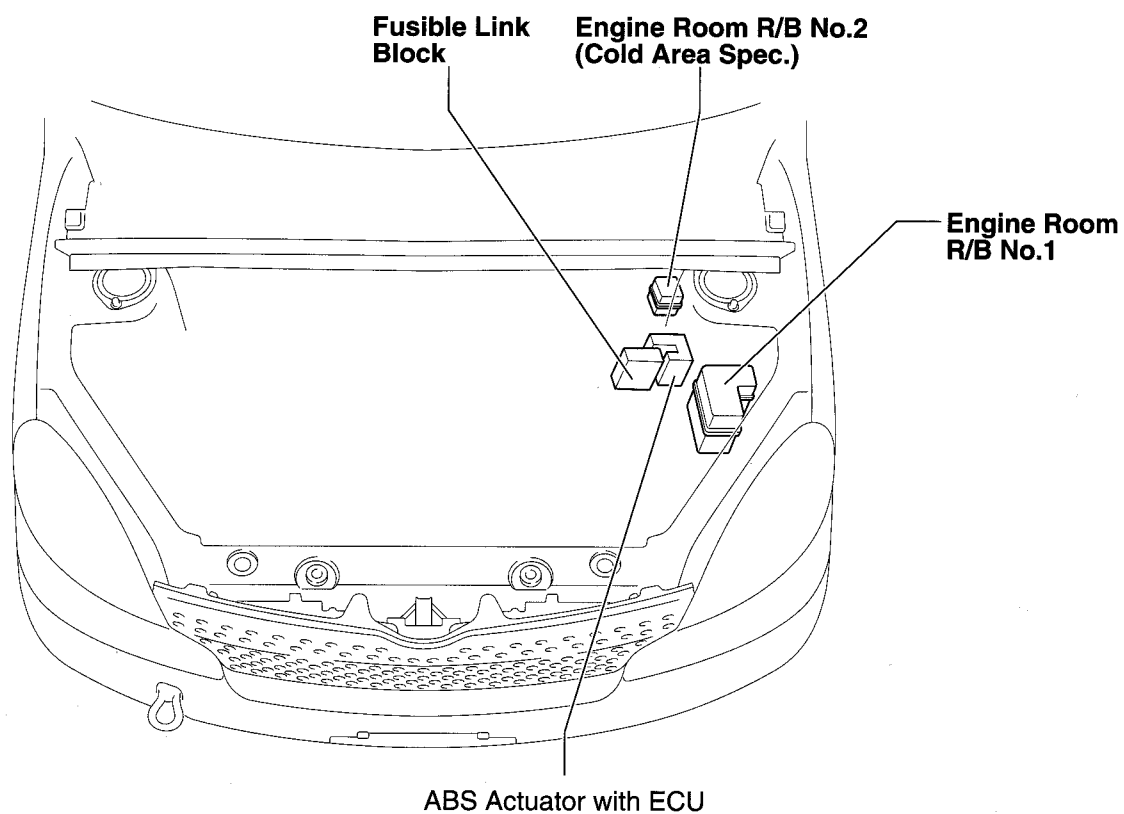


[Body]

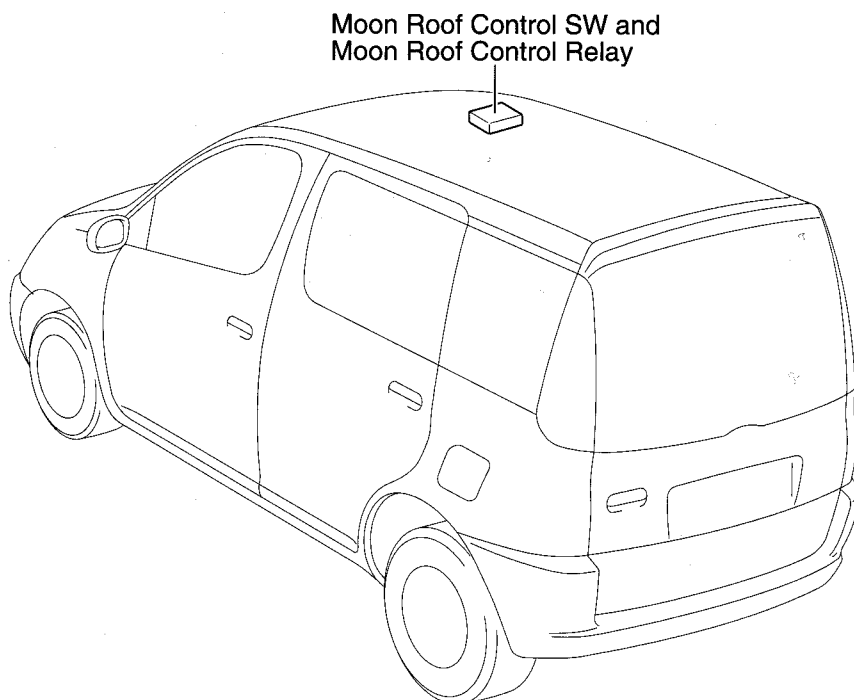

[Instrument Panel] (LHD)

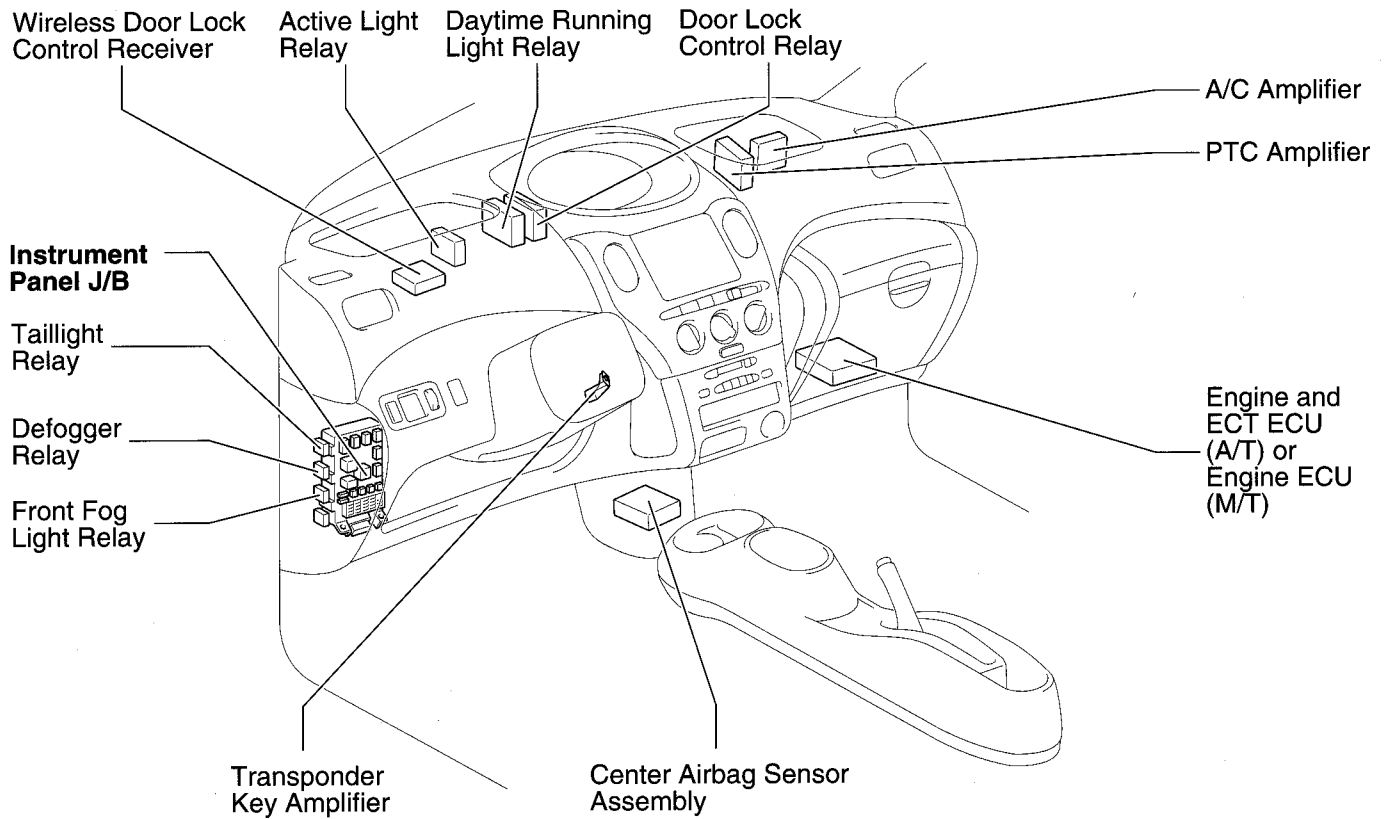


(RHD)

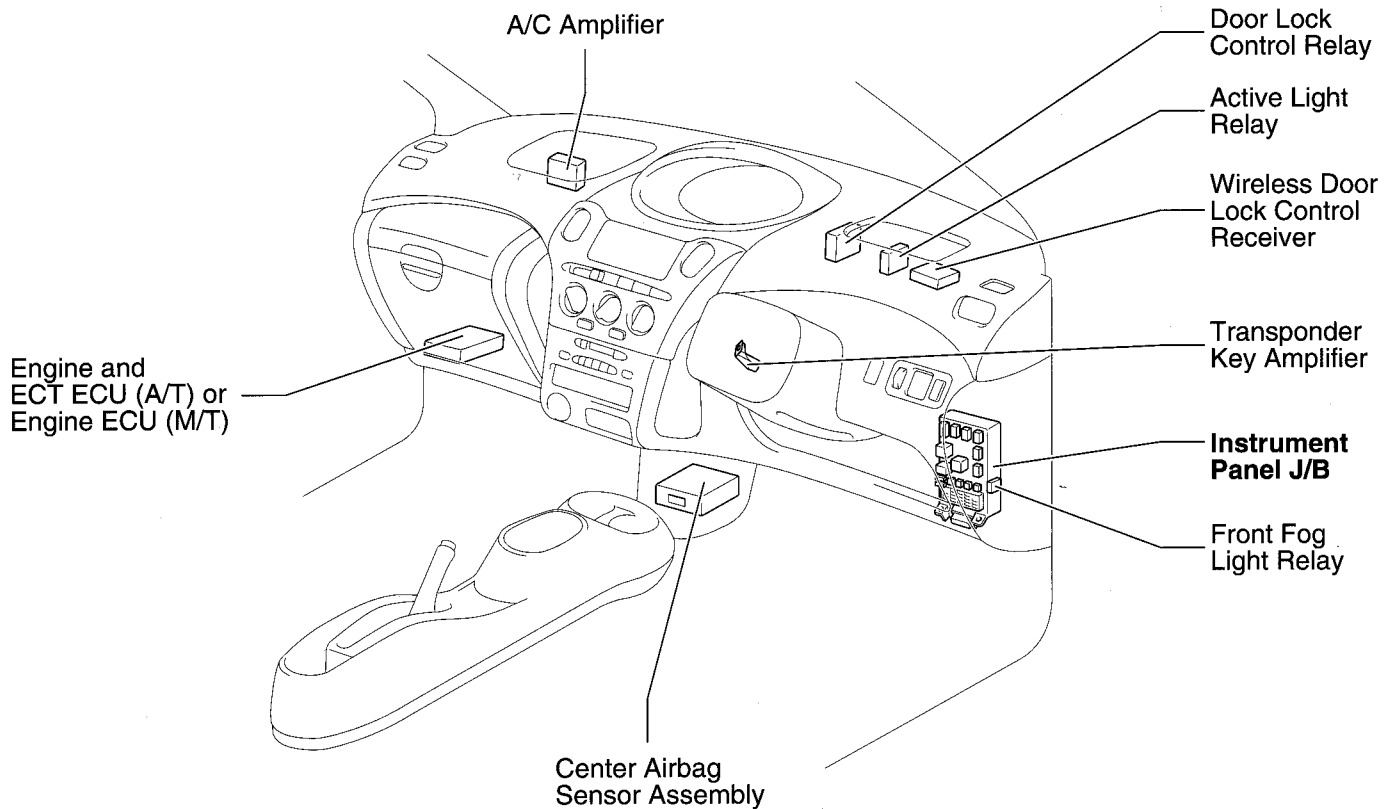


F RELAY LOCATIONS

① : Engine Room R/B No.1 Engine Compartment Left (See Page 76)


- *1 : H-LP LH (w/o Daytime Running Light)
H-LP LO LH (w/ Daytime Running Light)
- *2 : H-LP RH (w/o Daytime Running Light)
H-LP LO RH (w/ Daytime Running Light)
- *3 : w/o Daytime Running Light

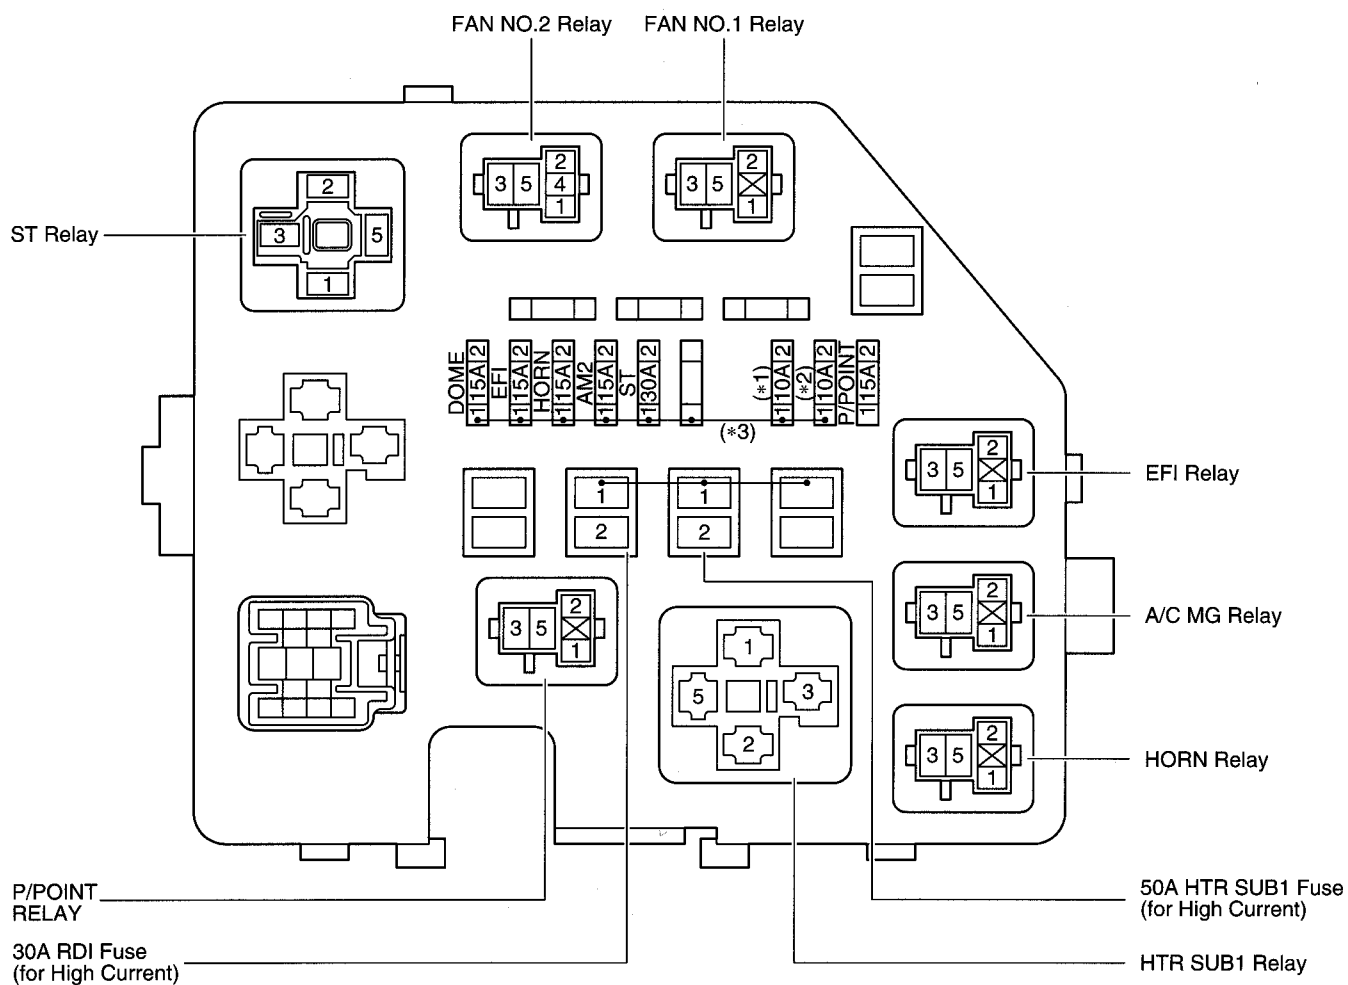

② : Engine Room R/B No.2 Engine Compartment Left (See Page 76)
[Cold Area Spec.]

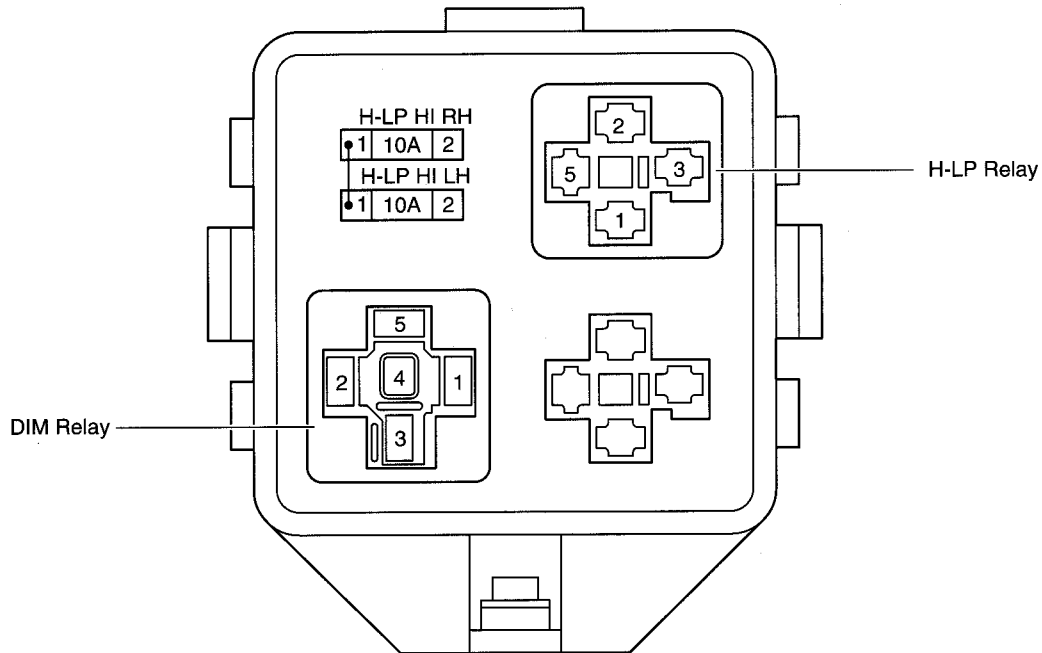

Fusible Link Block Engine Compartment Left (See Page 76)

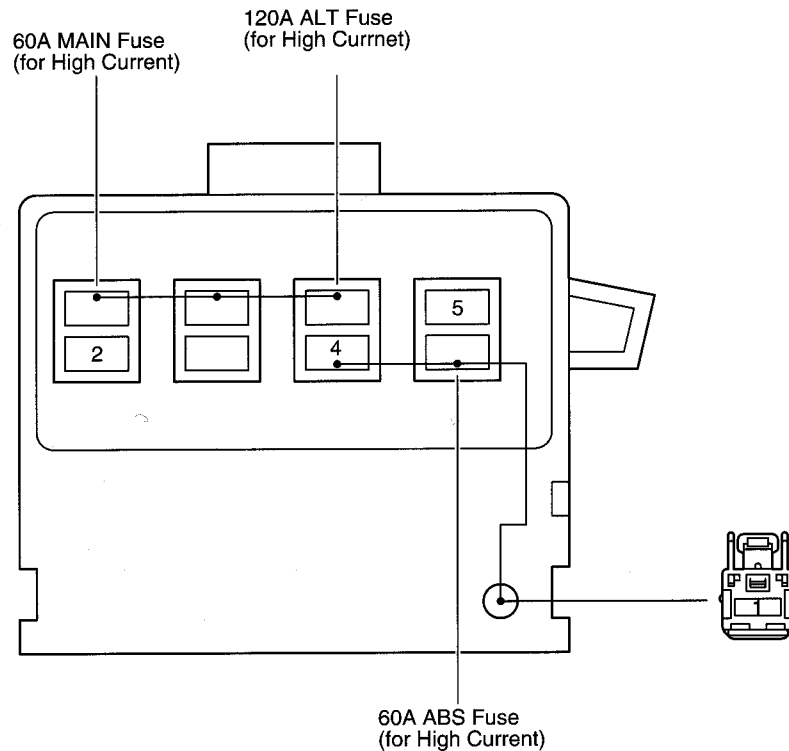



F RELAY LOCATIONS

 : Instrument Panel J/B

 : Lower Finish Panel (See Page 77)


*1:10A DEF RLY
(Cold Area Spec.)
20A DEF
(Except Cold Area Spec.)

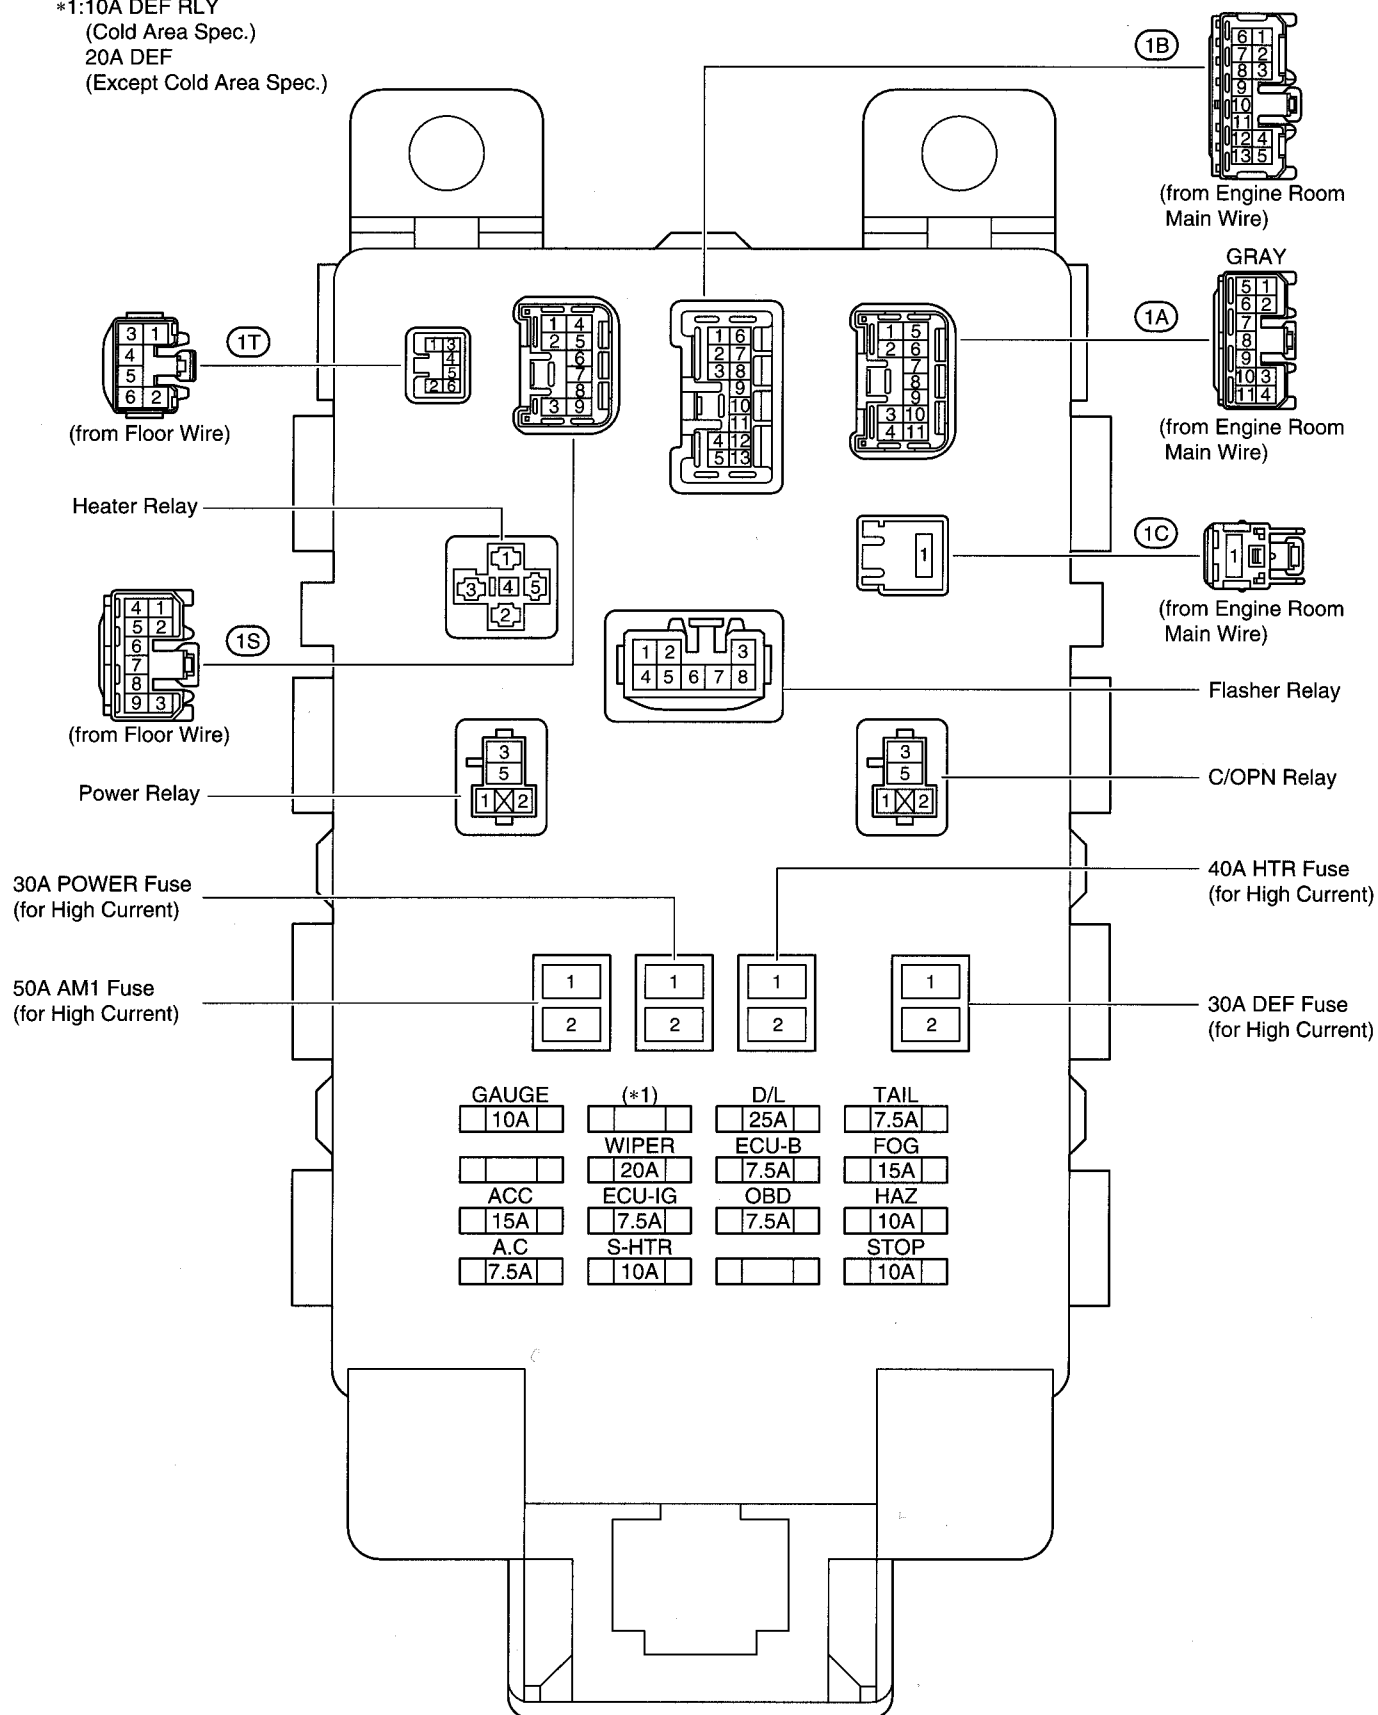

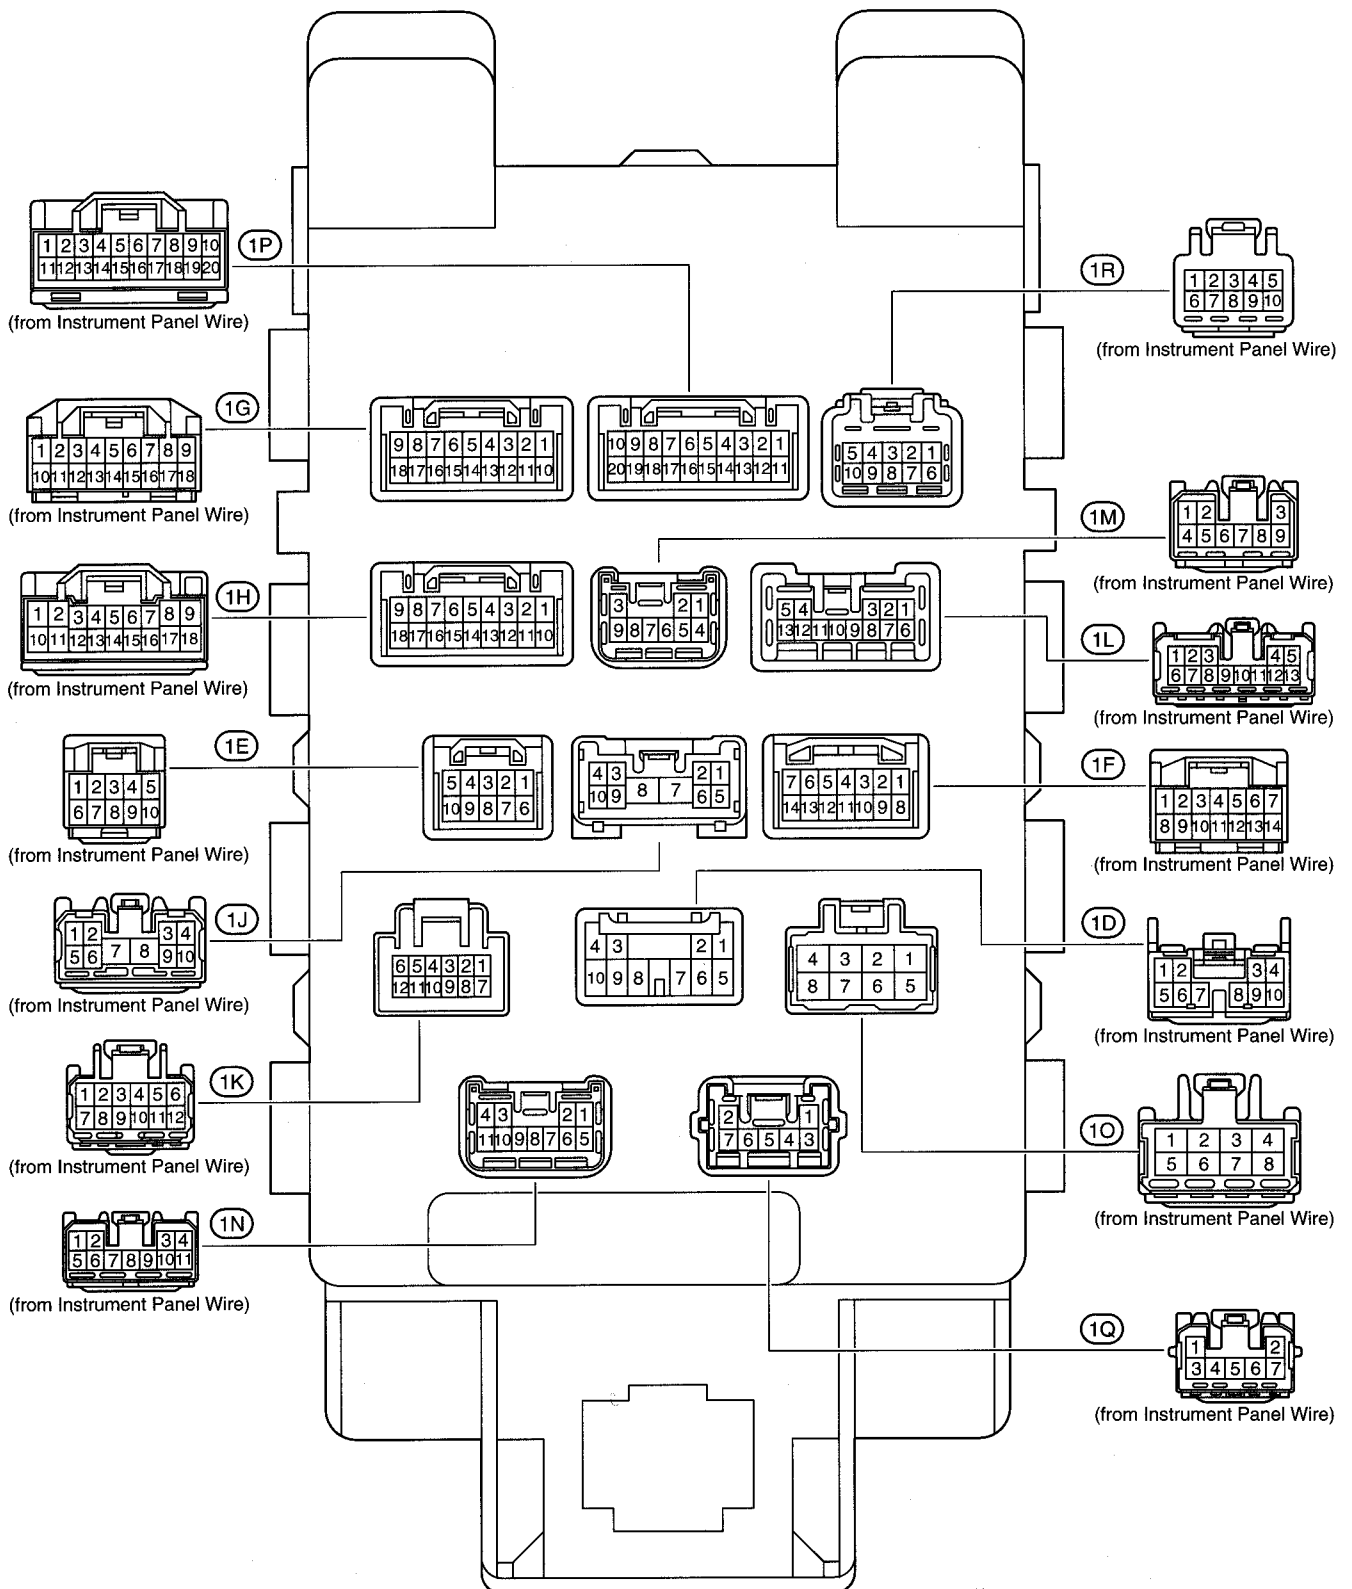

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

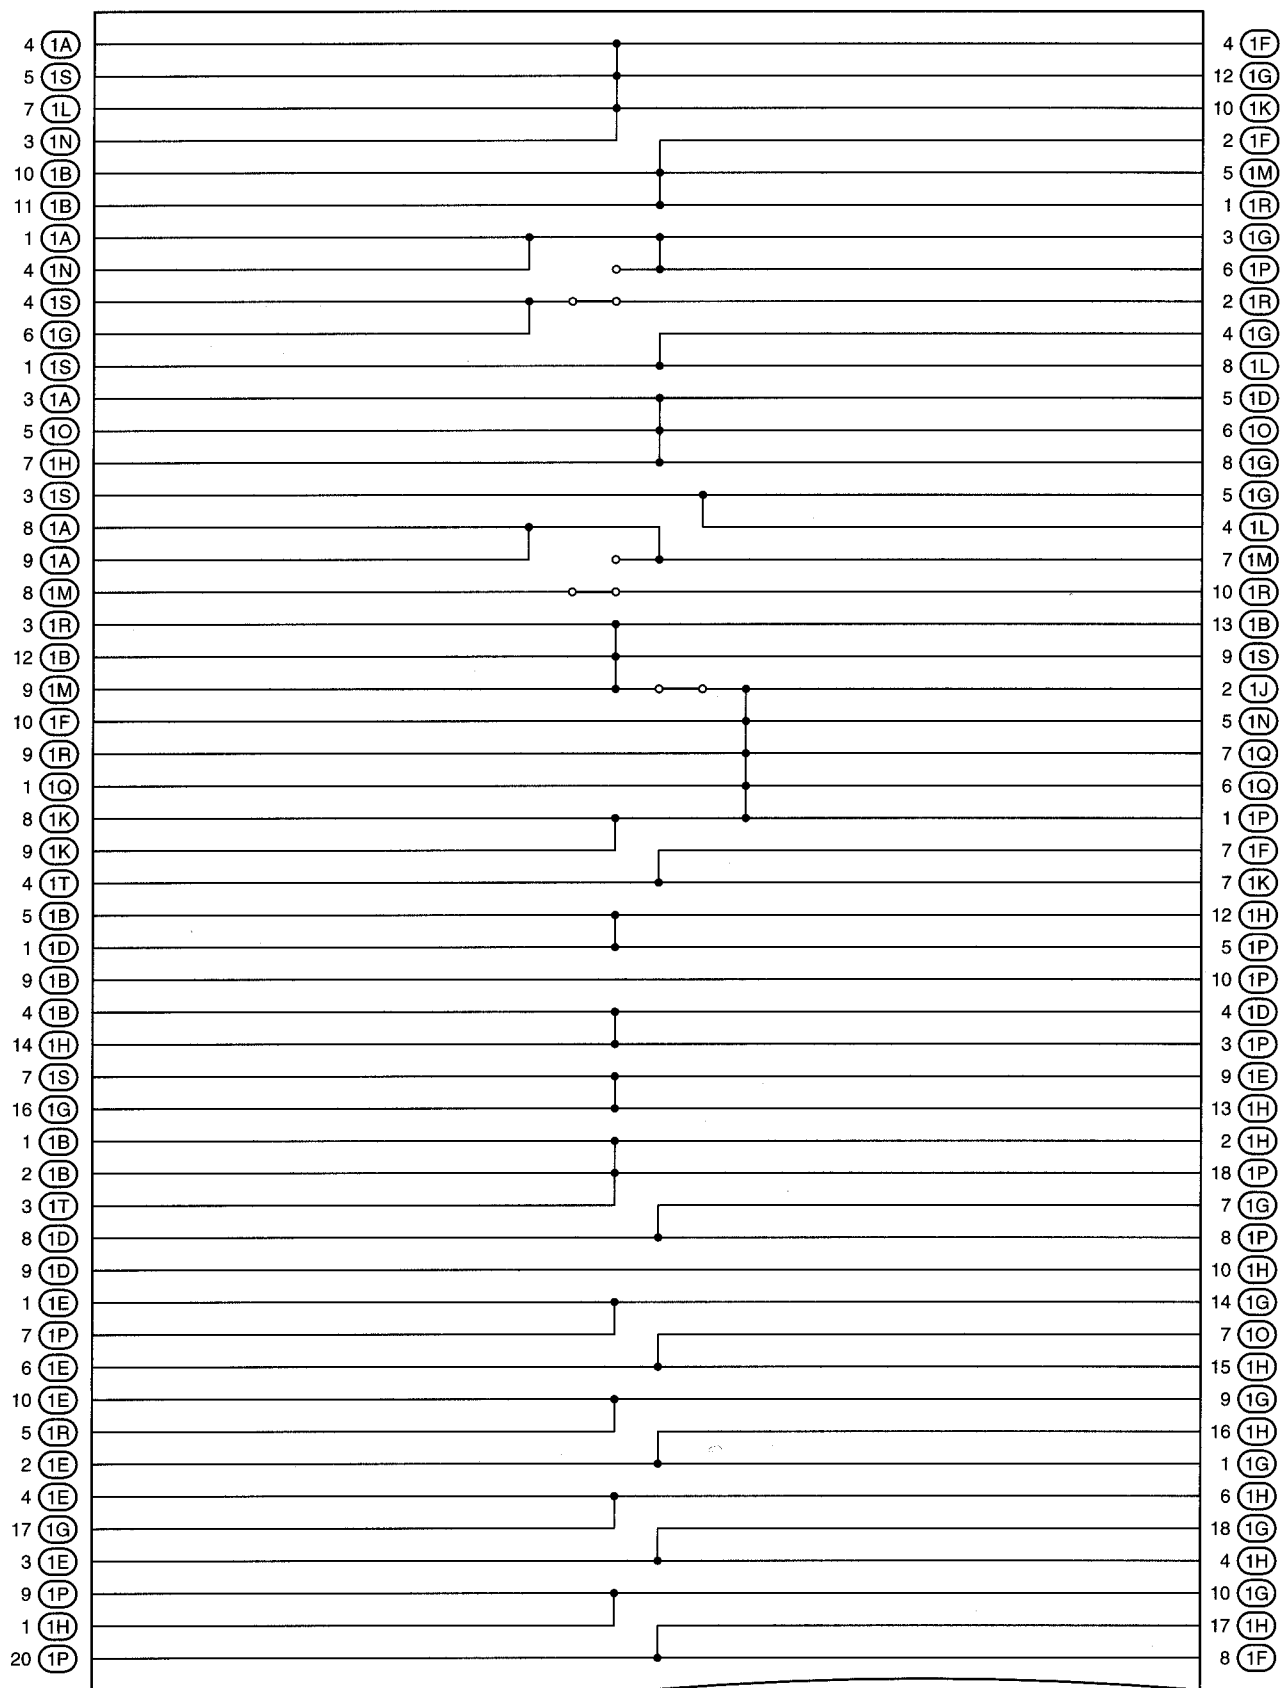

Cont. Next Page

*1 : Cold Area Spec.
 *2 : Except Cold Area Spec.

Cont'd

