


Pedal Free Play

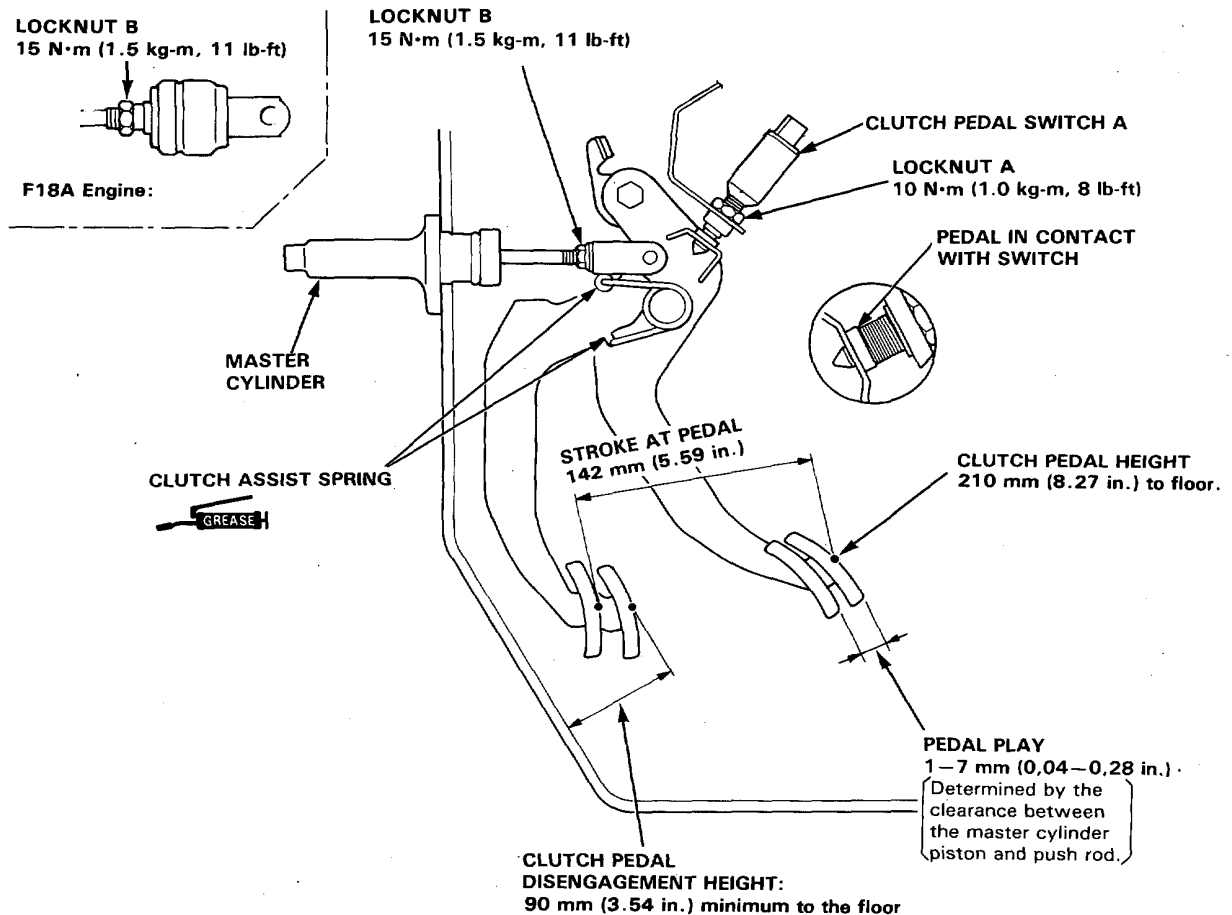

NOTE:

- The clutch is self-adjusting to compensate for wear.
- Total clutch pedal free play is 9–15 mm (0.35–0.59 in.).

CAUTION: If there is no clearance between the master cylinder piston and push rod, the release bearing is held against the diaphragm spring, resulting in slipping clutch or other faulty clutch operation.

1. Loosen locknut A, and back off the pedal switch until it no longer touches the clutch pedal.
2. Loosen locknut B, and turn the push rod in or out to get the specified stroke and height at the clutch pedal.

3. Tighten locknut B.
4. Screw in the clutch pedal switch until it contacts the clutch pedal.
5. Turn the switch in further 1/4–1/2 turn.
6. Tighten the locknut A.