


End Cover

Disassembly/Inspection

CAUTION: Remove and install the parts carefully to avoid damaging them.


END COVER

Inspect for cracks, grooving, scoring. Blow out all passages.

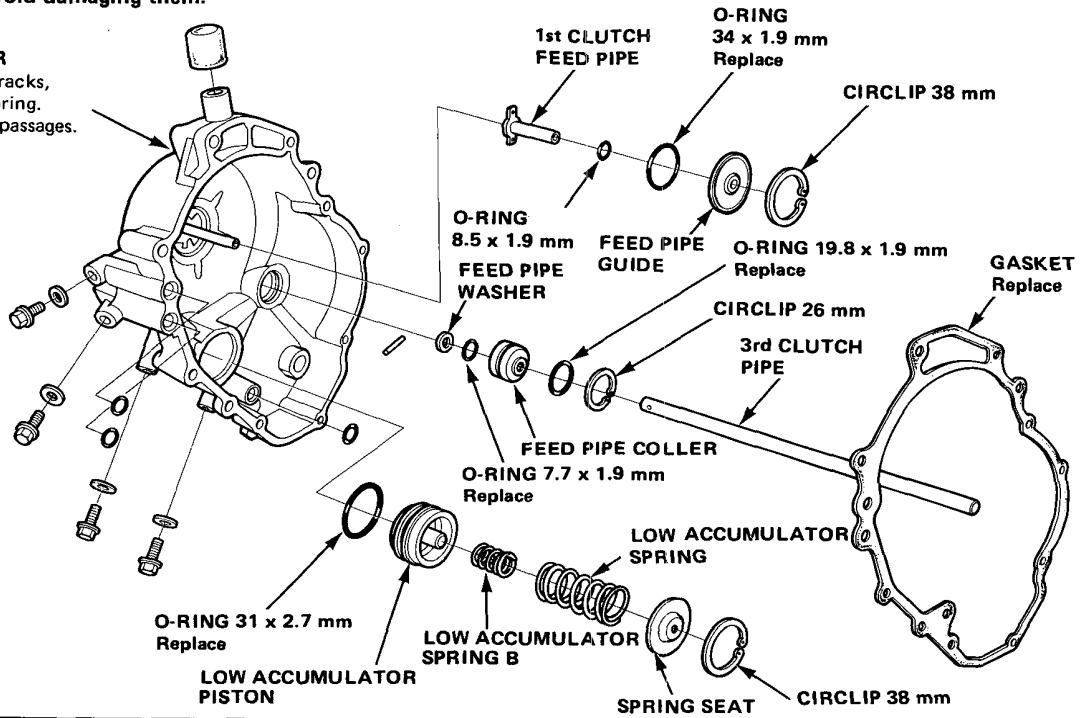

Reassembly

1. With feed pipes assembled, align the lugs on collars with the slots in end cover.

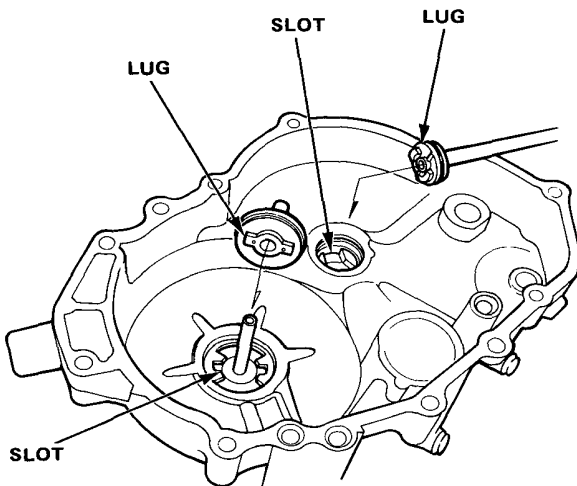

2. Install the feed pipes and low accumulator in the end cover with the snap rings.

