





5. Rear ABS Wheel Speed Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the rear ABS wheel speed sensor.

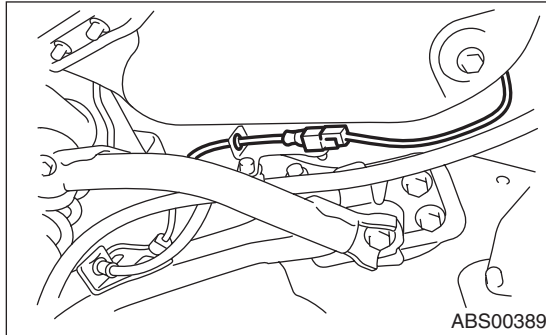


- 3) Remove the sensor harness bracket from the rear arm.

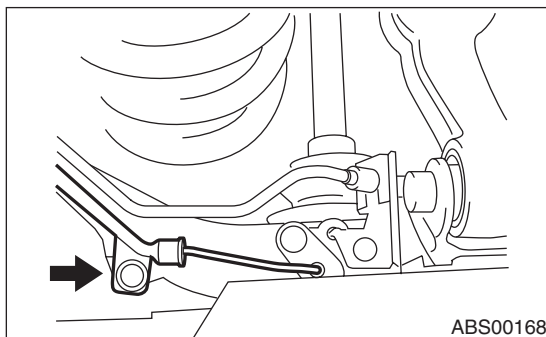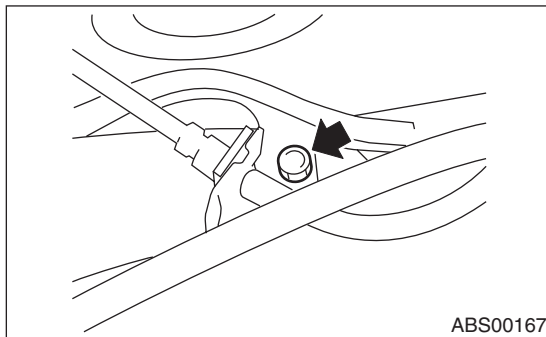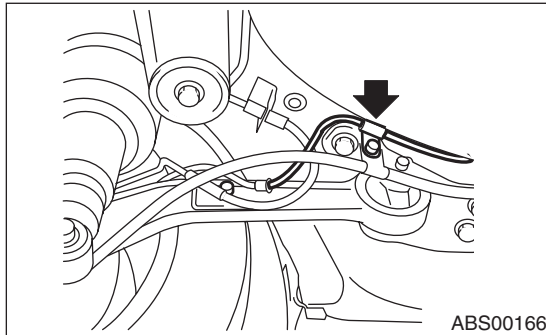

- 4) Remove the rear ABS wheel speed sensor from the rear arm.

CAUTION:

- Be careful not to damage the sensor.
- Do not apply excessive force to the sensor harness.

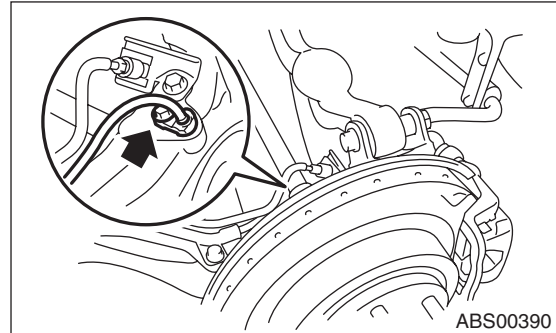

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to damage the sensor.

Tightening torque:

Sensor:

7.5 N·m (0.76 kgf·m, 5.5 ft·lb)

Bracket:

33 N·m (3.3 kgf·m, 24 ft·lb)

NOTE:

Check the identification (mark) on the harness to make sure there is no warpage. (RH: K5 (White), LH: K6 (Yellow))

C: INSPECTION

1. ABS WHEEL SPEED SENSOR

<Ref. to ABS-14, ABS WHEEL SPEED SENSOR, INSPECTION, Front ABS Wheel Speed Sensor.>