


### 3. Skid Control ECU

#### VSC

Based on the 4 different sensor signals received from the speed sensors, yaw rate & deceleration sensors and steering angle sensor, the skid control ECU calculates the vehicle condition.

If a strong front wheel skid or rear wheel skid tendency is created during an emergency avoidance maneuver or cornering, and the skid control ECU determines that the amount of vehicle condition exceeds a prescribed value, it controls the engine torque through throttle and the brake fluid pressure according to the amount of needed to control the vehicle.

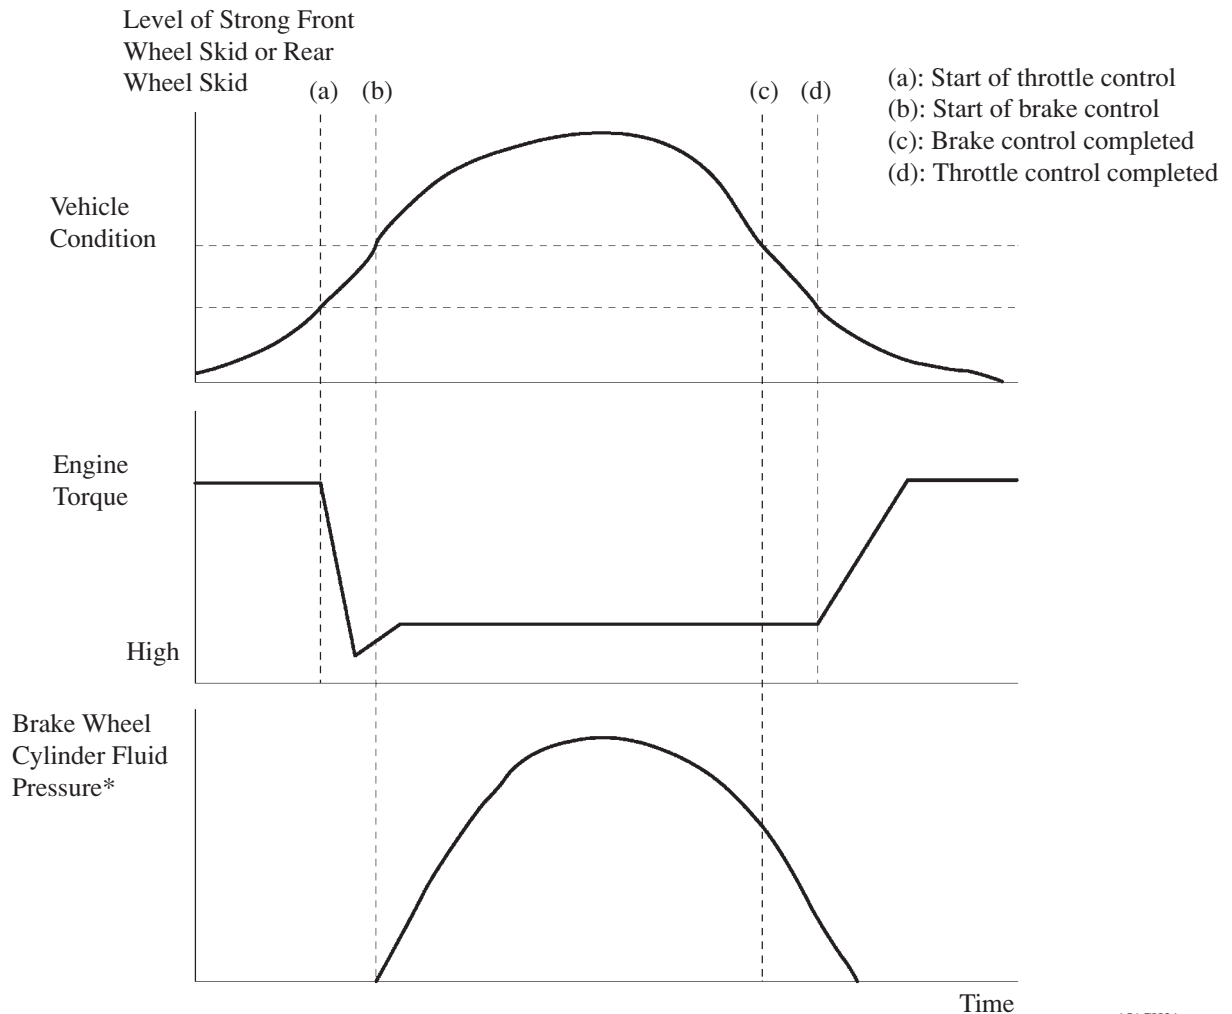

\*: The wheel cylinder that activates varies depending on the condition of the vehicle.

#### Initial Check

Each time the ignition switch is turned ON, and the vehicle reaches approximately speed of 6 km/h (4 mph) or more, the skid control ECU performs the initial check.

The functions of each solenoid valve and pump motor in the brake actuator are checked in order.

## Self-Diagnosis

- If the skid control ECU detects a malfunction in the ABS with EBD, brake assist, TRC and VSC systems, the ABS, brake system and VSC warning lights and the TRC OFF and Slip indicator lamps that corresponds to the function in which the malfunction has been detected lights up, as indicated in the table below, to alert the driver of the malfunction.

○: Light ON    —: Light OFF

Item	ABS	EBD	Brake Assist	TRC	VSC
ABS Warning Light	○	○	○	—	—
Brake System Warning Light	—	○	—	—	—
VSC Warning Light	—	—	—	○	○
TRC OFF Indicator Lamp	○	○	○	○	○
Slip Indicator Lamp	—	—	—	—	—

- At the same time, the DTC (Diagnostic Trouble Code) are stored in memory. The DTC can be read by connecting the SST (09843-18040) between the Tc and CG terminals DLC3, and observing the blinking of the ABS and VSC warning light (2-digit code), or by connecting a hand-held tester (5-digit code).
- This system has a sensor signal check (test mode) function. This function is activated by connecting the SST (09843-18040) between the Ts and CG terminals of the DLC3 or by connecting a hand-held tester. This check function performs yaw rate sensor zero point calibration, deceleration sensor zero point calibration, yaw rate sensor check, master cylinder pressure sensor check, and speed sensor check.
- If the skid control ECU detects a malfunction during a sensor check, it stores the DTC in its memory. This DTC can be read during a sensor signal check operation by connecting the Tc and CG terminals of the DLC3 and observing the blinking of the ABS warning light and the VSC warning light, or on a hand-held tester.
- If the CAN has communication error at ECU or sensors, multiple DTCs (Diagnostic Trouble Codes) are output simultaneously to indicate the malfunction location. For detail, [refer to page 254](#).  
For details on the DTC that are stored in skid control ECU memory and the DTC that are output through the sensor check function, see the Avensis Verso Repair Manual Supplement (Pub. No. RM1032E).

► DTC Chart (Blinking ABS Warning Light) ◀

DTC No.		Detection Item	DTC No.		Detection Item
2-digit	5-digit		2-digit	5-digit	
11	C0278	Open circuit in ABS SOL relay circuit	38	C1238	Foreign matter in attached on the tip of the right rear sensor
12	C0279	Short circuit in ABS SOL relay circuit	39	C1239	Foreign matter in attached on the tip of the left rear sensor
13	C0273	Open circuit in ABS MTR relay circuit	41	C1241	Low battery positive voltage
14	C0274	Short circuit in ABS MTR relay circuit	43*	C1243*	Malfunction in deceleration sensor (constant output)
21	C0226	Open or short circuit in brake actuator solenoid circuit (SFR circuit)	44*	C1244*	Malfunction in deceleration sensor
22	C0236	Open or short circuit in brake actuator solenoid circuit (SFL circuit)	45*	C1245*	Malfunction in deceleration sensor
23	C0246	Open or short circuit in brake actuator solenoid circuit (SRR circuit)	46*	C1246*	Malfunction in master cylinder pressure sensor
24	C0256	Open or short circuit in brake actuator solenoid circuit (SRL circuit)	49	C1249	Open circuit in stop light switch circuit
25*	C1225*	Open or short circuit of brake actuator solenoid circuit (SM circuit)	51	C1251	<ul style="list-style-type: none"> <li>● ABS pump motor is locked</li> <li>● Open circuit in pump motor circuit</li> </ul>
31	C0200	Right front wheel speed sensor signal malfunction	91*	C1361*	Short circuit in ABS motor fail safe relay circuit
32	C0205	Left front wheel speed sensor signal malfunction	94*	U0121*	Malfunction in CAN communication
33	C0210	Right rear wheel speed sensor signal malfunction	95*	U0124*	Malfunction in CAN communication with deceleration sensor
34	C0215	Left rear wheel speed sensor signal malfunction	97*	C1381*	Malfunction in power supply voltage yaw/deceleration sensor
35	C1235	Foreign matter in attached on the tip of the right front sensor	Always ON		<ul style="list-style-type: none"> <li>● Malfunction in skid control ECU</li> <li>● Open circuit in ABS warning light circuit</li> </ul>
36	C1236	Foreign matter in attached on the tip of the left front sensor			

\*: Excluding the models with ABS with EBD and brake assist.

► DTC Chart of Sensor Check (Blinking ABS Warning Light) ◀

DTC No.		Detection Item	DTC No.		Detection Item
2-digit	5-digit		2-digit	5-digit	
71	C1271	Low output voltage of right front speed sensor	76	C1276	Abnormal change in output voltage of left front speed sensor
72	C1272	Low output voltage of left front speed sensor	77	C1277	Abnormal change in output voltage of right rear speed sensor
73	C1273	Low output voltage of right rear speed sensor	78	C1278	Abnormal change in output voltage of left rear speed sensor
74	C1274	Low output voltage of left rear speed sensor	79*	C1279*	Deceleration sensor output voltage is faulty
75	C1275	Abnormal change in output voltage of right front speed sensor	81*	C1281*	Master cylinder pressure sensor output signal is faulty

\*: Excluding the models with ABS with EBD and brake assist.

► **DTC Chart (Blinking VSC Warning Light)** ◀ (Only on models equipped with VSC)

DTC No.		Detection Item	DTC No.		Detection Item
2-digit	5-digit		2-digit	5-digit	
31	C1231	Malfunction in steering angle sensor	44	C1224	Open or short circuit in NEO signal circuit
32	C1232	Malfunction in deceleration sensor	51	C1201	Malfunction in engine ECU
34	C1234	Malfunction in yaw rate sensor	53	C1203	Malfunction in engine ECU communication circuit
36	C1210	Zero point calibration of yaw rate sensor undone	62	U0123	Malfunction in CAN communication with yaw rate sensor
39	C1336	Zero point calibration of deceleration sensor undone	63	U0126	Malfunction in CAN communication with steering angle sensor
43	C1223	Malfunction in ABS control system	Always ON		Malfunction in skid control ECU

► **DTC Chart of Sensor Check (Blinking VSC Warning Light)** ◀ (Only on models equipped with VSC)

DTC No.		Detection Item
2-digit	5-digit	
71	C0371	Yaw rate sensor output signal is faulty

### Fail-Safe

- In the event of a malfunction in the TRC and/or VSC, the skid control ECU prohibits the TRC and VSC operations.
- In the event of a malfunction in the ABS and/or brake assist, the skid control ECU prohibits the ABS, brake assist, TRC and VSC operations.
- In the event of the malfunction in the EBD control, skid control ECU prohibits the EBD control.
- If a communication malfunction occurs between the skid control ECU and the steering angle sensor or the yaw rate & deceleration sensor, the skid control ECU stops control of the TRC and VSC.
- When the engine ECU detects a DTC, it will be unavailable the TRC and VSC controls.