

INITIALIZATION

1. RESET MEMORY

CAUTION:

Perform the RESET MEMORY (AT initialization) when replacing the automatic transmission assy, engine assy or ECM.

NOTICE:

Intelligent tester II only

HINT:

The ECM memorizes the condition that the ECT controls the automatic transmission assy and engine assy according to those characteristics. Therefore, when the automatic transmission assy, engine assy, or ECM has been replaced, it is necessary to reset the memory so that the ECM can memorize the new information. Reset procedure is as follows.

- (a) Turn the ignition switch off.
- (b) Connect the intelligent tester II to the DLC3.
- (c) Turn the ignition switch to the ON position.
- (d) Turn the intelligent tester II main switch on.
- (e) Perform the reset memory procedure from the main menu.


CAUTION:

After performing the RESET MEMORY, be sure to perform the ROAD TEST (see page 05-756) described earlier.

HINT:

The ECM is learned by performing the ROAD TEST.

Tester menu flow:

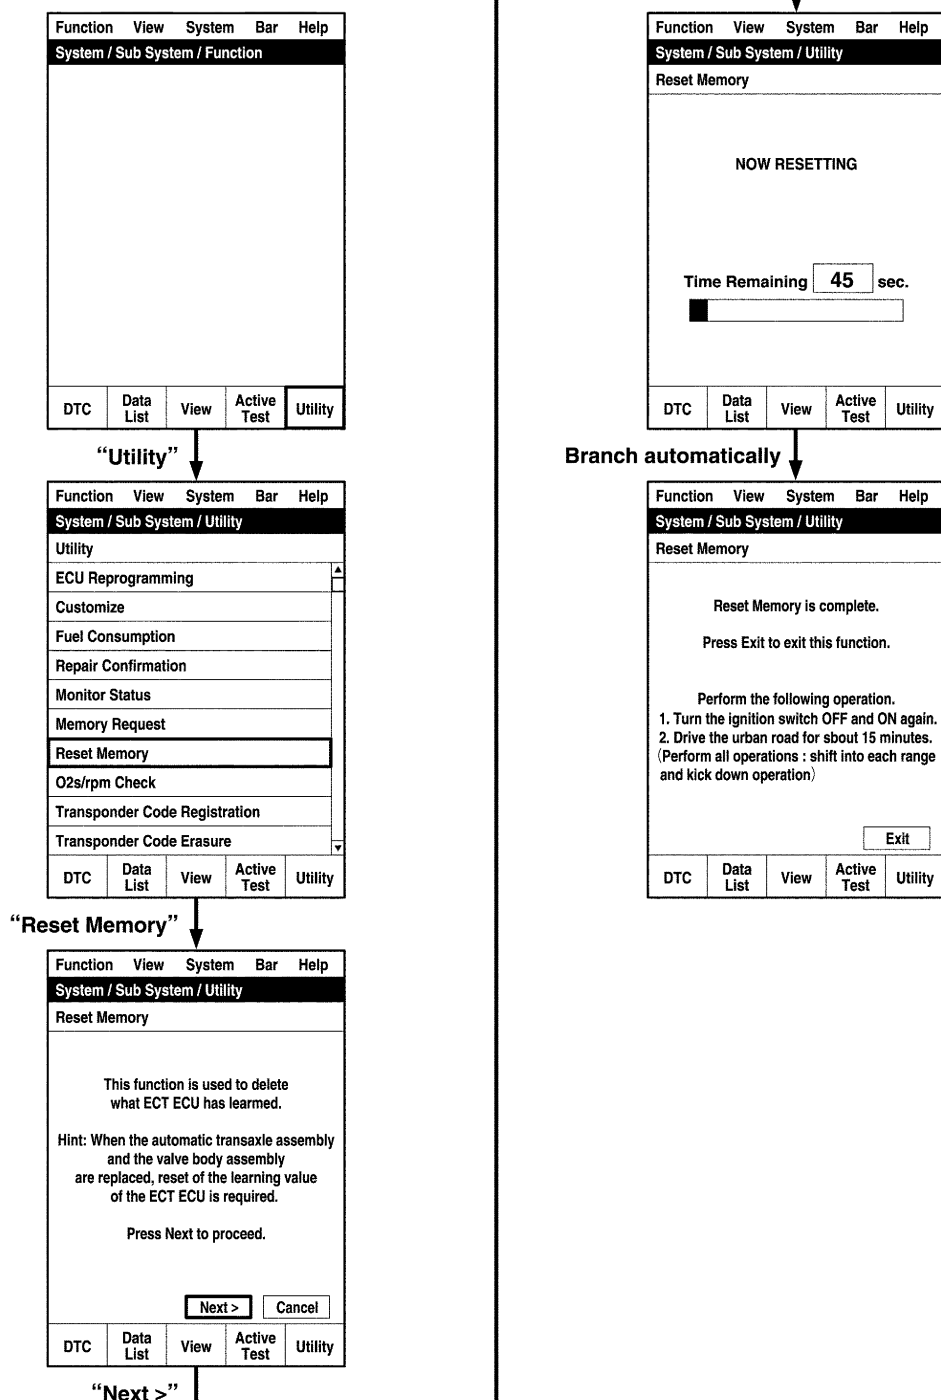

P

G30843