

TAPE IS TANGLED DUE TO INCORRECT TAPE SPEED OR AUTO-REVERSE MALFUNCTION

INSPECTION PROCEDURE

1 CHECK FOR ANY FOREIGN OBJECT

(a) Check for any foreign objects.

- (1) Check that no foreign objects or defects are detected in the cassette tape player of the radio receiver assy.

OK: No foreign objects or defects are detected.

NG

REMOVE FOREIGN OBJECT

OK

2 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK(BELOW 90 MIN.)

(a) Replace the cassette tape with another and recheck.

- (1) Replace the cassette tape with another normal one (90 minutes or less) to see if the same trouble occurs again.


OK: Malfunction disappears.

OK

CASSETTE TAPE IS FAULTY

NG

3 CLEAN HEAD AND CHECK OPERATION

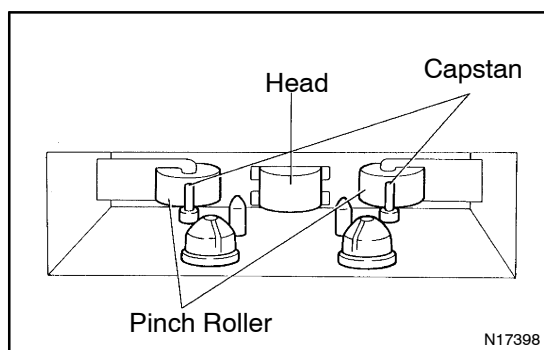

(a) Head cleaning

- (1) Raise the cassette door with your finger. Using a pencil or similar object, push in the guide.
- (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
- (3) Check if the same trouble occurs again.

OK: Malfunction disappears.

NG

**REPLACE RADIO RECEIVER ASSY
(SEE PUB. NO. RM864E, PAGE 67-2)**

OK

HEAD IS DIRTY