


DISPLAY CHECK MODE (VEHICLE SIGNAL CHECK)


HINT:

- This mode checks the vehicle signal status input to the radio and navigation assy.
- Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.


1. Enter diagnostic mode (see page 05-1087).

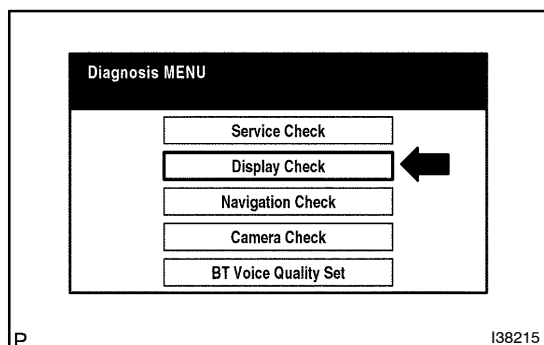

2. Select "Display Check" from the "Diagnosis MENU" screen.

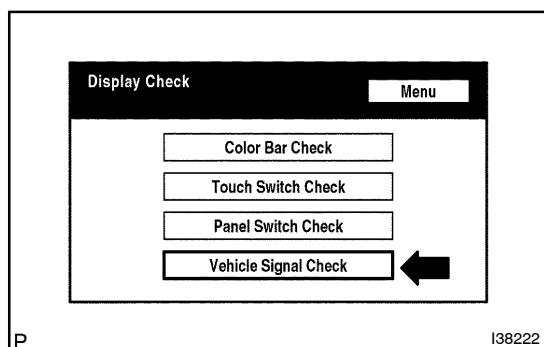

3. Select "Vehicle Signal Check" from the "Display Check" screen.

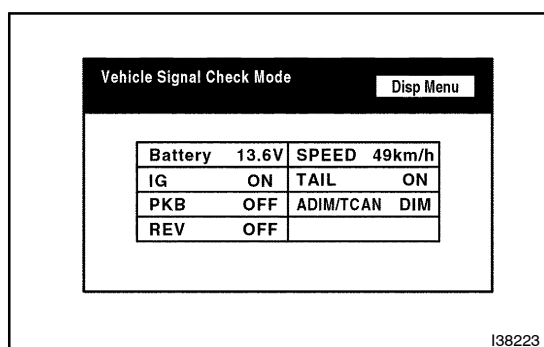

4. When the "Vehicle Signal Check Mode" screen is displayed, check all the vehicle signal conditions.

HINT:

- Only conditions having inputs are displayed.
- This screen is updated once per second when input signals to the vehicle are changed.