



SCREEN FLICKER OR COLOR DISTORTION

INSPECTION PROCEDURE


1 CHECK DISPLAY SETTING

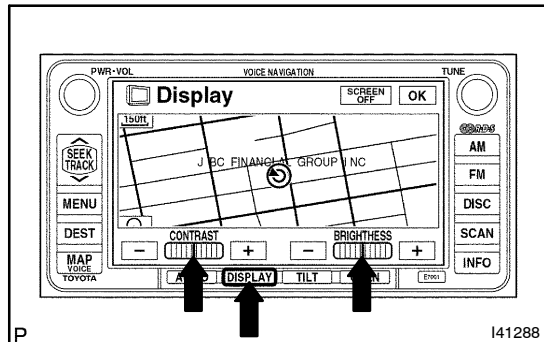

- Enter the display adjustment screen by pressing the "DISPLAY" switch.
- Reset display settings (contrast, brightness) and check if the screen appears normal.

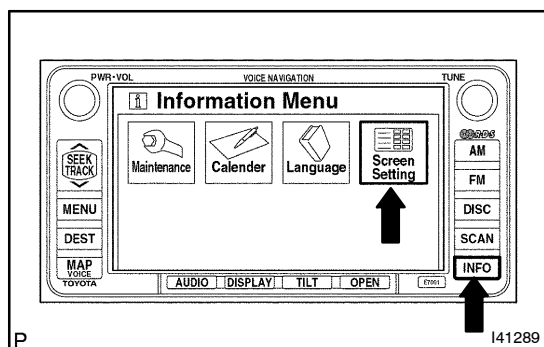

- Press the "INFO" switch and then the "Screen Setting" switch.

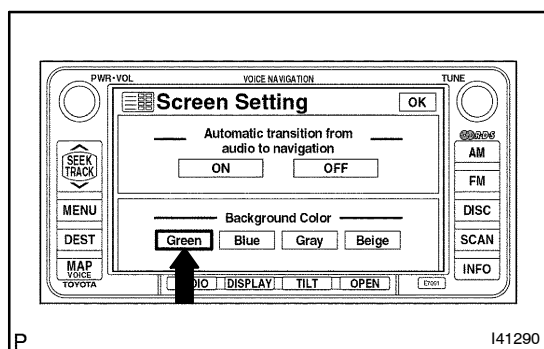

- Set the "Background Color" to "Green" (initial setting) and check if it is normal.
OK: Returns to normal.

OK → END

NG

2 CHECK CABIN

- Check if the cabin temperature is -20°C (-4.0°F) or less.
OK: Cabin is warmer than -20°C (-4.0°F).

NG


HEAT THE CABIN AND RECHECK THE TEMPERATURE

OK

3 DISPLAY CHECK MODE (COLOR BAR CHECK MODE)


(a) Enter the "Display Check" mode (Color Bar Check Mode) (see page 05-1099).

(b) Check that color bars match the displayed names.

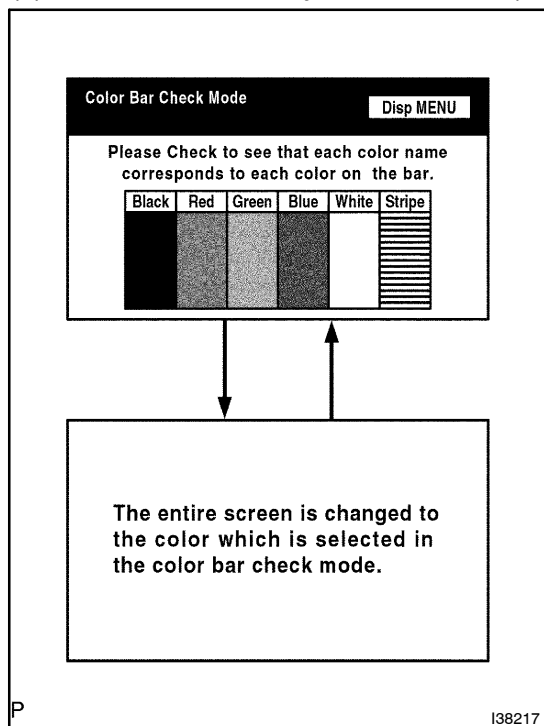OK: Color bars match the displayed names.**NG****REPLACE RADIO AND NAVIGATION ASSY (SEE PAGE 67-1)****OK****4 NAVIGATION CHECK MODE (NAVI COLOR BAR CHECK)**

(a) Enter the "Navigation Check" mode (NAVI Color Bar Check) (see page 05-1105).

(b) Check that color bars match the displayed names.

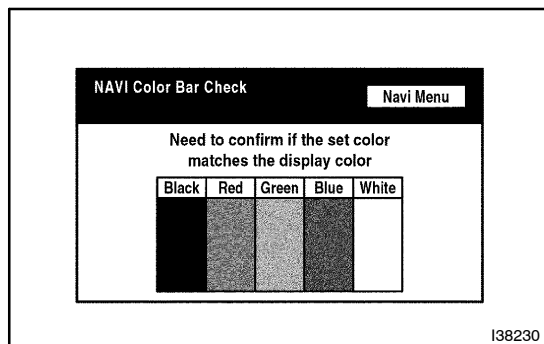OK: Color bars match the displayed names.**NG****REPLACE RADIO AND NAVIGATION ASSY (SEE PAGE 67-1)****OK****PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1094)**