


# NO SOUND CAN BE HEARD FROM THE SPEAKERS (AUDIO IS MUTE)

## INSPECTION PROCEDURE

### 1 CHECK AUDIO SETTINGS

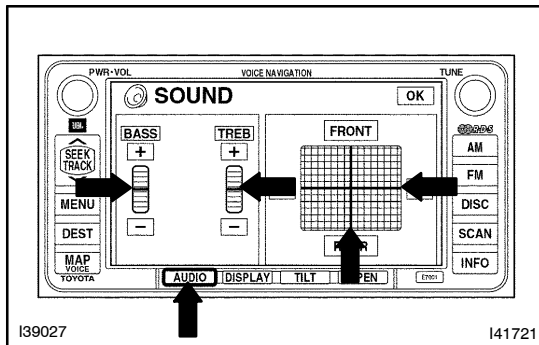

(a) Enter the sound adjustment screen by pressing the "SOUND" switch on the AUDIO display.

(b) Set volume, fader, and balance to the initial values and check that sound is normal.

**OK: Audio returns to normal.**

**HINT:**

Sound quality adjustment items vary depending on the type of the amplifier.

**OK END**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1094)**