


SPEED SIGNAL ERROR

INSPECTION PROCEDURE

1 NAVIGATION CHECK MODE (VEHICLE SENSORS CHECK)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1104).

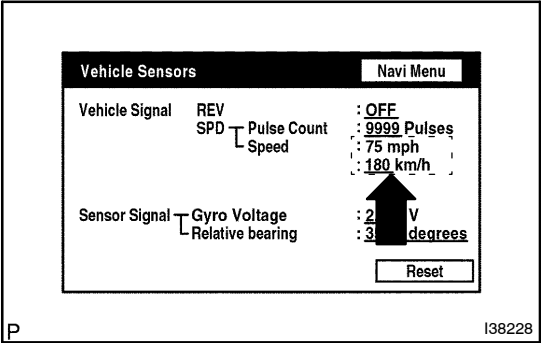

(b) While driving, compare the "SPD" indicator to the reading on the speedometer. Check if these readings are almost the same.

OK: The readings are almost the same.

OK REPLACE RADIO AND NAVIGATION ASSY (SEE PAGE 67-1)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1094)