


DIAGNOSTIC START-UP/FINISH


HINT:

- Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.
 - After the ignition switch is turned on, check that the map is displayed before starting the diagnostic mode. Otherwise, some items cannot be checked.
1. **There are 2 methods to start diagnostic mode. Start the mode by using one of them.**

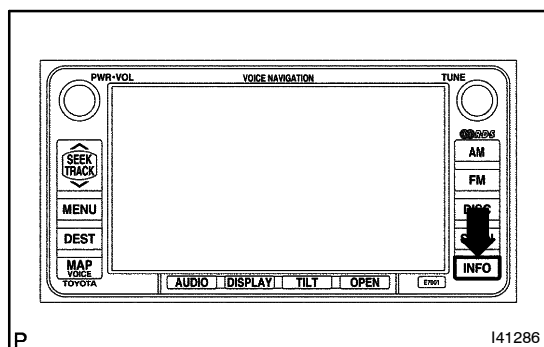

2. Method 1

- (a) Start the engine.
- (b) While pressing and holding "INFO" switch, operate light control switch, OFF → TAIL → OFF → TAIL → OFF → TAIL → OFF.
- (c) The diagnostic mode starts and the service check screen ("System Check Mode") will be displayed. Service inspection starts automatically and the result will be displayed.

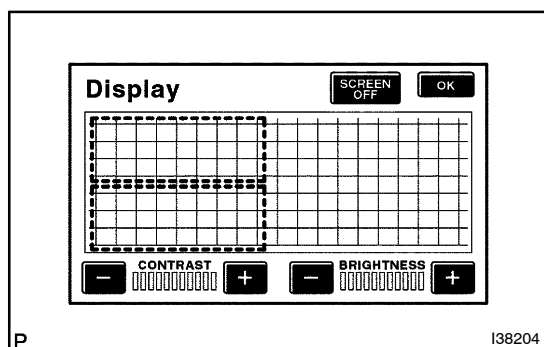


3. Method 2

- (a) Start the engine.
- (b) Switch to the "Display quality adjustment" screen.
- (c) From the display quality adjustment screen, touch the corners of the screen in the following order: upper left → lower left → upper left → lower left → upper left → lower left.
- (d) The diagnostic mode starts and "Service Check" screen will be displayed. Service inspection starts automatically and the result will be displayed.

4. Diagnosis MENU

- (a) Diagnostic screen will be displayed by pressing the menu switch on the service check screen.

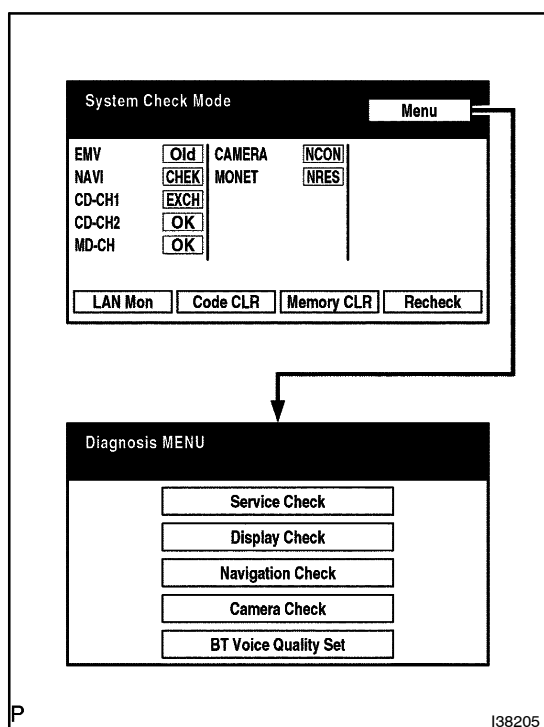

5. There are 2 methods to exit. Use one of them.

- (a) Turn the ignition switch off.
- (b) Press the "Display" switch for 3 seconds.