

SUPPLEMENTAL RESTRAINT SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

050YF-03

1 Vehicle Brought to Workshop

2 Customer Problem Analysis (See page 05-402)

3 Warning Light Check (See page 05-403)

Warning is light remains ON: Go to step 4

Warning is light remains OFF: Go to step 5

4 DTC Check (Read Present DTC) (See page 05-403)

Go to step 6

5 DTC Check (Read Past DTC) (See page 05-403)

6 DTC Chart (See page 05-403)

7 Circuit Inspection (See page 05-416 to 05-409)


Malfunction code is output: Go to step 8

Normal code is output: Go to step 14

8 Identification of Problem

9 Repair

10 Clear DTC (Present and Past DTC) (See page 05-403)

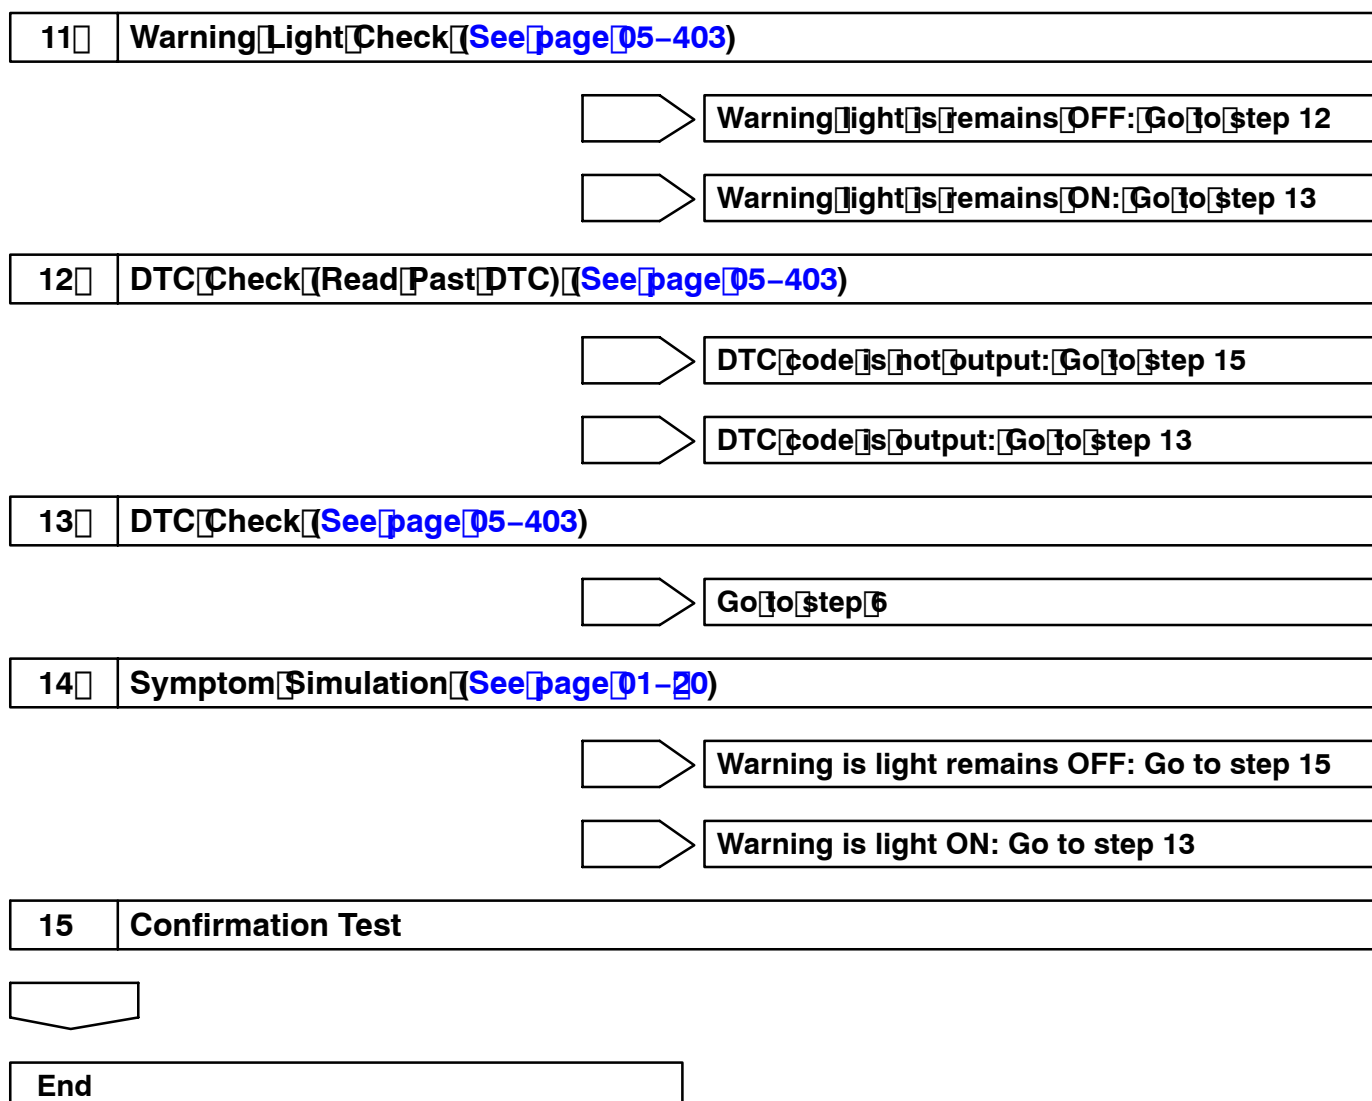

HINT:

Step 3, 4, 7, 10, 12, 13:

Diagnostic steps permitting the use of the hand-held tester.