

## TAPE IS TANGLED DUE TO INCORRECT TAPE SPEED OR AUTO-REVERSE MALFUNCTION

### INSPECTION PROCEDURE

#### 1 CHECK FOR ANY FOREIGN OBJECT

(a) Check for any foreign object.

- (1) Check that no foreign material and troubles are detected in the radio receiver assembly cassette tape player.

**Standard: No foreign material and trouble detected.**

NG

REMOVE FOREIGN OBJECT

OK

#### 2 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK(BELOW 90 MIN.)

(a) Replace the cassette tape with another and recheck.

- (1) Replace the faulty cassette tape with the normal one (90min or less) to see if the same trouble occurs again.


**Standard: malfunction disappear.**

OK

CASSETTE TAPE FAULTY

NG

#### 3 CLEAN HEAD AND CHECK OPERATION

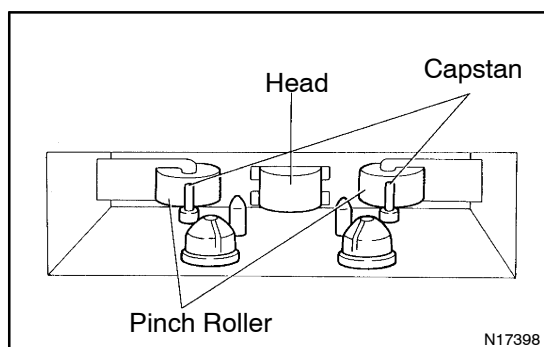

(a) Head cleaning

- (1) Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
- (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
- (3) Check that the same trouble occurs again.

OK

HEAD DIRTY

NG

#### CHECK AND REPLACE RADIO RECEIVER ASSY