


INSPECTION PROCEDURE

1 CHECK COMBINATION METER ASSEMBLY

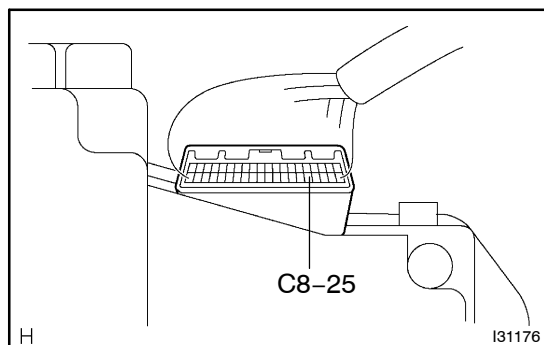


- (a) Check seat belt warning light operation.
- (1) Turn ignition switch ON.
 - (2) Using SST, connect terminal between C8-25 and body ground.
 - (3) Check that the seat belt warning light flashes.

NG

REPLACE COMBINATION METER ASSEMBLY

OK

2 INSPECT FRONT SEAT INNER BELT ASSY RH

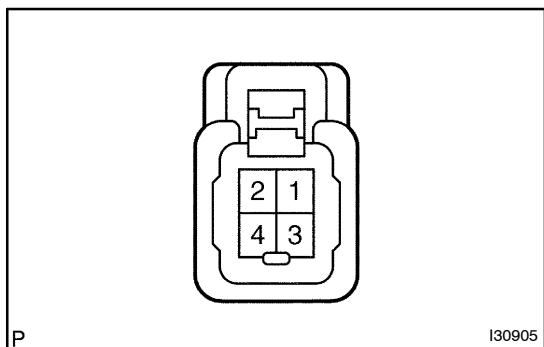

- (a) Check continuity.
- (1) Disconnect the connector from front seat inner belt RH.
 - (2) Check continuity between 1 and 4 when buckle switch condition, as shown in chart below.

OK:

Condition	Continuity
ON (Seat belt unfastened)	Continuity
OFF (Seat belt fastened)	No continuity

NG

REPLACE FRONT SEAT INNER BELT ASSY RH

OK

3 CHECK HARNESS AND CONNECTOR

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4 CHECK HARNESS AND CONNECTOR

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE COMBINATION METER ASSEMBLY