


BRAKE BOOSTER ASSY

ON-VEHICLE INSPECTION

3201G-02

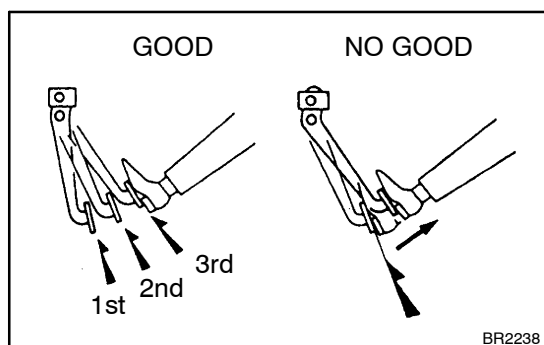

1. INSPECT BRAKE BOOSTER

(a) Air tightness check.

- (1) Start the engine and stop it after 1 or 2 minutes. Depress the brake pedal several times slowly.


HINT:

If the pedal goes down farthest the 1st time, but gradually rises after the 2nd or 3rd time, the booster is air tight.

- (2) Depress the brake pedal while the engine is running, and stop the engine with the pedal depressed.

HINT:

If there is no change in the pedal reserve distance after holding the pedal for 30 seconds, the booster is air-tight.

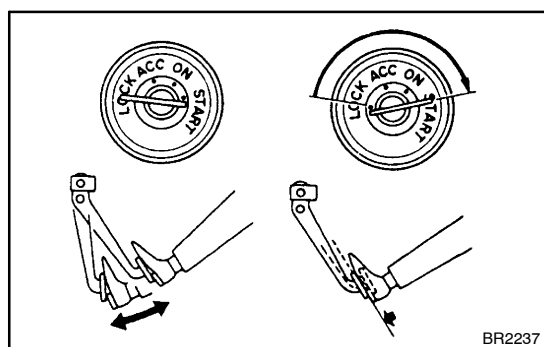

(b) Operating check.

- (1) Depress the brake pedal several times with the ignition switch OFF and check that there is no change in the pedal reserve distance.
- (2) Depress the brake pedal and start the engine.


HINT:

If the pedal goes down slightly, operation is normal.

2. INSPECT VACUUM CHECK VALVE

(a) Check vacuum check valve.

- (1) Slide the clip and disconnect the vacuum hose.
- (2) Remove the vacuum check valve.

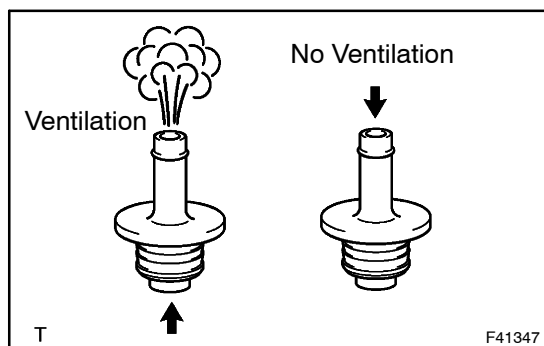

- (3) Check that there is ventilation from the booster to engine, and no ventilation from the engine to the booster.
- (4) If any fault is found, replace the vacuum check valve.