


## ADJUSTMENT

### 1. INSPECT PARK/NEUTRAL POSITION SWITCH ASSY

- (a) Apply the parking brake and turn the ignition switch ON.
- (b) Depress the brake pedal and check that the engine starts only when the shift lever is set in N or P range and it does not start in other range.
- (c) Check that the back-up light is lit and the reverse warning buzzer sounds only when the shift lever is set in R range and these do not function in other ranges.

If a failure is found, check the park/ neutral position switch for continuity.

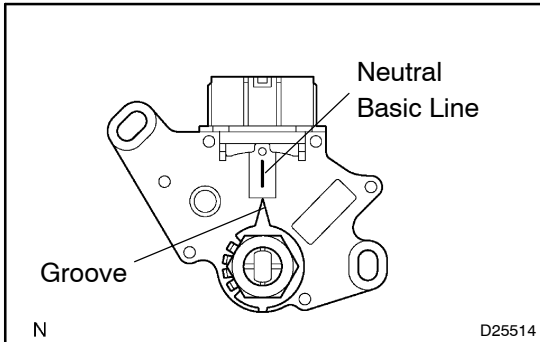

### 2. ADJUST PARK/NEUTRAL POSITION SWITCH ASSY

- (a) Loosen the 2 bolts of park/ neutral position switch and set the shift lever to the N range.
- (b) Align the groove and neutral basic line.
- (c) Hold the switch in position and tighten the 2 bolts.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

- (d) After adjustment, perform the inspection described in step 1.