



FRONT DIFFERENTIAL OIL SEAL REPLACEMENT

1. REMOVE FRONT WHEEL
2. REMOVE ENGINE UNDER COVER RH
3. REMOVE ENGINE UNDER COVER LH
4. DRAIN AUTOMATIC TRANSAXLE FLUID
 - (a) Remove the drain plug, gasket and drain ATF.
 - (b) Install a new gasket and drain plug.
Torque: 49 N·m (500 kgf·cm, 36 ft·lb)
5. REMOVE FRONT DRIVE SHAFT ASSY RH
(See page 30-7)
6. REMOVE FRONT DRIVE SHAFT ASSY LH
(See page 30-7)

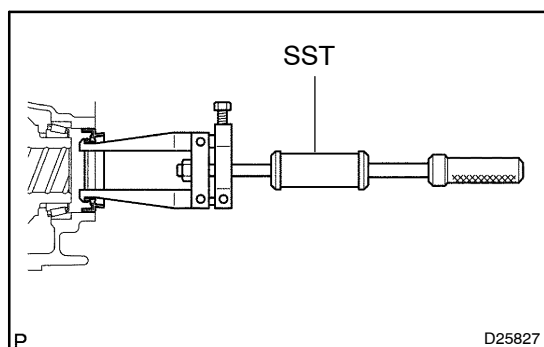


7. REMOVE TRANSAXLE HOUSING OIL SEAL

- (a) Using SST, pull out the oil seal.
SST 09308-00010

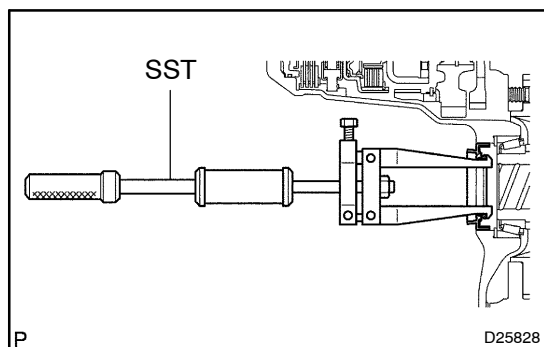


8. REMOVE DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST, pull out the oil seal.
SST 09308-00010

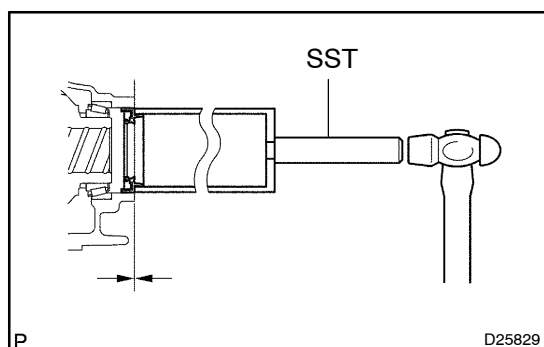

9. INSTALL TRANSAXLE HOUSING OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.
SST 09316-60011 (09316-00011)
Oil seal drive in depth:
0 ± 0.5 mm (0 ± 0.020 in.)
- (b) Coat the lip of the oil seal with MP grease.

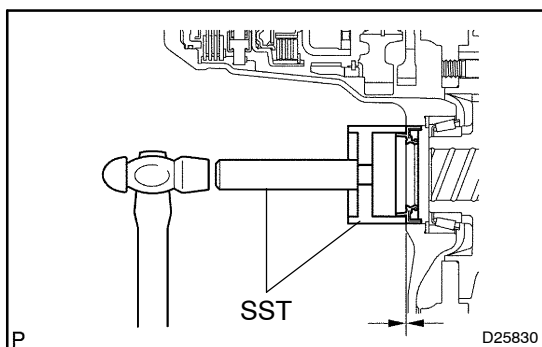

10. INSTALL DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.
SST 09649-17010, 09950-70010 (09951-7150)

Oil seal drive in depth:

$0 \pm 0.5 \text{ mm}$ ($0 \pm 0.020 \text{ in.}$)

- (b) Coat the tip of the oil seal with MP grease.

11. INSTALL FRONT DRIVE SHAFT ASSY LH

(See page 30-7)

12. INSTALL FRONT DRIVE SHAFT ASSY RH

(See page 30-7)

13. INSTALL FRONT WHEEL

Torque: $103 \text{ N}\cdot\text{m}$ ($1,050 \text{ kgf}\cdot\text{cm}$, $76 \text{ ft}\cdot\text{lb}$)

14. ADD AUTOMATIC TRANSAXLE FLUID

15. INSPECT AUTOMATIC TRANSAXLE FLUID (See page 40-2)

16. REMOVE ENGINE UNDER COVER LH

(See page 26-4)

17. CHECK ABS SPEED SENSOR SIGNAL (See page 05-295)