


REPLACEMENT

HINT:

COMPONENTS: [See page 60-55](#)

1. **PRECAUTION** [\(See page 60-1\)](#)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** [\(See page 60-1\)](#)
3. **REMOVE FRONT DOOR SCUFF PLATE RH**
[\(See page 76-23\)](#)
4. **REMOVE REAR DOOR SCUFF PLATE RH**
[\(See page 76-23\)](#)
5. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**
[\(See page 76-23\)](#)
6. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH**
[\(See page 76-23\)](#)
7. **REMOVE CENTER PILLAR GARNISH LOWER RH**
[\(See page 76-23\)](#)
8. **SEPARATE FRONT SEAT OUTER BELT ASSY RH**

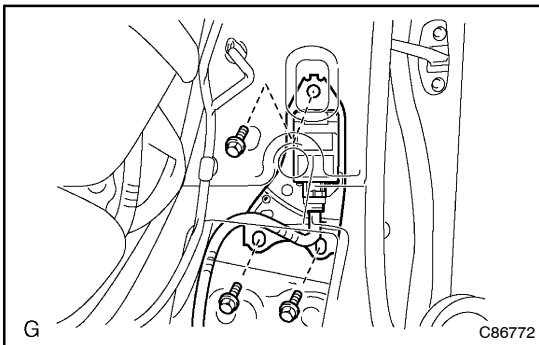

9. REMOVE SIDE AIR BAG SENSOR ASSY RH

- (a) Disconnect the connector from the side airbag sensor assy RH.
- (b) Remove the 3 bolts and side airbag sensor assy RH.

10. INSPECT SIDE AIR BAG SENSOR ASSY RH

[\(See page 60-9\)](#)

11. INSTALL SIDE AIR BAG SENSOR ASSY RH

- (a) Install the 3 bolts and side airbag sensor assy RH.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (b) Connect the side airbag sensor connector.

NOTICE:

- Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that there is no looseness.

12. INSTALL FRONT SEAT OUTER BELT ASSY RH**Torque:****Upper bolt: 8.5 N·m (87 kgf·cm, 75 in. lbf)****Lower bolt: 42 N·m (420 kgf·cm, 31 ft lbf)****13. INSPECT SRS WARNING LIGHT ([See page 05-403](#))**