


INSPECTION

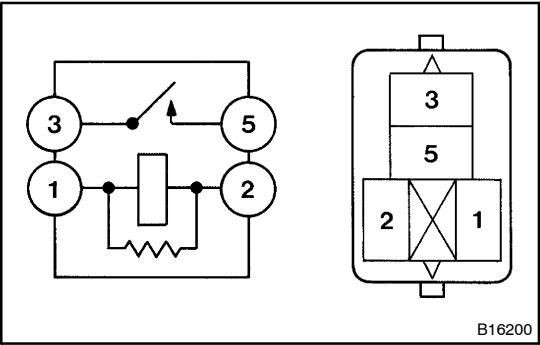

1. INSPECT HORN RELAY ASSY

(a) Inspect the horn relay (Marking: HORN) continuity.

Condition	Tester connection	Specified condition
Constant	1 ⇔ 2	Continuity
Apply B+ between terminals 1 and 2	3 ⇔ 5	Continuity

If continuity is not as specified, replace the relay.