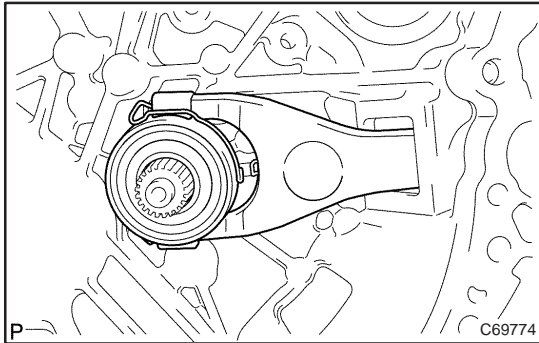


# MANUAL TRANSAXLE ASSY (E355/E356)

## OVERHAUL

4103W-01

HINT:


COMPONENTS: [See page 41-1](#)

### 1. REMOVE CLUTCH RELEASE FORK SUB-ASSY

- (a) Remove the clutch release fork with clutch release bearing from the manual transaxle case.

### 2. REMOVE CLUTCH RELEASE BEARING ASSY

- (a) Remove the clutch release bearing assy and clutch release bearing hub clip from the clutch release fork sub-assy.

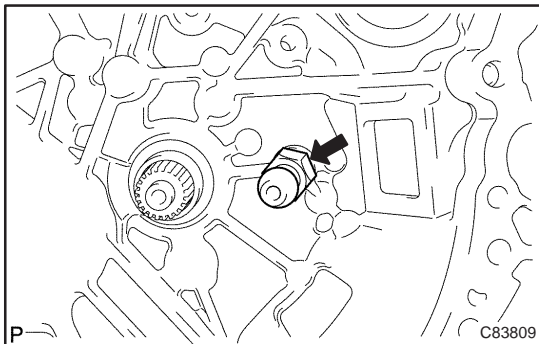

### 3. REMOVE RELEASE FORK SUPPORT

- (a) Remove the release fork support from the manual transaxle case.

### 4. REMOVE CLUTCH RELEASE FORK BOOT



- (a) Remove the clutch release fork boot from the manual transaxle case.

### 5. REMOVE SPEEDOMETER DRIVEN HOLE COVER SUB-ASSY

- (a) Remove the bolt and speedometer driven hole cover.

### 6. REMOVE TRANSAXLE CASE COVER

- (a) Remove the 2 bolt and transaxle case cover.

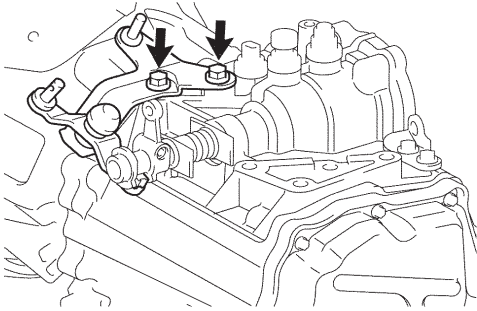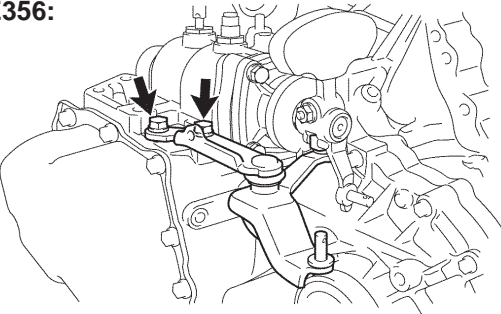
**E355:****E356:**

P


C90198

**7. REMOVE SELECTING BELL CRANK ASSY**

- (a) Remove the 2 bolts and selecting bell crank assy from manual transmission case.

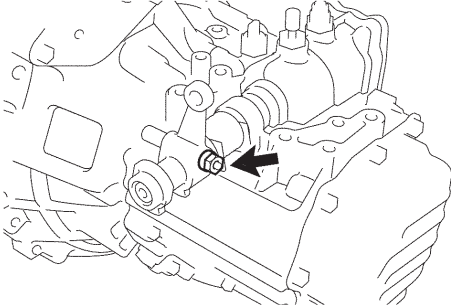**E355:**

P

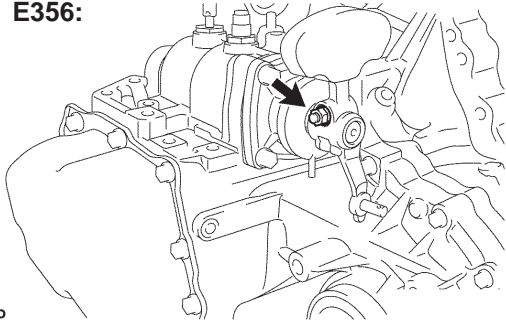
**E356:**

P


C90199

**8. REMOVE CONTROL SHIFT LEVER**

- (a) Remove the nut and spring washer.

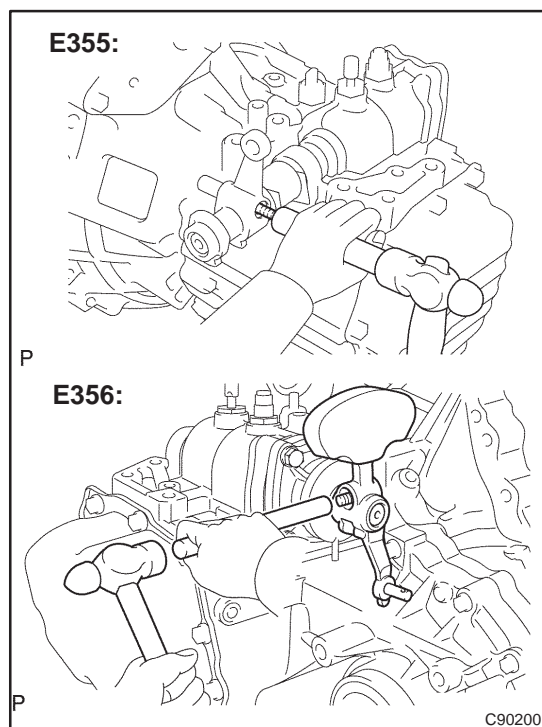


- (b) Using a brass bar and hammer, remove the shift outer lock pin.
- (c) Remove the control shift lever.

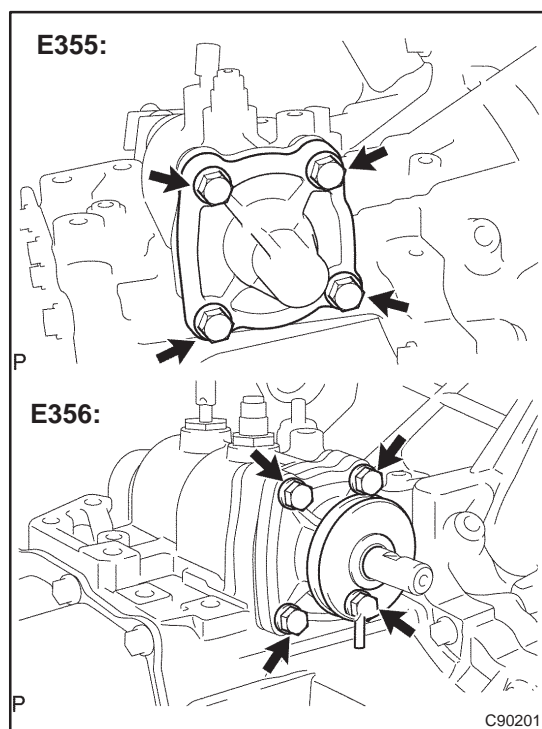


## 9. REMOVE CONTROL SHAFT COVER

- (a) Remove the 4 bolts and control shaft cover from the manual transmission case.

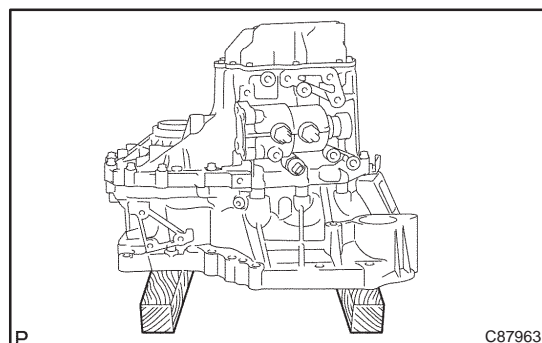


## 10. FIX MANUAL TRANSAXLE ASSY

- (a) Using wooden blocks, fix the manual transaxle assy.

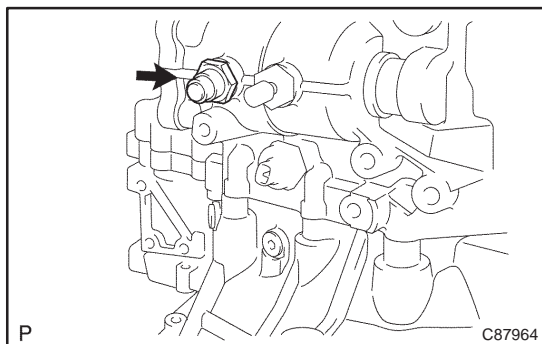


#### 11. REMOVE LOCK BALL ASSY NO.1

- (a) Remove the lock ball assy No. 1 from the manual transmission case.

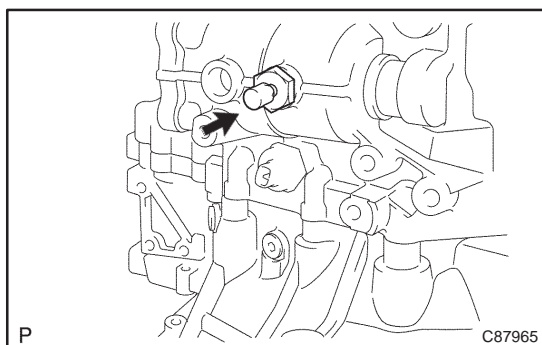


#### 12. REMOVE MANUAL TRANSMISSION BREATHER PLUG

- (a) Remove the manual transmission breather plug and gasket.

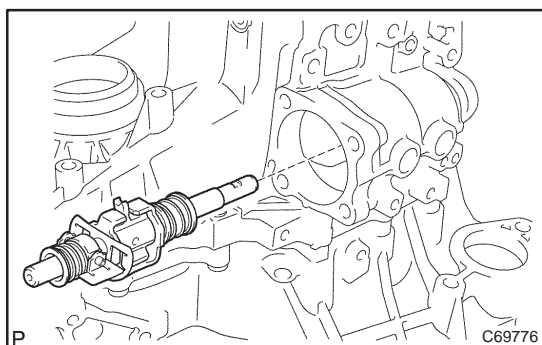


#### 13. REMOVE SHIFT & SELECT LEVER SHAFT ASSY

- (a) Remove the shift & select lever shaft assy from the manual transmission case.

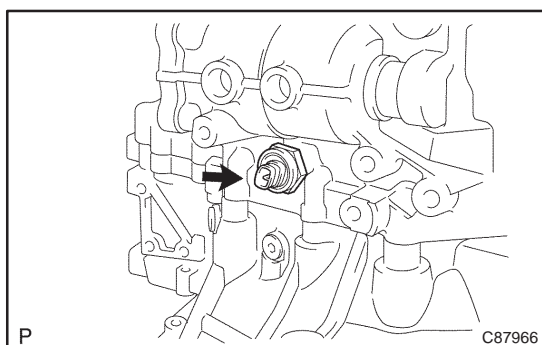


#### 14. REMOVE BACK UP LAMP SWITCH ASSY

- (a) Remove the back up lamp switch assy and gasket from the manual transmission case.

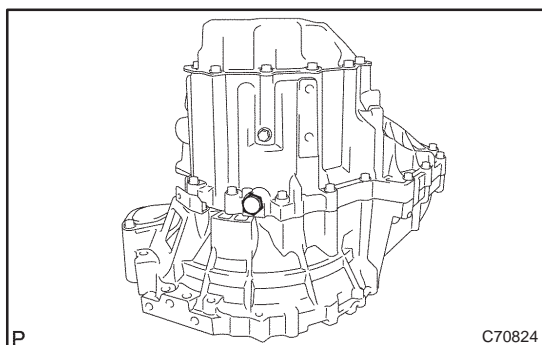


#### 15. REMOVE MANUAL TRANSMISSION FILLER PLUG

- (a) Remove the manual transmission filler plug and gasket from the manual transmission case.

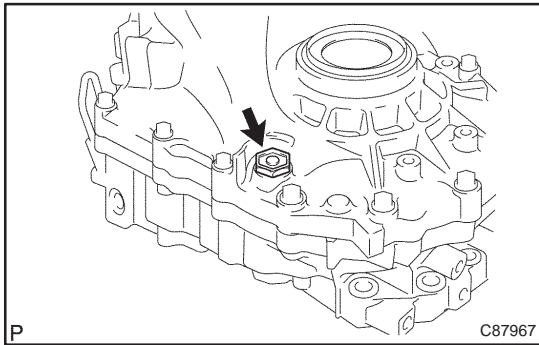


## 16. REMOVE DRAIN (MTM) PLUG SUB-ASSY

- (a) Remove the drain (MTM) plug sub-assy and gasket from the manual transmission case.

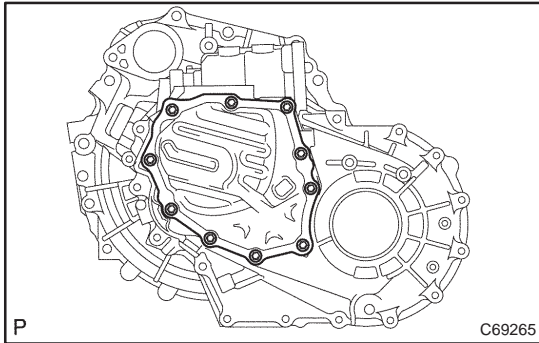


## 17. REMOVE MANUAL TRANSMISSION CASE COVER SUB-ASSY

- (a) Remove the 10 bolts and manual transmission case cover from the manual transmission case.

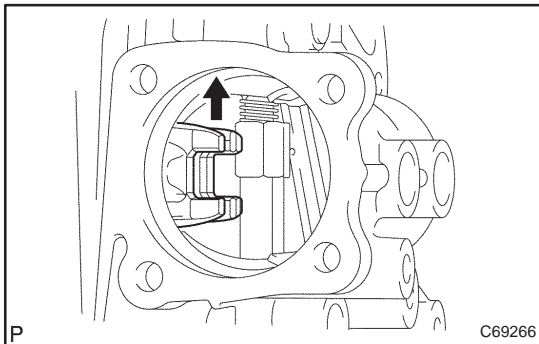


## 18. REMOVE MANUAL TRANSMISSION OUTPUT SHAFT REAR SET NUT


- (a) Engage the gear to the double meshing.

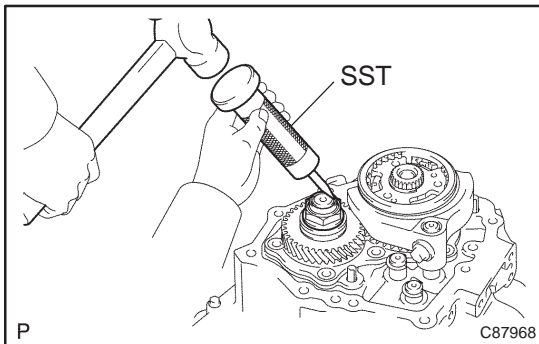

- (b) Using SST and a hammer, loosen the staked part of the manual transmission output shaft rear set nut.  
SST 09930-00010

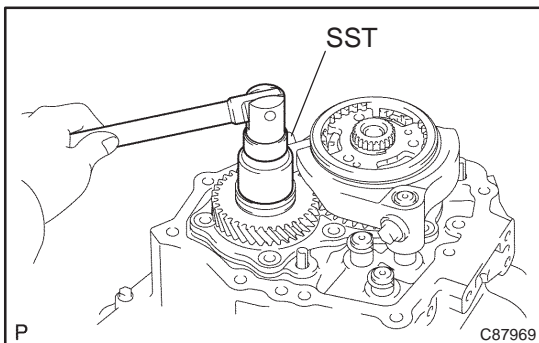


- (c) Using SST, remove the manual transmission output shaft rear set nut from the output shaft.  
SST 09229-55010
- (d) Disengage the double meshing of the gear.

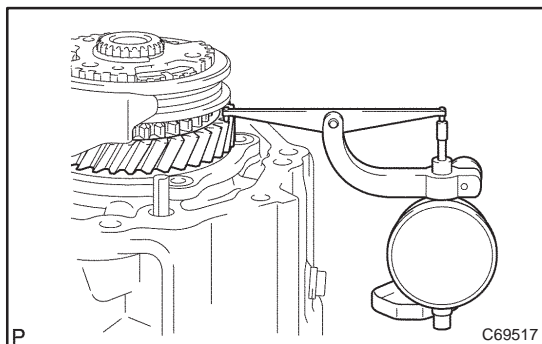**19. INSPECT 5TH GEAR THRUST CLEARANCE**

- (a) Using a dial indicator, inspect the 5th gear thrust clearance.

**Standard clearance:**

**0.10 – 0.65 mm (0.0040 – 0.0258 in.)**

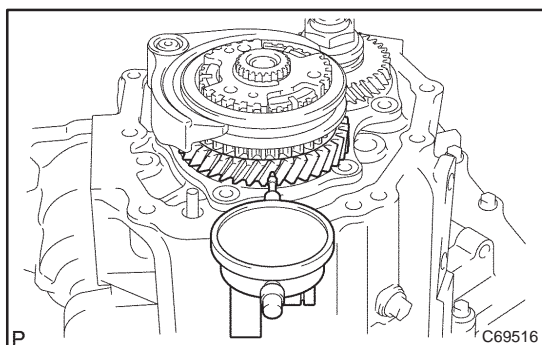**20. INSPECT 5TH GEAR RADIAL CLEARANCE**


- (a) Using a dial indicator, inspect the 5th gear radial clearance.

**Standard clearance:**

**0.009 – 0.050 mm (0.0036 – 0.0200 in.)**

**HINT:**


If the clearance is out of the specification, replace 1st gear needle roller bearing.

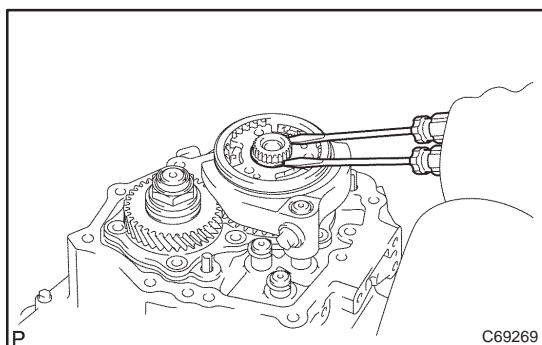**21. REMOVE TRANSMISSION CLUTCH HUB NO.3**


- (a) Using 2 screwdrivers and hammer, remove the transmission clutch hub No. 3 shaft snap ring from the input shaft.

**HINT:**

Using a waste to prevent the snap ring from bearing scattered.

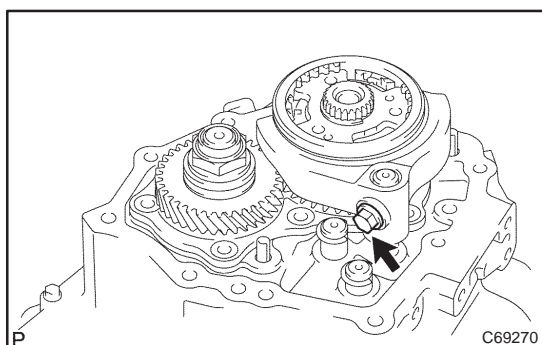


- (b) Remove the gear shift fork bolt from the gear shift fork No. 3.

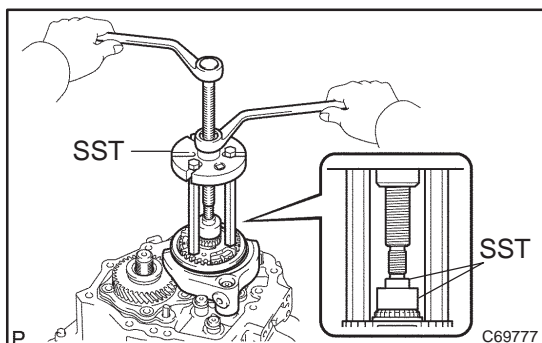

- (c) Using SST, remove the transmission clutch hub No. 3 and gear shift fork No. 3 from the input shaft.


**SST** 09950-30012 (09951-03010, 09953-03010, 09954-03010), 09950-50013 (09957-04010), 09950-60010 (09951-00280)



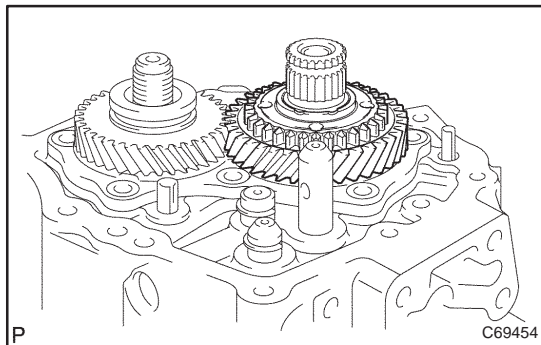


## 22. REMOVE 5TH GEAR

- (a) Remove the 5th gear from the input shaft.

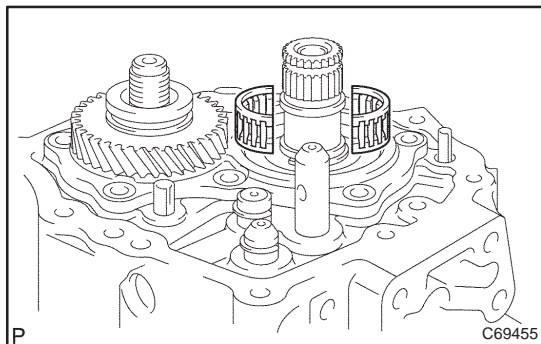

## 23. REMOVE 5TH GEAR NEEDLE ROLLER BEARING


- (a) Remove the 5th gear needle roller bearing from the input Shaft.

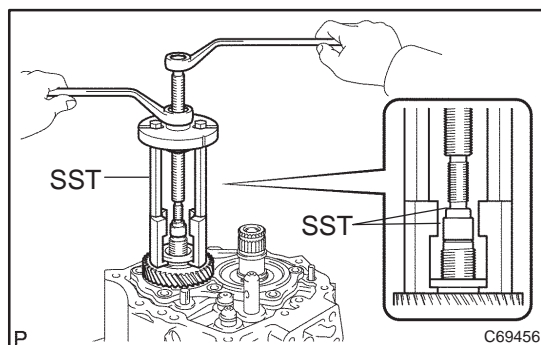

## 24. REMOVE 5TH DRIVEN GEAR


- (a) Using SST, remove the 5th driven gear from the output shaft.

SST 09950-30012 (09951-03010, 09953-03010, 09954-03010, 09957-04010), 09950-60010 (09951-00180, 09955-03011), 09950-50013

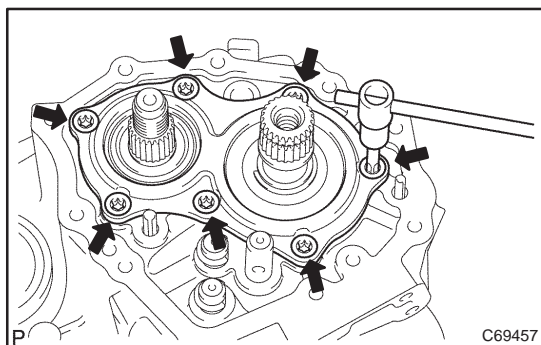


## 25. REMOVE BEARING RETAINER REAR (MTM)

- (a) Using a torx socket wrench (T45), remove the 7 torx screws and bearing retainer rear (MTM) from the manual transmission case.

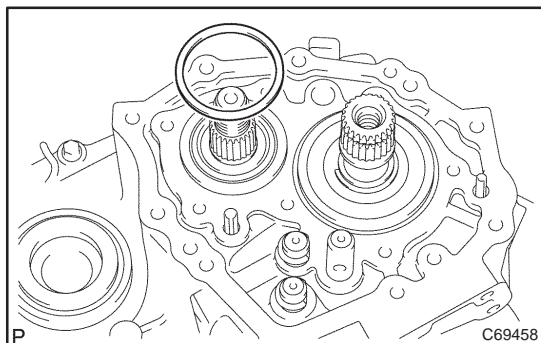


## 26. REMOVE OUTPUT SHAFT REAR BEARING SHIM

- (a) Remove the output shaft rear bearing shim from the output shaft.

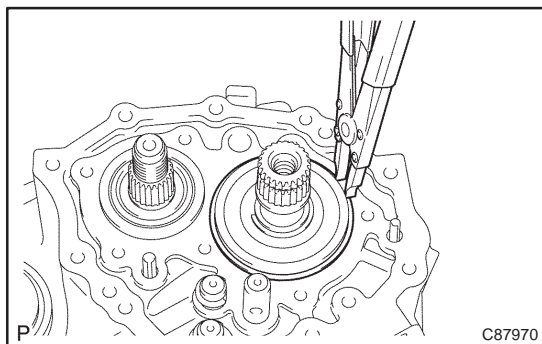

## 27. REMOVE INPUT SHAFT REAR BEARING SHAFT SNAP RING

- (a) Using a snap ring expander, remove the input shaft rear bearing shaft snap ring from the input shaft.

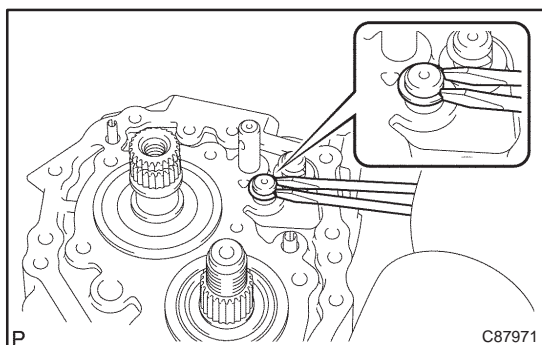


## 28. REMOVE SHIFT FORK SHAFT SHAFT SNAP RING

- (a) Using 2 screw drivers and a hammer, remove the shift fork shaft shaft snap ring from the gear shift fork shaft No. 1.

HINT:


Using a waste to prevent the snap ring from being scattered.

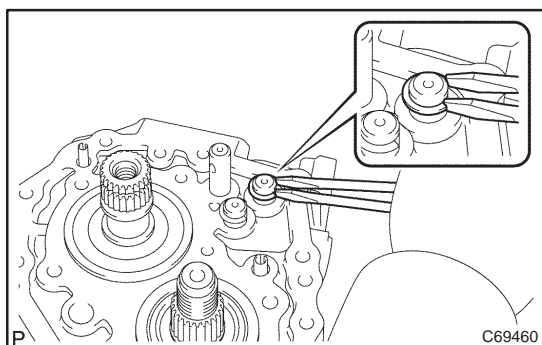

- (b) Using 2 screw drivers and a hammer, remove the shift fork shaft shaft snap ring from the gear shift fork shaft No. 2.

HINT:


Using a waste to prevent the snap ring from being scattered.

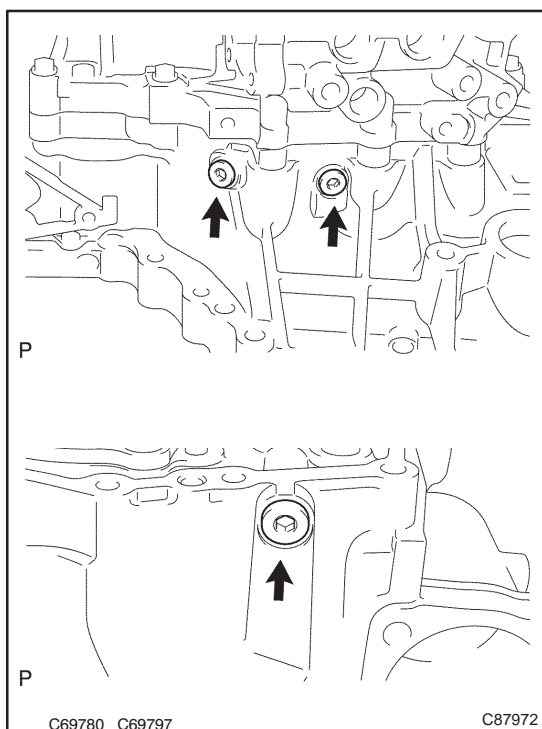

## 29. REMOVE SHIFT DETENT BALL PLUG

- (a) Using a hexagon wrench (6 mm), remove the 3 shift detente ball plug from the manual transaxle case.



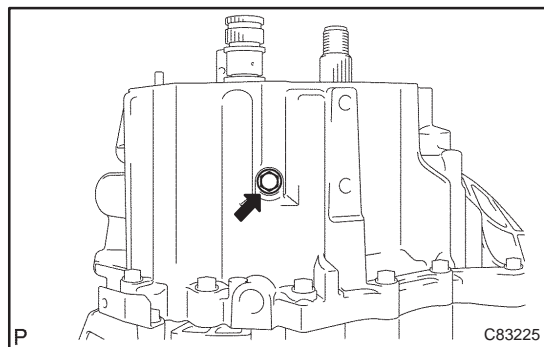


### 30. REMOVE REVERSE IDLER GEAR SHAFT BOLT

- (a) Remove the reverse idler gear shaft bolt and gasket.


### 31. REMOVE CLUTCH TUBE BRACKET

- (a) Remove the 3 bolts and remove the clutch tube bracket.

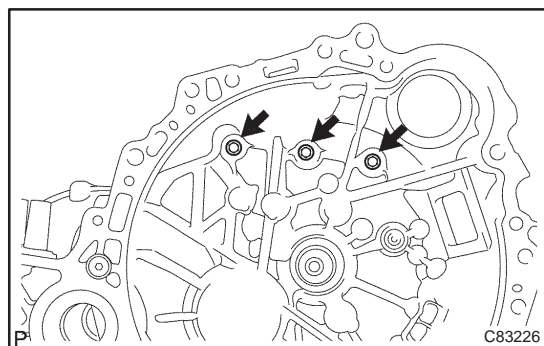


### 32. REMOVE MANUAL TRANSMISSION CASE

- (a) Remove the 3 bolts of the manual transaxle case side.

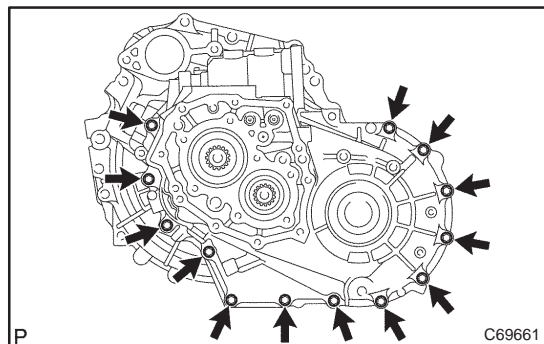

- (b) Remove the 14 bolts of the manual transmission case side.
- (c) Using a plastic hammer, remove the manual transmission case.

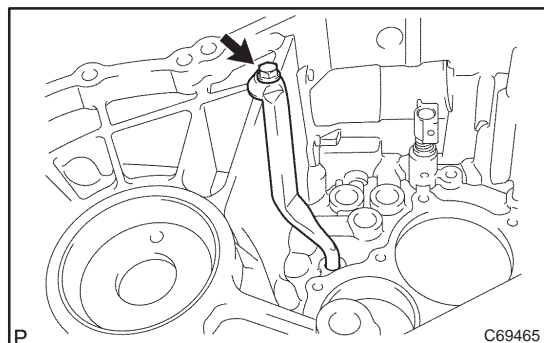


### 33. REMOVE OIL RECEIVER PIPE NO.2 (MTM)

- (a) Remove the bolt and oil receiver pipe No. 2 (MTM) from the manual transmission case.

#### NOTICE:

**Do not damage the pipe.**

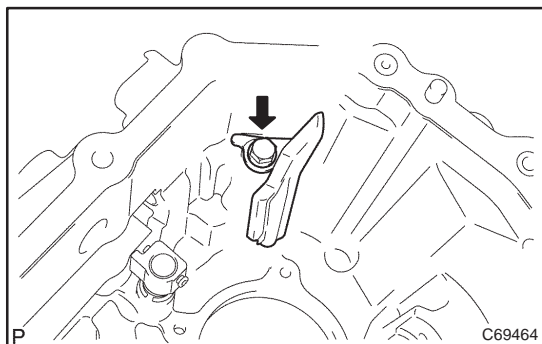


### 34. REMOVE OIL RECEIVER PIPE NO.1 (MTM)

- (a) Remove the bolt and oil receiver pipe No. 1 (MTM) from the manual transmission case.


**NOTICE:**

**Do not damage the pipe.**

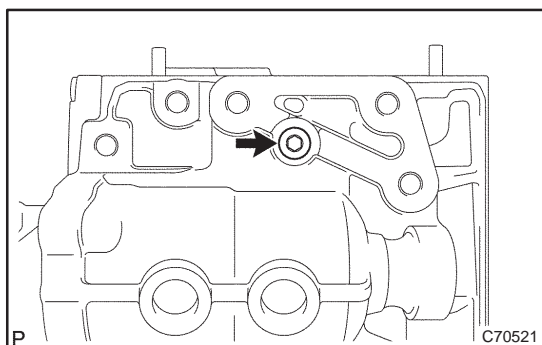


### 35. REMOVE REVERSE RESTRICT PIN ASSY

- (a) Using a hexagon wrench (6 mm), remove the reverse restrict pin plug from the manual transmission case.

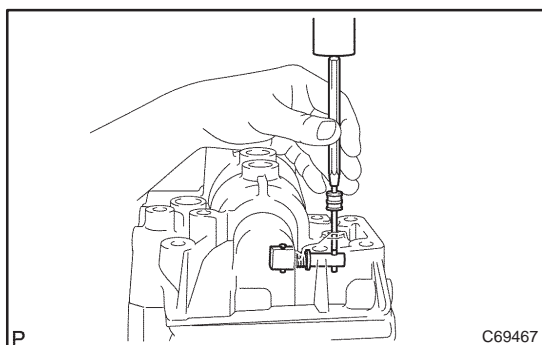


- (b) Using a pin punch ( $\phi$  5 mm), remove the slotted pin and reverse restrict pin assy.

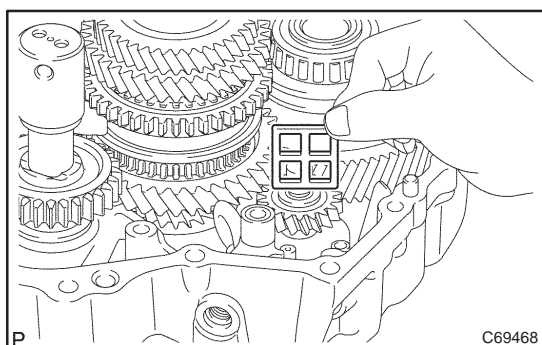


### 36. REMOVE TRANSMISSION MAGNET

- (a) Remove the transmission magnet from the manual transaxle case.

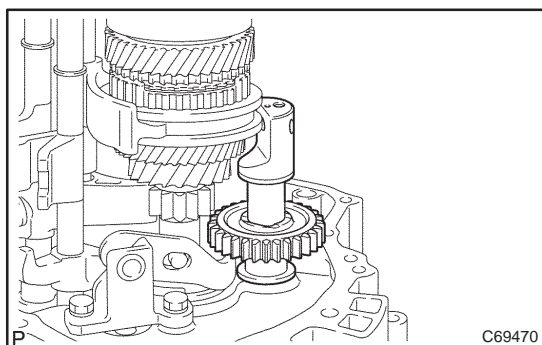


### 37. REMOVE REVERSE IDLER GEAR SUB-ASSY

- (a) Remove the reverse idler gear sub-assy from the manual transaxle case.

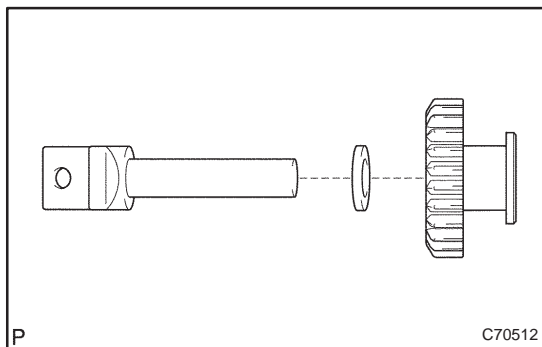


- (b) Remove the reverse gear and reverse idler thrust washer from the reverse idler gear shaft.

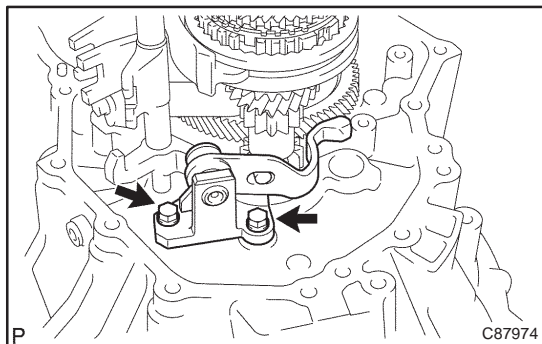


### 38. REMOVE REVERSE SHIFT ARM BRACKET ASSY

- (a) Remove the 2 bolts and reverse shift arm bracket from the manual transaxle case.

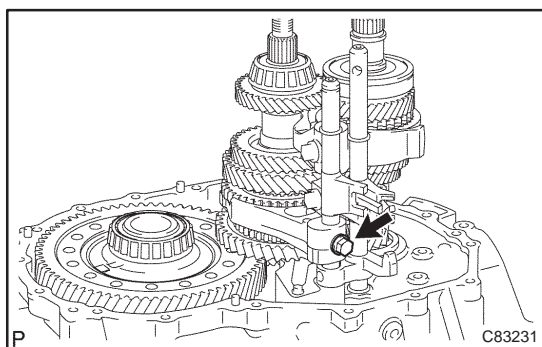


### 39. REMOVE GEAR SHIFT FORK SHAFT NO.1

- (a) Remove the shift fork bolt from the gear shift fork No. 1.

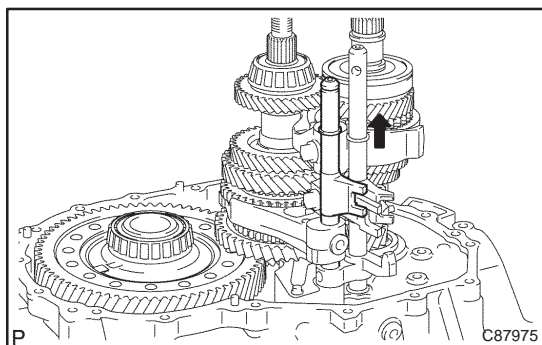


- (b) Pull out the gear shift fork shaft No. 1 while the gear fork shaft No. 3 is pulled up.

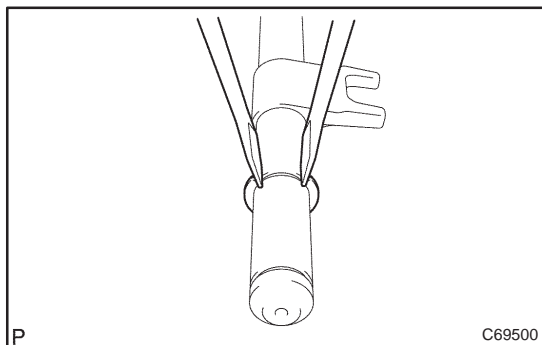


- (c) Using 2 screwdrivers and a hammer, remove the shift fork shaft snap ring from the gear shift fork shaft No. 1.

#### NOTICE:


Using a waste to prevent the snap ring from being scattered.

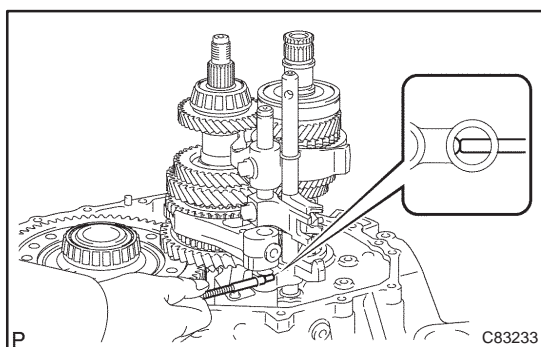**40. REMOVE REVERSE SHIFT FORK ROLLER**


- (a) Using a magnetic finger, remove the reverse shift fork roller from the reverse shift fork.

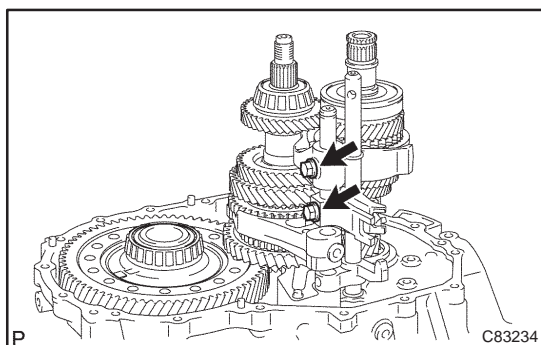**41. REMOVE GEAR SHIFT FORK SHAFT NO.2**


- (a) Remove the 2 shift fork bolts from the gear shift fork No. 2 and gear shift head No. 1.

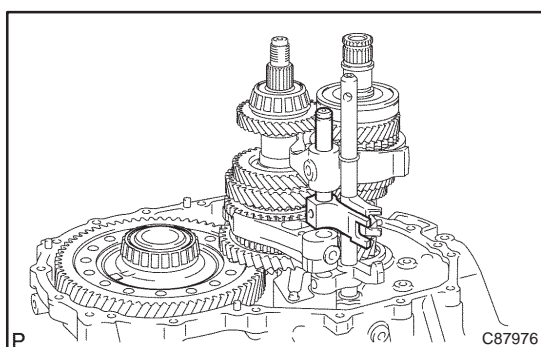


- (b) Remove the gear shift fork shaft No. 2 and gear shift head No. 1 from the manual transaxle case.

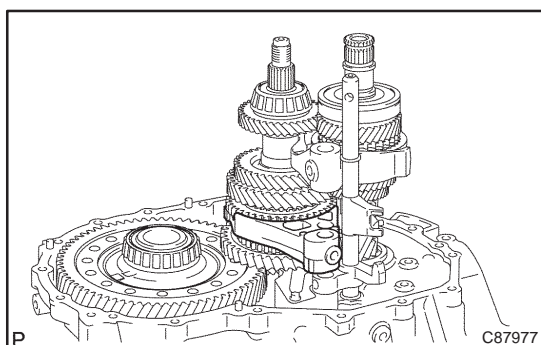**42. REMOVE GEAR SHIFT FORK NO.1**


- (a) Remove the gear shift fork No. 1 from the output shaft assy.

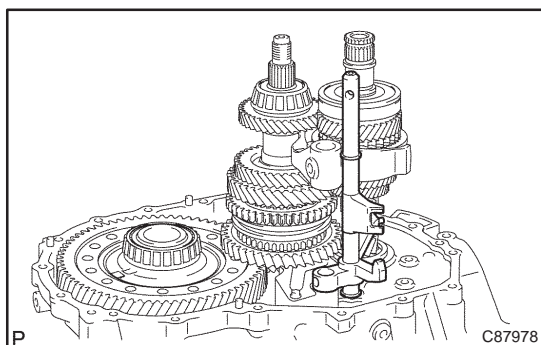**43. REMOVE GEAR SHIFT FORK SHAFT NO.3**

- (a) Remove the gear shift fork shaft No. 3 from the manual transaxle case.

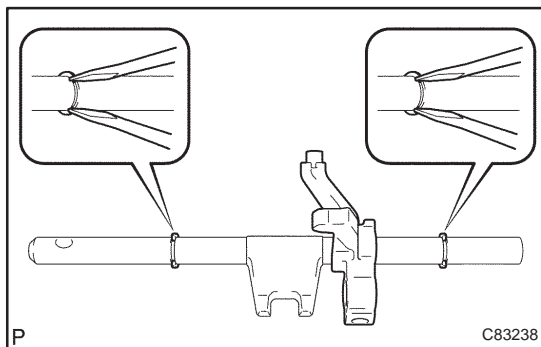


- (b) Using 2 screwdriver and a hammer, remove the 2 shift fork shaft snap rings from the gear shift fork shaft No. 3.
- (c) Remove the reverse shift fork from the gear shift fork shaft No.3.

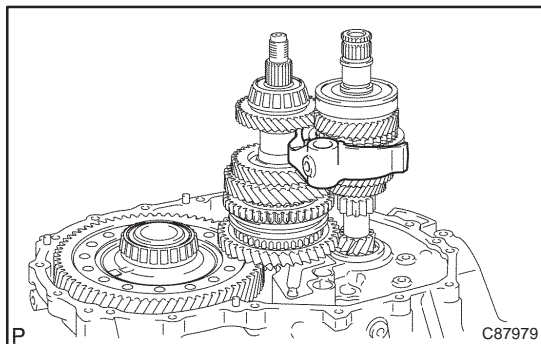


#### 44. REMOVE GEAR SHIFT FORK NO.2

- (a) Remove the gear shift fork No.2 from the input shaft assy.

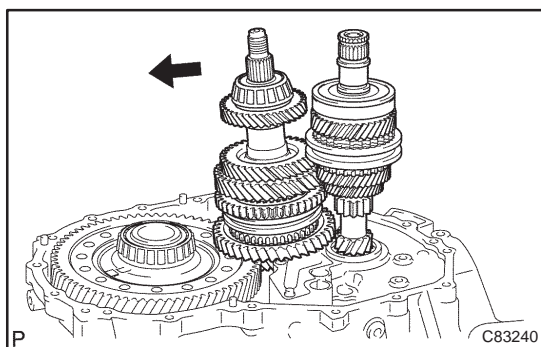


#### 45. REMOVE INPUT SHAFT ASSY

- (a) Incline the output shaft then remove the input shaft from the manual transaxle case.

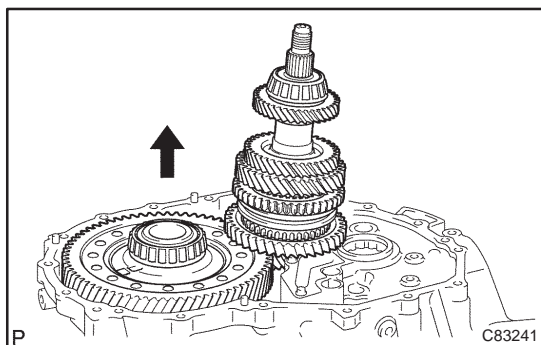


#### 46. REMOVE OUTPUT SHAFT ASSY

- (a) Remove the output shaft from the manual transaxle case.

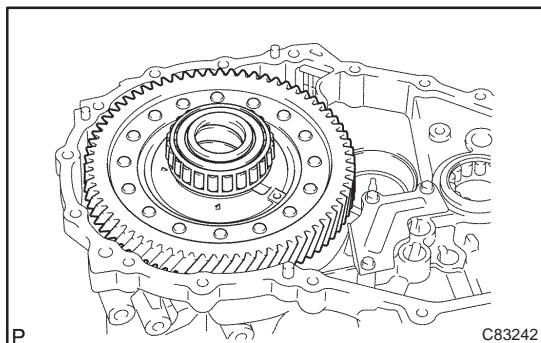


#### 47. REMOVE DIFFERENTIAL CASE ASSY


- (a) Remove the differential case assy from the manual trans-axle case.

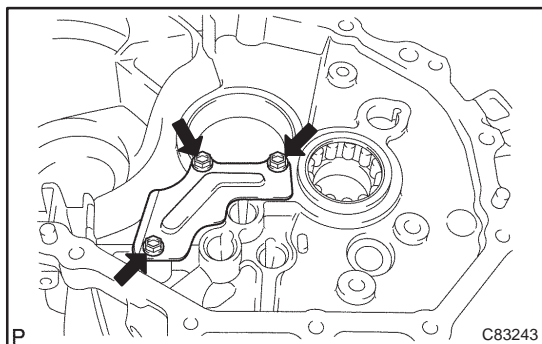**48. REMOVE MANUAL TRANSAXLE CASE RECEIVER**


- (a) Remove the 3 bolts and manual transaxle case receiver from the manual transaxle case.

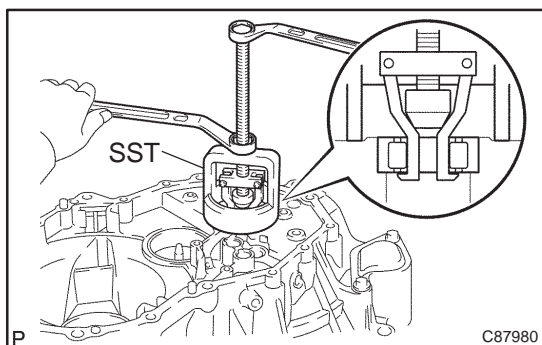**49. REMOVE INPUT SHAFT FRONT BEARING**


- (a) Using SST, remove the input shaft front bearing (outer race) from the manual transaxle case.  
SST 09612-65014 (09612-01040, 09612-01050)

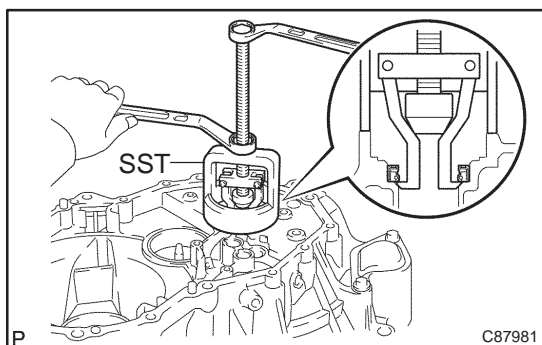**50. REMOVE FRONT TRANSAXLE CASE OIL SEAL**

- (a) Using SST, remove the manual transaxle case oil seal from the manual transaxle case.  
SST 09612-65014 (09612-01040, 09612-01050)

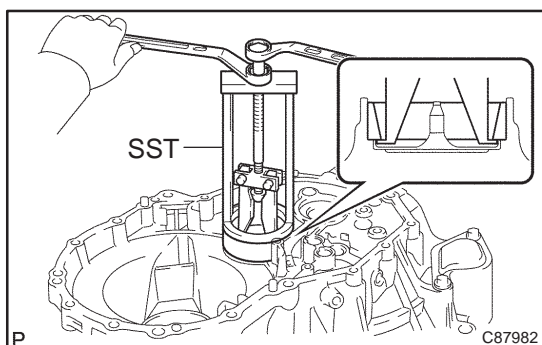
**51. REMOVE OUTPUT SHAFT FRONT BEARING**

- (a) Using SST, remove the output shaft front bearing (outer race) from the manual transaxle case.  
SST 09387-00040 (09387-02020, 09387-02010)

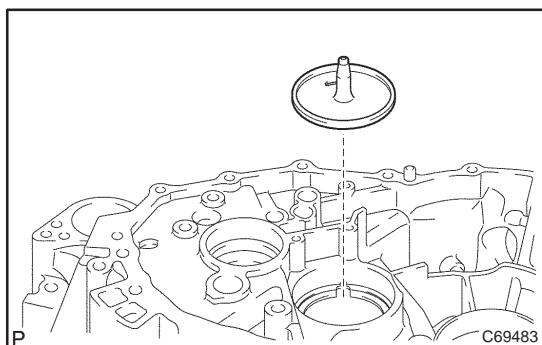**52. REMOVE OUTPUT SHAFT (MTM) COVER**


- (a) Remove the output shaft (MTM) cover from the manual transaxle case.

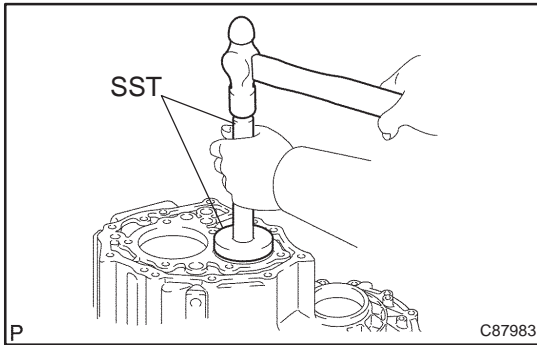

**53. REMOVE OUTPUT SHAFT REAR BEARING**


- (a) Using SST, remove the output shaft rear bearing from the manual transmission case (outer race).

SST 09950-60010 (09951-00680), 09950-70010 (09951-07100)

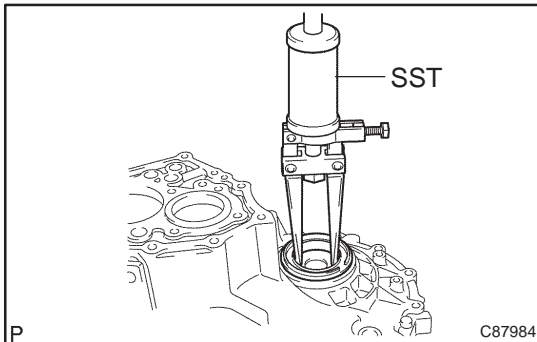**54. REMOVE TRANSMISSION CASE OIL SEAL**

- (a) Using SST, remove the transmission case oil seal from the manual transmission case.


SST 09308-00010

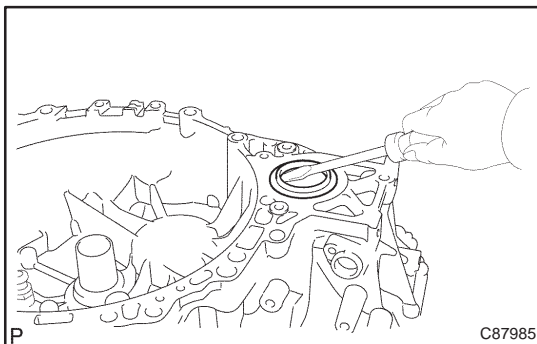**55. REMOVE FRONT TRANSAXLE CASE COVER OIL SEAL**


- (a) Using a screwdriver, remove the front transaxle case cover oil seal.

**HINT:**

Tape the screwdriver tip before use.

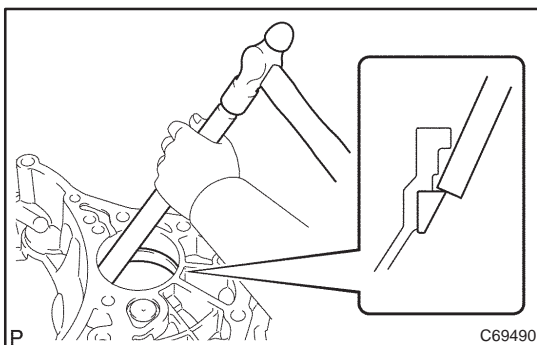
**56. REMOVE FR DIFFERENTIAL CASE REAR TAPERED ROLLER BEARING**

- (a) Using a brass bar and a hammer, remove the FR differential case rear tapered roller bearing (outer race) from the manual transaxle case.

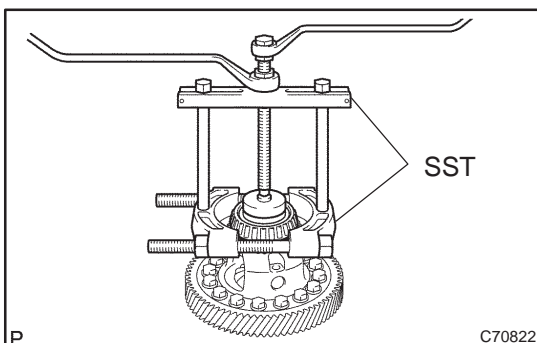

- (b) Using SST, remove the front differential case rear tapered roller bearing from the front differential case.


SST 09950-00020, 09950-00030, 09950-40011 (09957-04010), 09950-60010 (09951-00560)

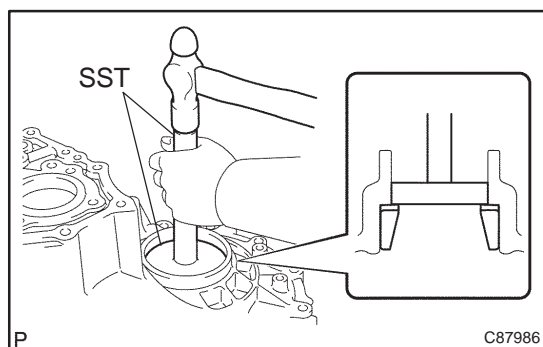

## 57. REMOVE FR DIFFERENTIAL CASE FRONT TAPERED ROLLER BEARING


- (a) Using SST and hammer, remove the FR differential case front tapered roller bearing (outer race) and FR differential case rear shim from the manual transmission case.

SST 09950-60020 (09951-00790), 09950-70010 (09951-07100)

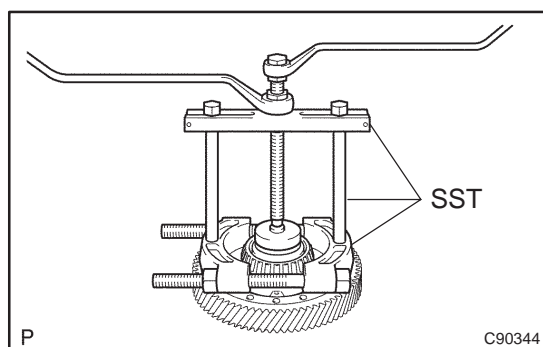

- (b) Using SST, remove the FR differential case front tapered roller bearing (inner race) from front differential case.


SST 09950-00020, 09950-00030, 09950-40011 (09957-04010), 09950-60010 (09951-00490)

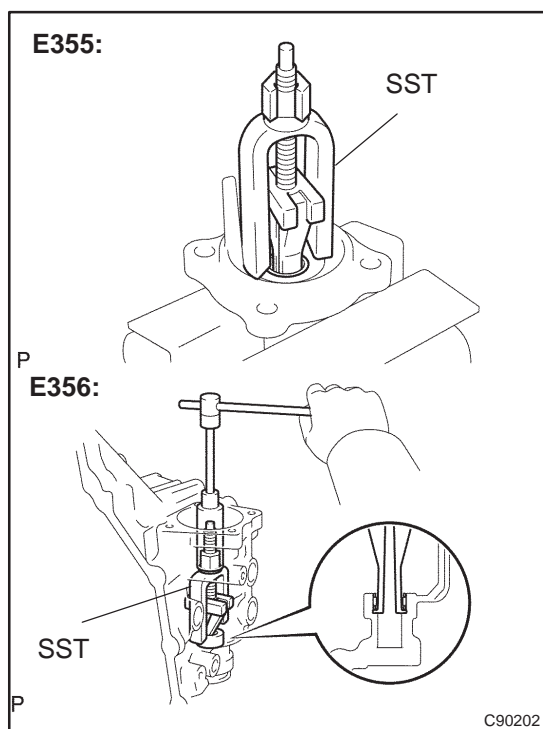

## 58. REMOVE SHIFT & SELECT LEVER SHAFT BIMETAL FORMED BUSH

- (a) Using SST, remove the shift & select lever shaft bimetal formed bush.

SST 09319-60020

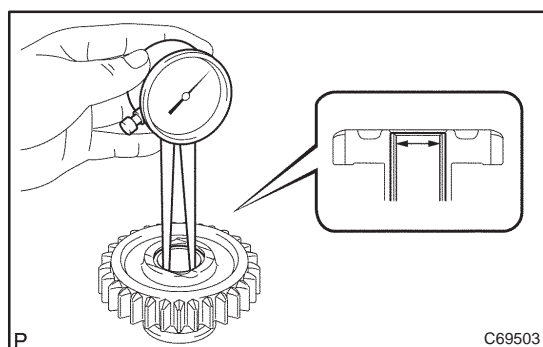


## 59. INSPECT REVERSE IDLER GEAR SUB-ASSY

- (a) Using a callipers gauge, measure the inside diameter of the reverse idler gear.

Inside diameter: mm (in)

Standard inside diameter	Maximum inside diameter
20.056-20.074 (0.7962-0.7969)	20.074 (0.7969)

If the inside diameter is exceeds than the maximum, replace the reverse idler gear.

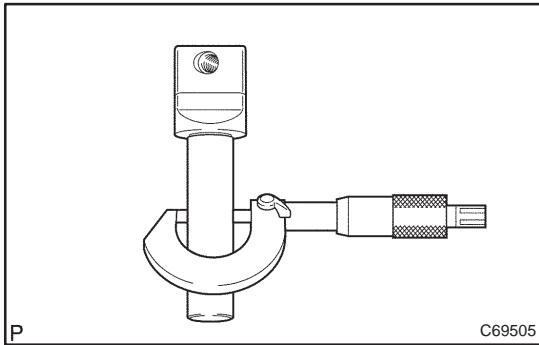


- (b) Using a micro meter, measure the outer diameter of the reverse idler gear shaft.

**Outer diameter: mm (in)**


Standard outer diameter	Minimum outer diameter
19.984–20.000 (0.7934 – 0.7940)	19.984 (0.7934)

If the outer diameter is less than the minimum, replace the reverse idler gear shaft.

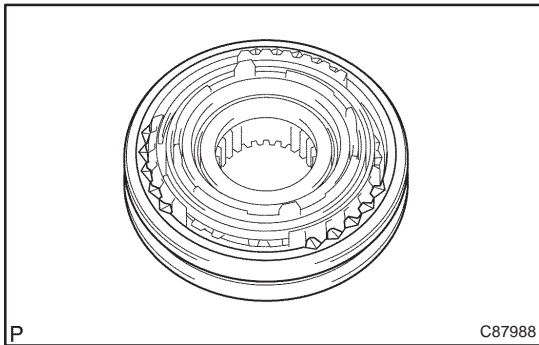


## 60. REMOVE TRANSMISSION HUB SLEEVE NO.3

- (a) Remove the transmission hub sleeve No.3 from the transmission clutch hub No.3.

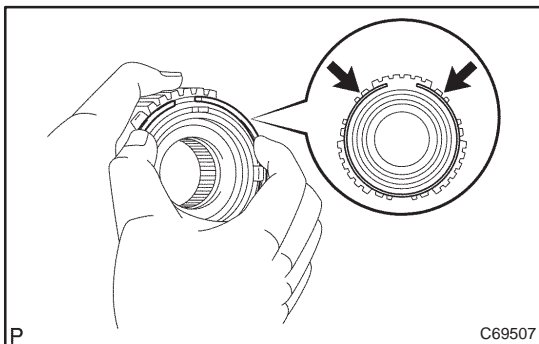


## 61. REMOVE SYNCHROMESH SHIFTING KEY SPRING NO.3

- (a) Push the synchronesh shifting key spring No.3 then remove the 2 synchronesh shifting key spring No.3 from the transmission clutch hub No.3.

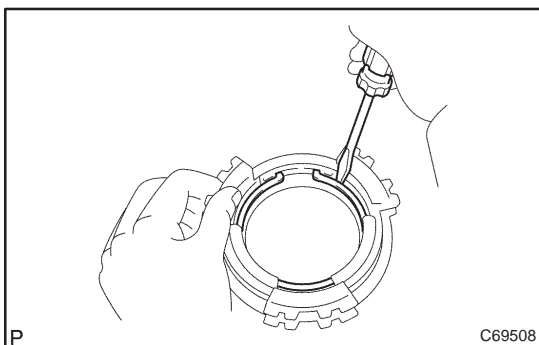


## 62. REMOVE SYNCHRONIZER PULL RING

- (a) Using a screwdriver, remove the synchronizer pull ring snap ring.  
(b) Remove the synchronizer pull ring, synchronizer outer ring No.5, synchronizer inner ring No.5 and synchronizer middle ring No.5 from the synchronizer ring No.5.

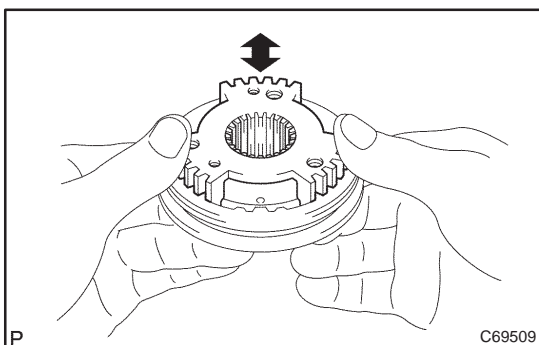

## 63. INSPECT TRANSMISSION CLUTCH HUB NO.3

- (a) Inspect the sliding condition between transmission clutch hub No.3 and transmission hub sleeve No.3.  
(b) Inspect tip of spline gear on the transmission hub sleeve No.3 for wear.

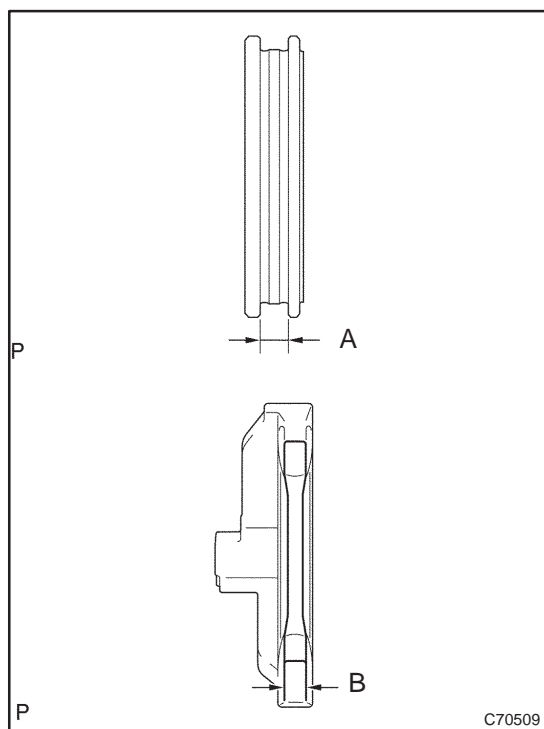


#### 64. INSPECT TRANSMISSION HUB SLEEVE NO.3

- (a) Using vernier calipers, measure the transmission hub sleeve No.3 groove and the thickness of the claw part on gear shift fork No.3, and calculate the clearance.

**Standard clearance:**

**0.15–0.35 mm (0.005600 – 0.0139 in.) {A – B}**

If the clearance is out of the specification, replace the transmission hub sleeve No.3 and gear shift fork No.3 with the new one.

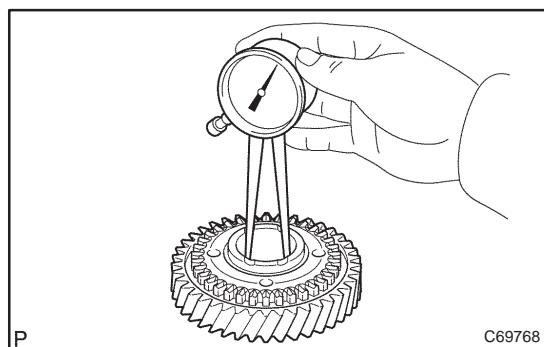


#### 65. INSPECT 5TH GEAR

- (a) Using a calipers gauge, measure the inner diameter of the 5th gear.

**Inner diameter: mm (in)**


Standard inner diameter	Maximum inner diameter
34.981–34.997 (1.3887 – 1.3893)	34.997 (1.3893)

If the inner diameter exceeds the maximum, replace the 5th gear.

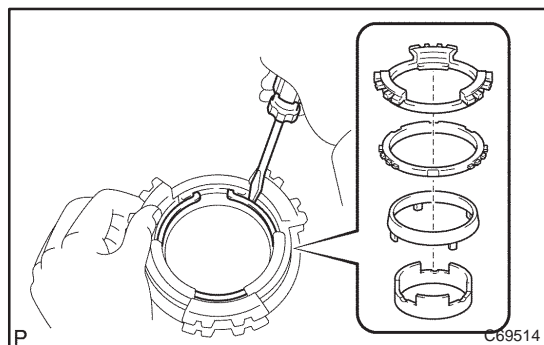


#### 66. INSTALL SYNCHRONIZER PULL RING

- (a) Install the synchronizer middle ring No.5, synchronizer ring outer No.5 and synchronizer pull ring to the synchronizer ring inner No.5. using a screwdriver, fix with snap ring.

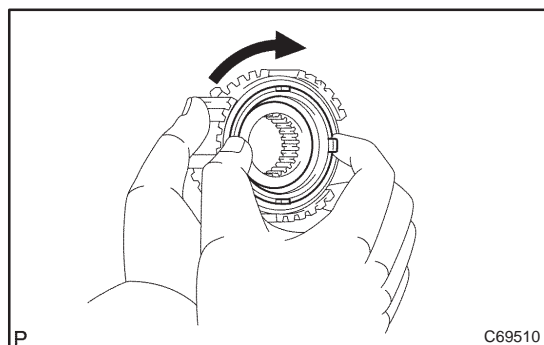


#### 67. INSPECT SYNCHRONIZER RING MIDDLE NO.5

- (a) Check that the synchronizer ring middle No.5 rotates smoothly.

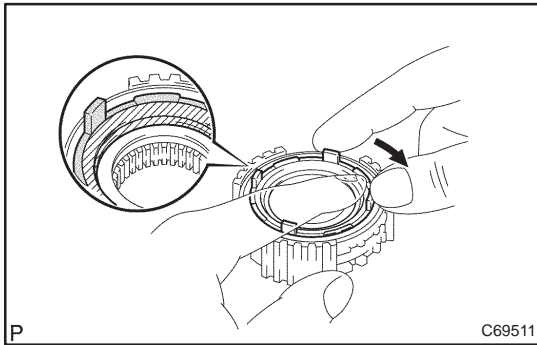

- (b) Check the the synchronizer ring middle No.5 does not rotate while it is being pushed to the clutch hub No.3.

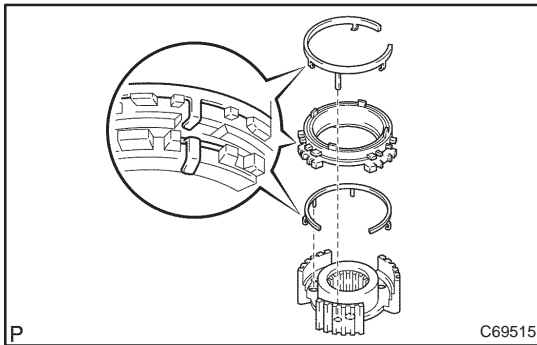

#### 68. INSTALL SYNCHROMESH SHIFTING KEY SPRING NO.3

- (a) Install the synchromesh shifting key spring No.3 to the transmission clutch hub No.3.

##### NOTICE:

**Align the projection of the shifting key spring with the hole of the clutch hub No. 3 and install them.**

- (b) Install the synchronizer ring set and synchromesh shifting key spring No.3 to the transmission clutch hub No.3.

##### NOTICE:

- Install the shifting key spring claw to the center of the teeth of the synchronizer ring.
- Align the projection of the shifting key spring with the hole of the clutch hub No. 3 and install them.


#### 69. INSTALL SHIFT & SELECT LEVER SHAFT BIMETAL FORMED BUSH


- (a) Using SST, install the shift & select lever shaft bimetal formed bush.

SST 09950-60010 (09951-00180), 09950-70010 (09951-07100)

##### Clearance:


**0.081 – 0.149 mm (0.0032 – 0.0059 in.)**

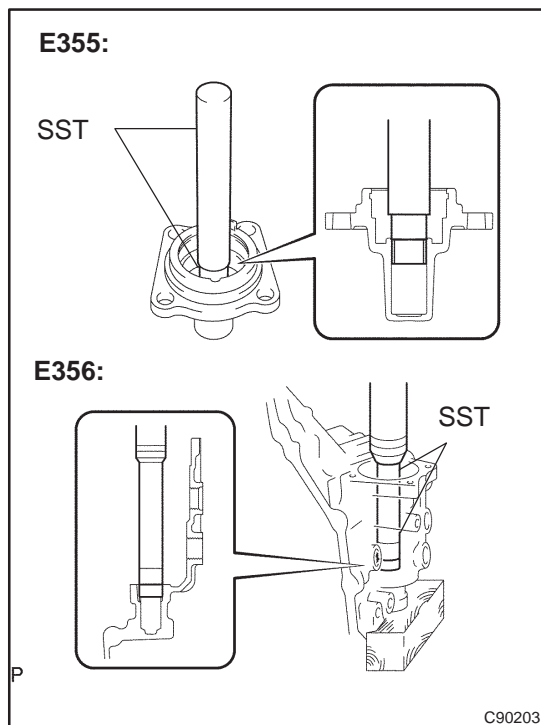

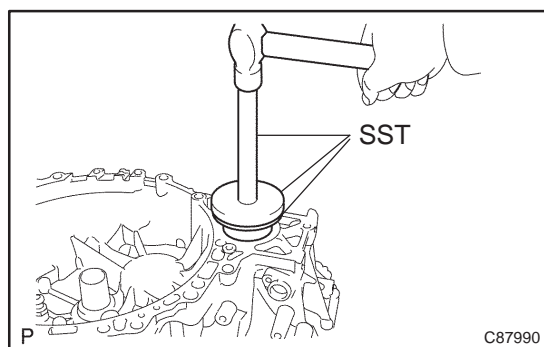


## 70. INSTALL FRONT TRANSAXLE CASE COVER OIL SEAL

- (a) Using SST and a hammer, install the front transaxle case cover oil seal.  
SST 09316-20011, 09950-60020 (09951-00910), 09950-70010 (09951-07150)
- (b) Coat the lip of front transaxle case cover oil seal with MP grease.

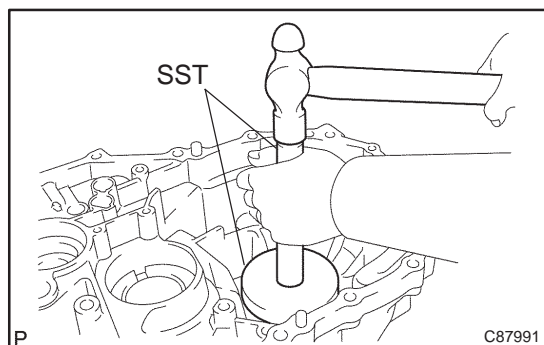


## 71. INSTALL FR DIFFERENTIAL CASE REAR TAPERED ROLLER BEARING

- (a) Using SST and a hammer, install the FR differential case rear tapered roller bearing (outer race) to the front trans-axle case.  
SST 09950-60020 (09951-00910), 09950-70010 (09951-07100)

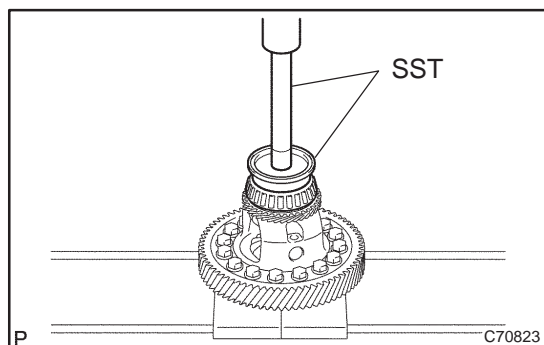

- (b) Using SST and press, install the FR Differential case rear tapered roller bearing (inner race) to the front differential case.  
SST 09950-70010 (09951-07100, 09951-07150), 09608-10010

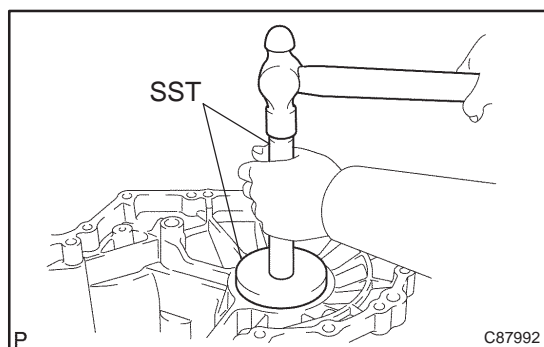


## 72. INSTALL FR DIFFERENTIAL CASE FRONT TAPERED ROLLER BEARING

- (a) Install the front differential case shim rear.
- (b) Using SST and a hammer, install FR differential case front tapered roller bearing (outer race).  
SST 09950-60020 (09951-00890), 09950-70010 (09951-07100)


### NOTICE:

**Install the same thickness of case shim as the removed one.**



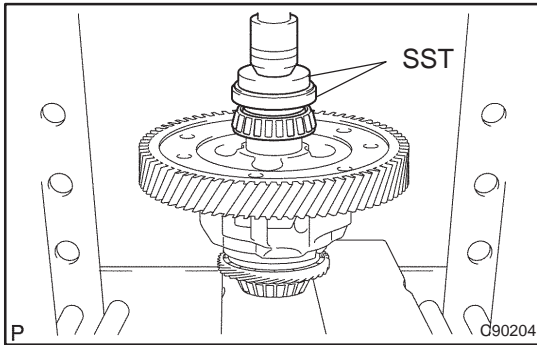


- (c) Using SST, remove the FR differential case front tapered roller bearing (inner race)  
 SST 09631-12090, 09950-60010 (09951-00600), 09950-70010 (09951-07100)

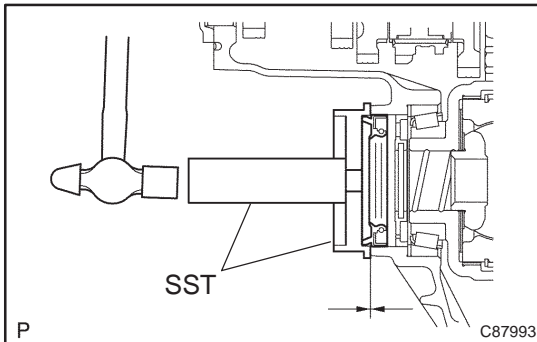


### 73. INSTALL TRANSMISSION CASE OIL SEAL

- (a) Using SST and a hammer, install the transmission case oil seal to the manual transmission case.  
 SST 09608-32010, 09950-70010 (09951-07150)  
 (b) Coat the lip of transmission case oil seal with MP grease.

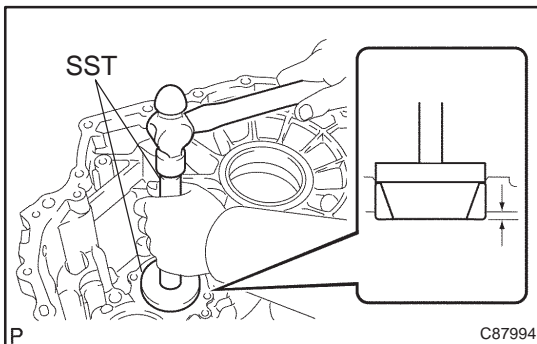

### 74. INSTALL OUTPUT SHAFT REAR BEARING

- (a) Using SST and a hammer, install the output shaft rear bearing (outer race) to the manual transmission case.  
 SST 09950-60020 (09951-00680), 09950-70010 (09951-07100)  
**Clearance: 3.8 – 4.4 mm (0.1509 – 0.1747 in.)**

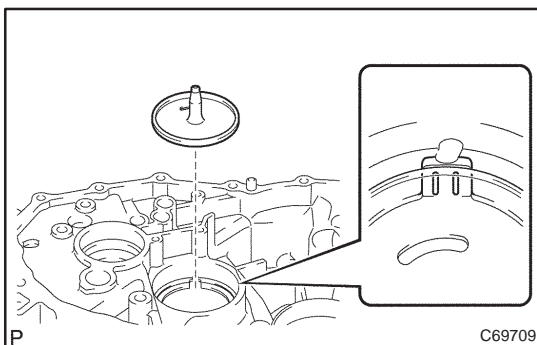


### 75. INSTALL OUTPUT SHAFT (MTM) COVER

- (a) Coat the output shaft (MTM) cover with MP grease, install it to the manual transaxle case.


#### NOTICE:

**Align the projection of the output shaft with the transmission grooves and install them.**

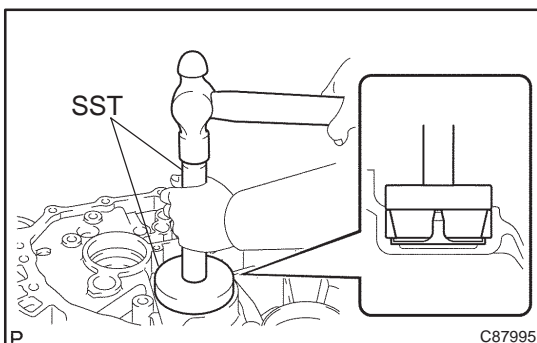


### 76. INSTALL OUTPUT SHAFT FRONT BEARING

- (a) Using SST and a hammer, install the output shaft front bearing (outer race).  
 SST 09950-60020 (09951-00730), 09950-70010 (09951-07100)

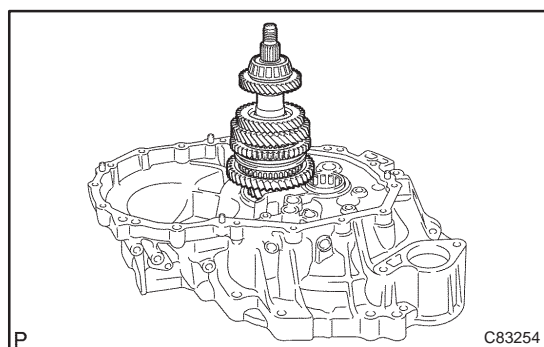
**77. ADJUST OUTPUT SHAFT BEARING PREROAD**

- (a) Install the output shaft to the manual transaxle case.

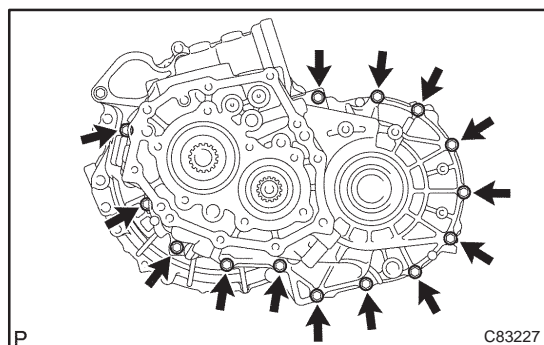


- (b) Install the transmission case with 14 bolts to the manual transaxle case.

**Torque: 29 N·m (300 kgf·cm, 21 ft·lbf)**

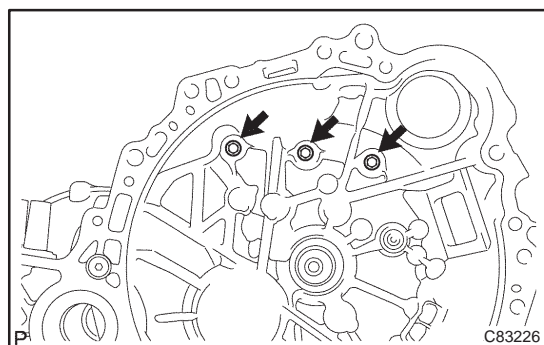

- (c) Install the 3 bolts to the manual transaxle side.


**Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)**

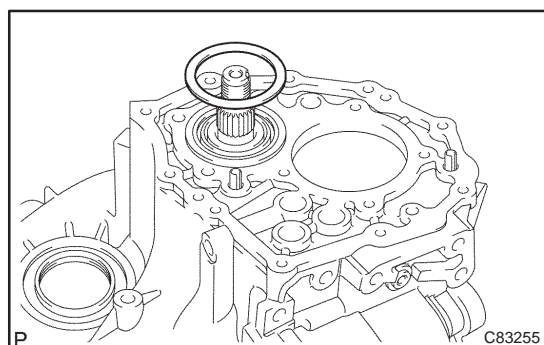

- (d) Install the output shaft rear bearing shim to the output shaft.

**HINT:**


Install the same thickness of case shim as the removed one.

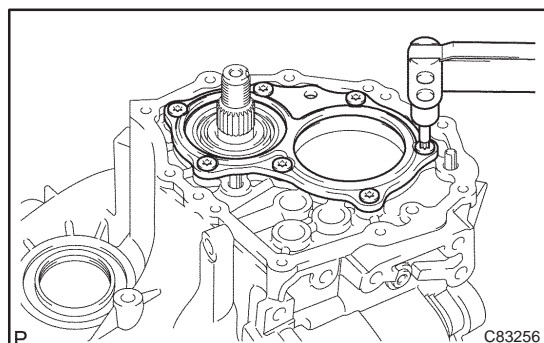

- (e) Using a torx socket wrench(T45), install the bearing retainer RR with 7 screws to the manual transmission case.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

- (f) Install the new output rear set nut to the output shaft.

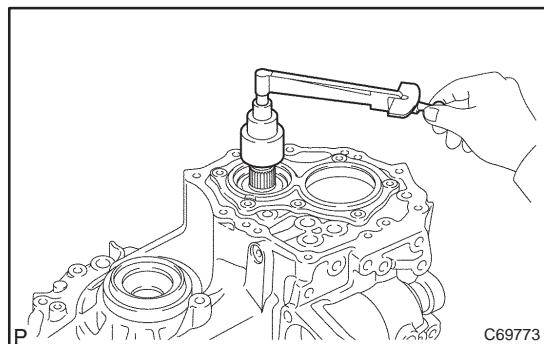

- (g) Turn the output shaft in both directions to get it to smooth.  
 (h) Using a socket wrench and torque wrench, inspect the preload.

**Preload:mm (in.)**

Bearing	Torque
New	0.8–1.6 (8.16 – 16.32, 7.1–14.2)
Used	0.5–1.0 (5.10 – 10.20, 4.4 – 8.6)

- (i) If the preload is out of the specification, select the output shaft rear bearing shim and adjust it.


**HINT:**


The preload of the output shaft rear bearing shim varies in torque from about 0.04 to 0.06 N·m is one size.

**Shim: mm (in.)**


Part No.	thickness:mm(in.)	Make
90564 – 59001	1.30 (0.0516)	0
90564 – 59002	1.35 (0.0536)	1
90564 – 59003	1.40 (0.0556)	2
90564 – 59004	1.45 (0.0576)	3
90564 – 59005	1.50 (0.0596)	4
90564 – 59006	1.55 (0.0615)	5
90564 – 59007	1.60 (0.0635)	6
90564 – 59008	1.65 (0.0655)	7
90564 – 59009	1.70 (0.0675)	8
90564 – 59010	1.75 (0.0695)	9
90564 – 59011	1.80 (0.0715)	A
90564 – 59012	1.85 (0.0734)	B
90564 – 59013	1.90 (0.0754)	C
90564 – 59014	1.95 (0.0774)	D
90564 – 59015	2.00 (0.0794)	E
90564 – 59016	2.05 (0.0814)	F
90564 – 59017	2.10 (0.0834)	G
90564 – 59018	2.15 (0.0854)	H
90564 – 59019	2.20 (0.0873)	J
90564 – 59020	2.25 (0.0893)	K
90564 – 59021	2.30 (0.0913)	L
90564 – 59022	2.35 (0.0933)	M
90564 – 59023	2.40 (0.0953)	N
90564 – 59024	2.45 (0.0973)	P
90564 – 59025	2.50 (0.0993)	Q

- (j) Remove the output shaft rear set nut from the output shaft.  
 (k) Using a torx socket wrench(T45), remove the 7 screws and bearing retainer RR from the manual transmission case.

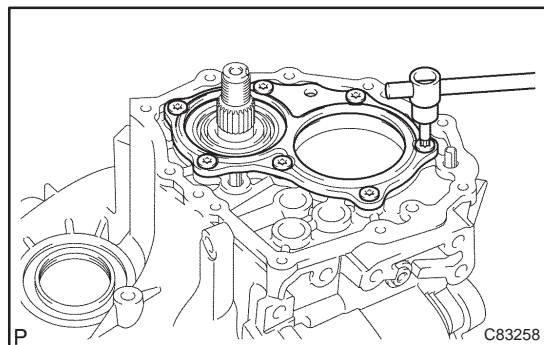


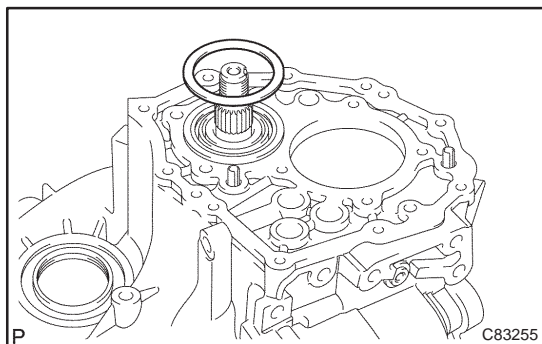


- (l) Remove the output shaft rear bearing shim from the output shaft.

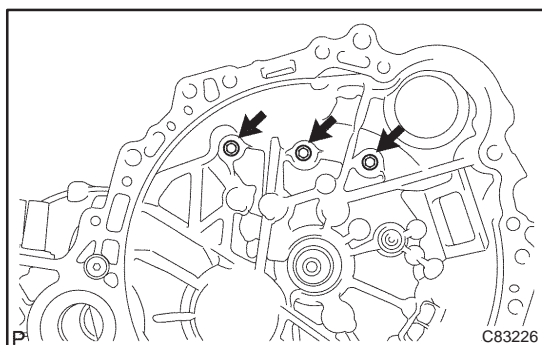


- (m) Remove the 3 bolts.

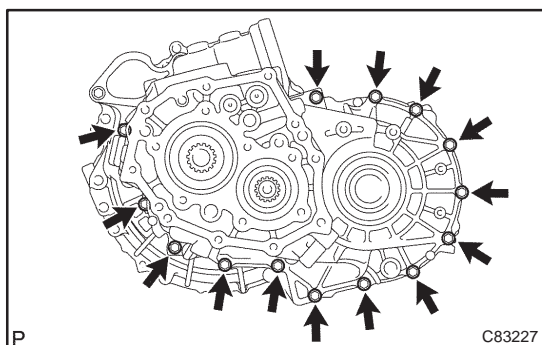


- (n) Remove the 14 bolts and manual transmission case from the manual transaxle case.

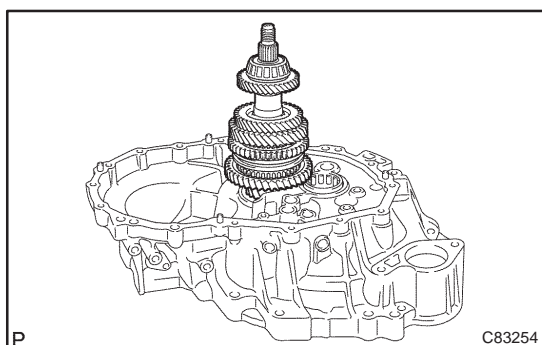

- (o) Remove the output shaft assy from the front manual transaxle case.

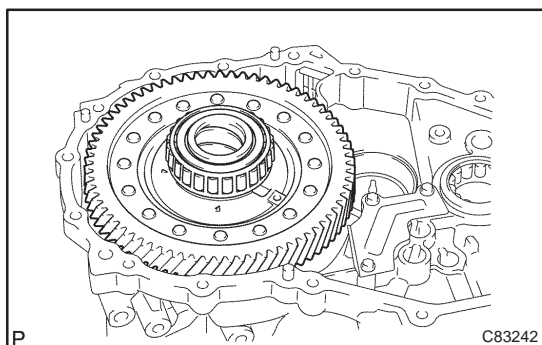


- 78. ADJUST TAPERED ROLLER BEARING PRELOAD**  
(a) Install differential case assy to the manual transaxle case.

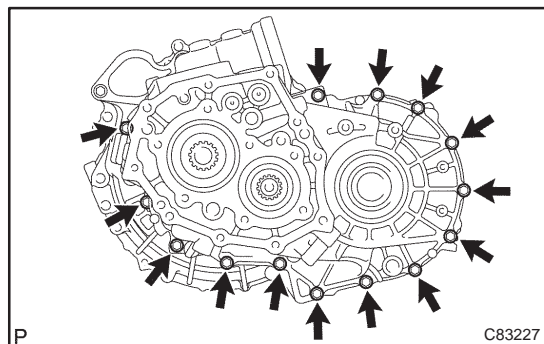

- (b) Install the 14 bolts and manual transmission case to the manual transaxle case.


**Torque: 29 N·m (300 kgf·cm, 21 ft·lbf)**

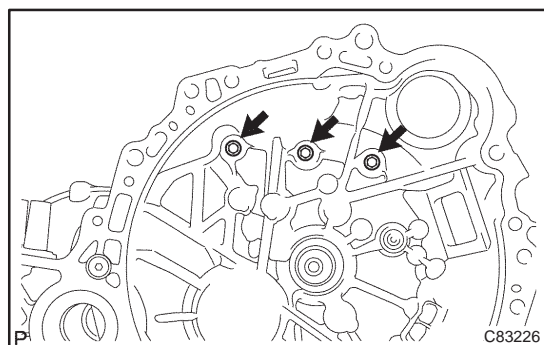

- (c) Install the 3 bolts and front manual transaxle case side.

**Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)**

- (d) Turn the differential case in both directions to get it to smooth.

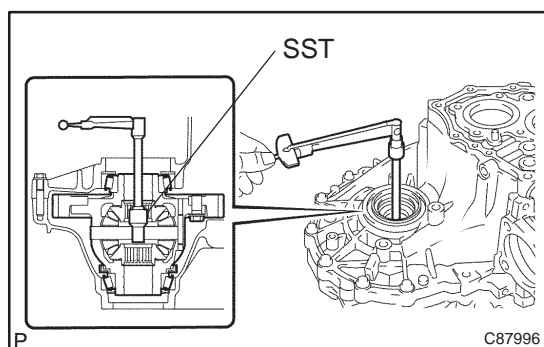

- (e) Using SST and torque wrench, inspect preload.

SST 09564-32011

**Preload: N·m (kgf·cm, 22 ft·lbf)**

Bearing	Torque
New	0.8 – 0.16 (8.15 – 1.63, 7.1–14.2)
Used	0.5 – 1.0 (5.09 – 10.1, 4.4 – 8.6)

If the preload is out of the specification, select the front differential case shim RR and adjust it.


HINT:

The preload of the front differential case shim RR varies in torque from about 0.04 to 0.06 N·m is one size.


**Shim:mm (in.)**

Part No.	Thickness	Mark
90564-56055	2.00 (0.0794)	0
90564-56056	2.05 (0.0814)	1
90564-56057	2.10 (0.0834)	2
90564-56058	2.15 (0.0854)	3
90564-56059	2.20 (0.0873)	4
90564-56060	2.25 (0.0893)	5
90564-56061	2.30 (0.0913)	6
90564-56062	2.35 (0.0933)	7
90564-56063	2.40 (0.0953)	8
90564-56064	2.45 (0.0973)	9
90564-56065	2.50 (0.0993)	A
90564-56066	2.55 (0.1012)	B
90564-56067	2.60 (0.1032)	C
90564-56068	2.65 (0.1052)	D
90564-56069	2.70 (0.1071)	E
90564-56070	2.75 (0.1092)	F


Part No.	Thickness	Mark
90564-56071	2.80 (0.1112)	G
90564-56072	2.85 (0.1131)	H

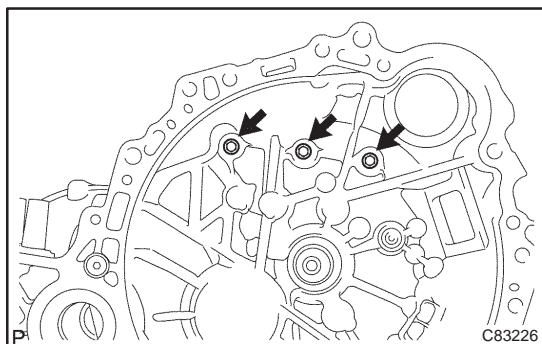


(f) Remove the 3 bolts.

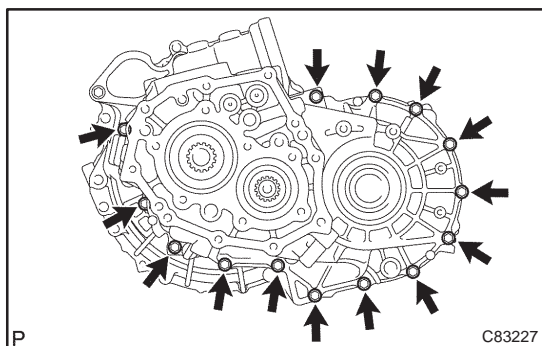

(g) Remove the 14 bolts and manual transmission case to the manual transaxle case.

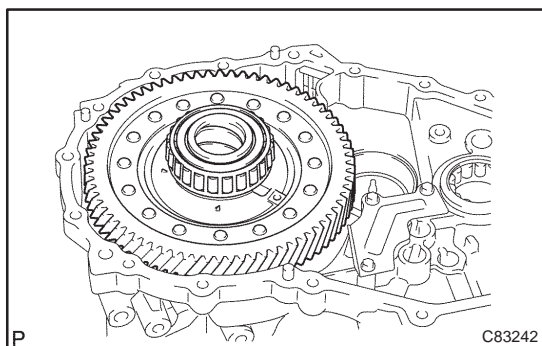

(h) Remove the differential case assy from the manual transaxle case.

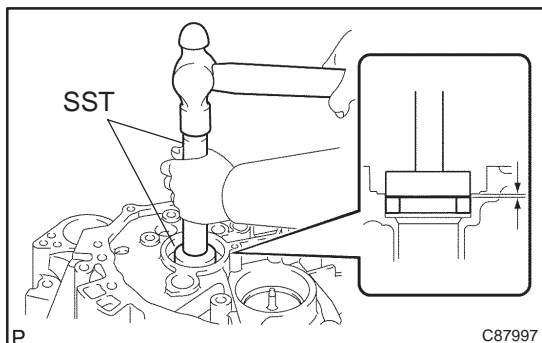

## 79. INSTALL FRONT TRANSAXLE CASE OIL SEAL


(a) Using SST and a hammer, install the front transaxle case oil seal No. 1 to the manual transaxle case.

SST 09950-60010 (09951-00420), 09950-70010 (09951-07150)

(b) Coat the lip of front transaxle case oil seal No. 1 with MP grease.

**Clearance: 1 – 2 mm (0.0397 – 0.0794 in.)**

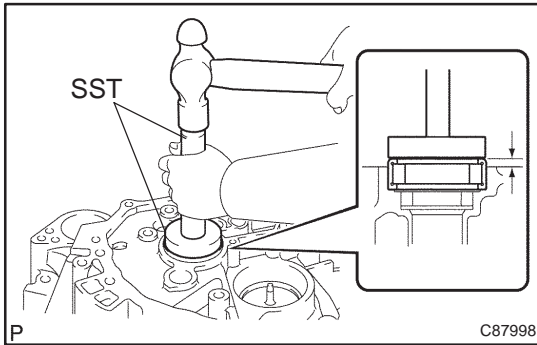


**80. INSTALL INPUT SHAFT FRONT BEARING**

- (a) Coat the input shaft front bearing with gear oil, install it to the manual transaxle case.


SST 09950-60010 (09951-00570), 09950-70010 (09951-07150)

**Clearance: 4.28 – 4.60 mm (0.1699 in. – 0.1826 in.)**

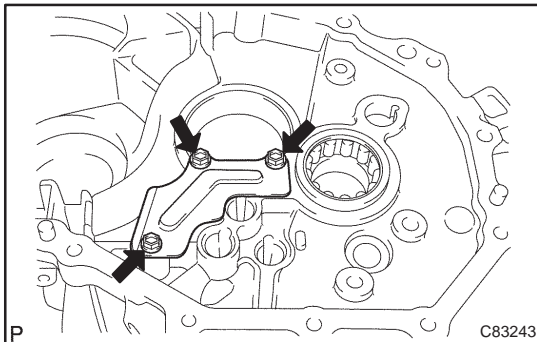
**81. INSTALL MANUAL TRANSAXLE CASE RECEIVER**

- (a) Install the 3 bolts and manual transaxle case receiver to the manual transaxle case.


**Torque: 7 N·m (70 kgf·cm, 62 ft·lbf)**

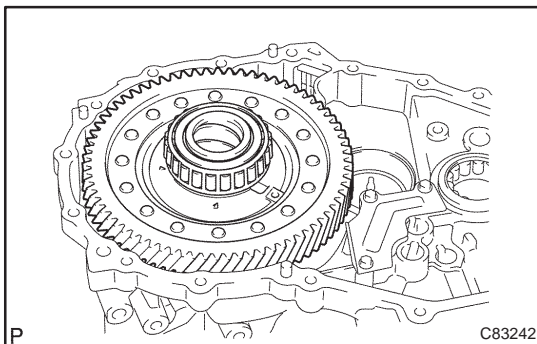**82. INSTALL DIFFERENTIAL CASE ASSY**


- (a) Coat the differential case taper roller bearing with gear oil, install the differential case assy to the manual transaxle case.

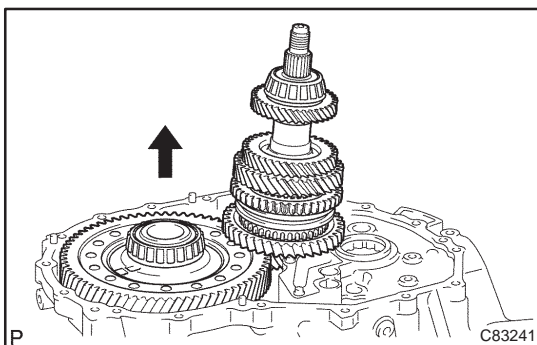**83. INSTALL OUTPUT SHAFT ASSY**


- (a) Apply gear oil to each sliding part of the output shaft assy.  
(b) Lift the differential case assy up, leaning the output shaft assy install to the manual transaxle case.

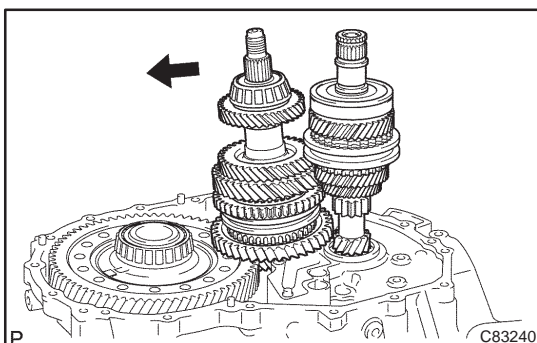**84. INSTALL INPUT SHAFT ASSY**


- (a) Apply gear oil to each sliding part of the input shaft assy.  
(b) Leaning output shaft assy, install the input shaft assy to the manual transaxle case.

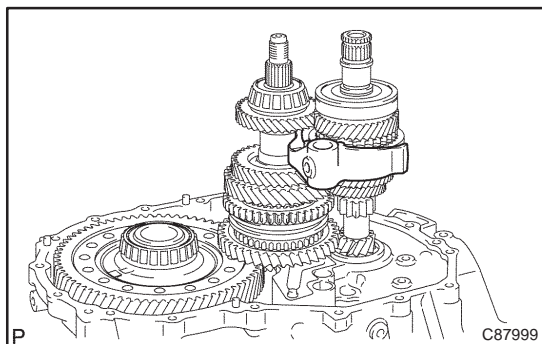**85. INSTALL GEAR SHIFT FORK NO.2**


- (a) Coat the gear shift fork No. 2 with gear oil, install it to the input shaft assy.

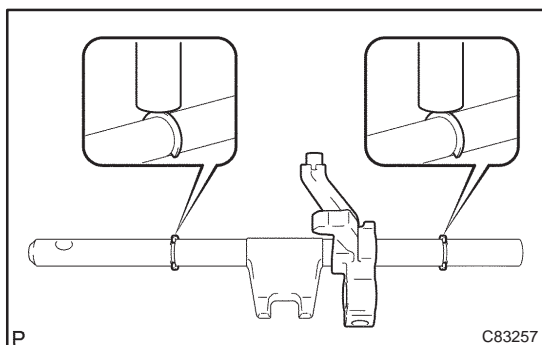**86. INSTALL GEAR SHIFT FORK NO.3**


- (a) Install the gear shift fork No.3 to the gear shift fork shaft No. 3.  
 (b) Using a brass bar and hammer, install the 2 shift fork shaft snap rings to the gear shift fork shaft.

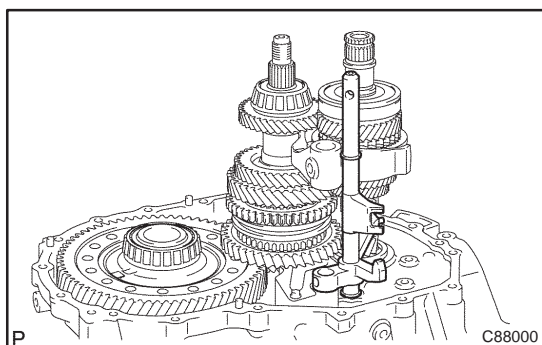


- (c) Apply gear oil to each sliding part of the gear shift fork shaft No.3, install it to the manual transaxle case.

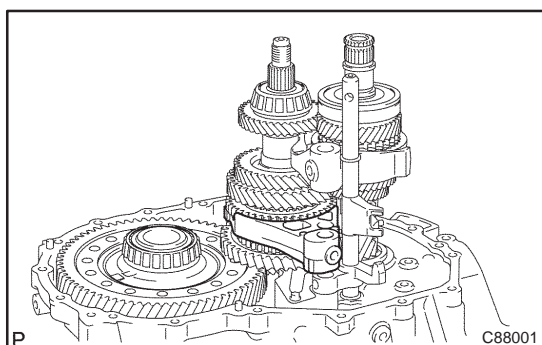**87. INSTALL GEAR SHIFT FORK NO.1**


- (a) Apply gear oil to each sliding part of the gear shift fork No.1, install it to the output shaft assy.

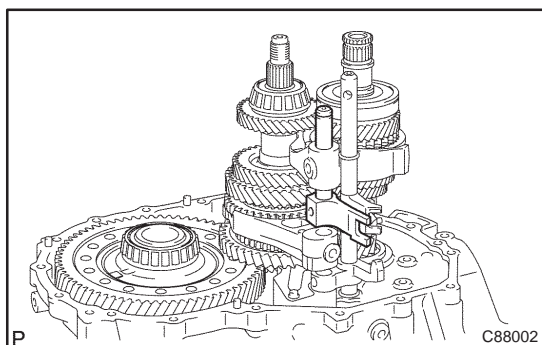**88. INSTALL GEAR SHIFT FORK SHAFT NO.2**

- (a) Install the gear shift head No.1 to the gear shift fork shaft No.2.  
 (b) Apply gear oil to each sliding part of the gear shift fork shaft No.2, install it to the manual transaxle case.

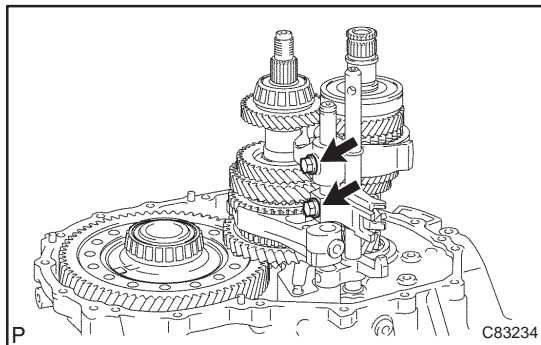


- (c) Install the 2 shift fork bolts to the gear shift head No.1.  
**Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)**

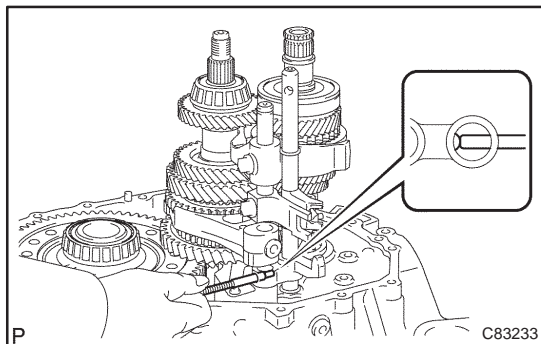


## 89. INSTALL REVERSE SHIFT FORK ROLLER

- (a) Using a magnetic finger, install the reverse shift fork roller to the reverse shift fork.

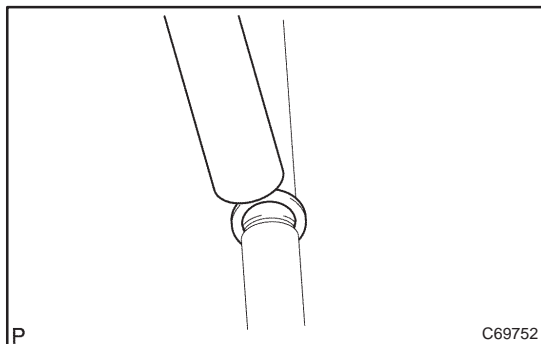


## 90. INSTALL GEAR SHIFT FORK SHAFT NO.1


- (a) Using a brass bar and hammer, install the shift fork shaft snap ring to the shift fork shaft No.1.

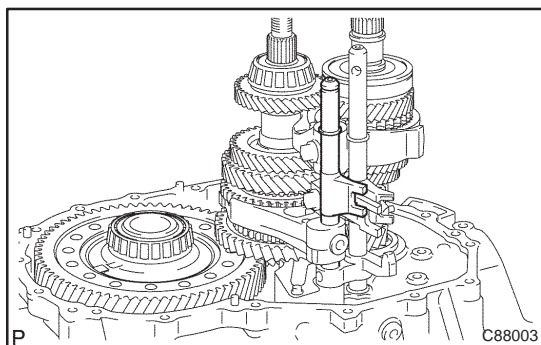

- (b) Install the gear shift fork shaft No. 1 to the manual trans-axle case.

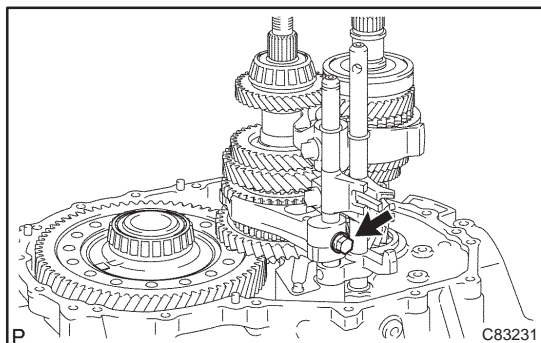


- (c) Install the shift fork bolt to the gear shift fork No. 1.  
**Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)**

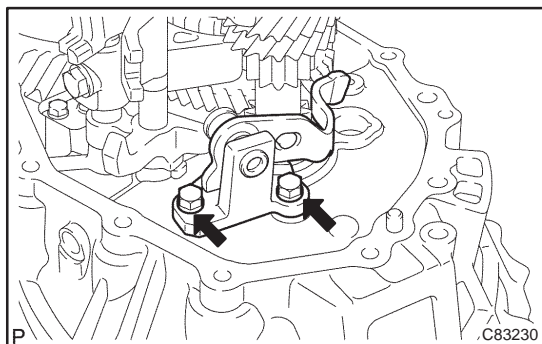

### 91. INSTALL REVERSE SHIFT ARM BRACKET ASSY


- (a) Install the 2 bolts and reverse shift arm bracket assy to the manual transaxle case.

**Torque: 17 N·m (175 kgf·cm, 13 ft·lbf)**

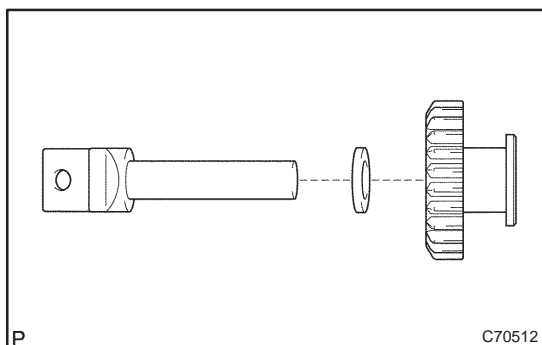

### 92. INSTALL REVERSE IDLER GEAR SUB-ASSY


- (a) Coat the reverse idler gear and reverse idler thrust washer with MP grease, install them to the reverse idler gear shaft.

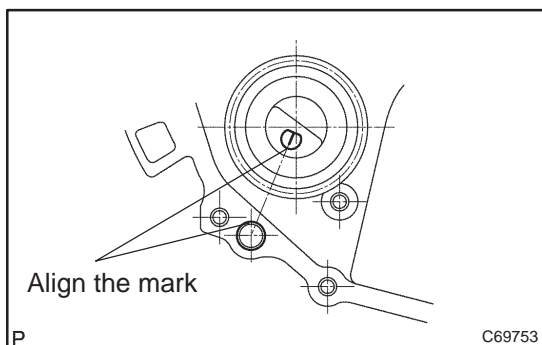

- (b) Install the reverse idler gear to the manual transaxle case.


**HINT:**

Align the mark of the reverse idler gear shaft with the hole of the bolt.

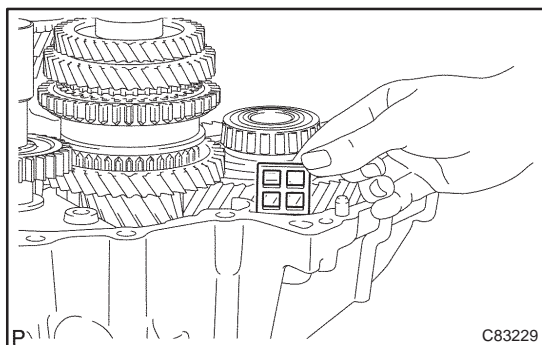

### 93. INSTALL TRANSMISSION MAGNET


- (a) Clean the transmission magnet, install it to the manual transaxle case.

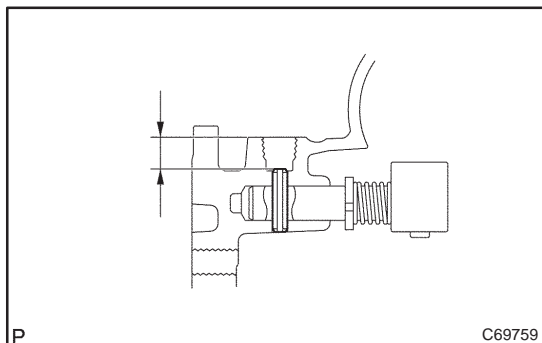

### 94. INSTALL REVERSE RESTRICT PIN ASSY


- (a) Using a pin punch (φ 5mm), install the reverse restrict pin and reverse restrict pin assy.

**Clearance: 12.5 – 13.5 mm (0.4963 – 0.53595 in.)**

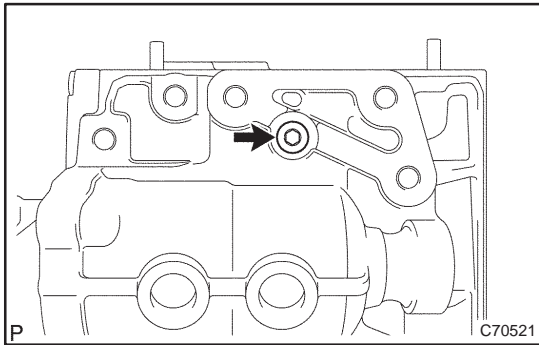

- (b) Coat the reverse restrict pin plug with adhesive 1324, using hexagon wrench(6mm), install the manual transmission case.

**Torque:13 N·m (133 kgf·cm, 9.6 ft·lbf)**

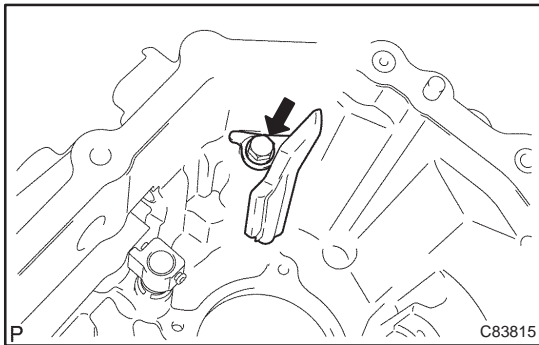


#### 95. INSTALL OIL RECEIVER PIPE NO.1 (MTM)

- (a) Install the bolt and oil receiver pipe No. 1 (MTM) to the manual transmission case.

**Torque:17 N·m (175 kgf·cm, 13 ft·lbf)**

HINT:

Tighten the oil receiver pipe No. 1 with the bolt while transmission case is being put.

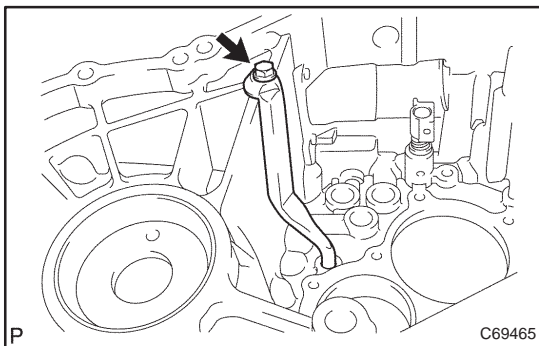


#### 96. INSTALL OIL RECEIVER PIPE NO.2 (MTM)

- (a) Install the bolt and oil receiver pipe No. 2 (MTM) to the manual transmission case.

**Torque:17 N·m (175 kgf·cm, 13 ft·lbf)**

HINT:

Tighten the oil receiver pipe No. 2 (MTM) with the bolt while manual transmission case is being put.

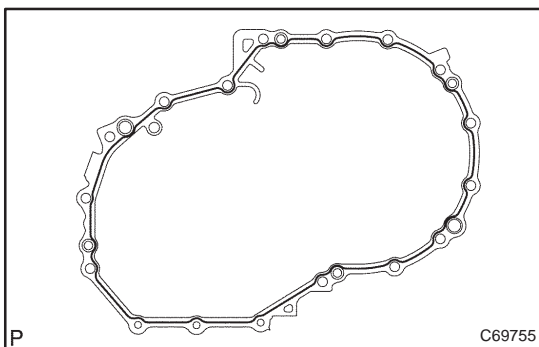


#### 97. INSTALL MANUAL TRANSMISSION CASE

- (a) Apply FIPG bead condition sequentially to the shown position in the diagram of the manual transmission case.


HINT:

Install within 10 minutes after applying FIPG.

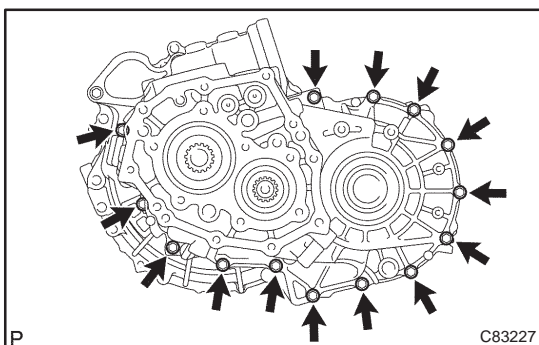

- (b) Install the manual transmission case and 14 bolts to the manual transaxle case.


**Torque:29 N·m (300 kgf·cm, 22 ft·lbf)**

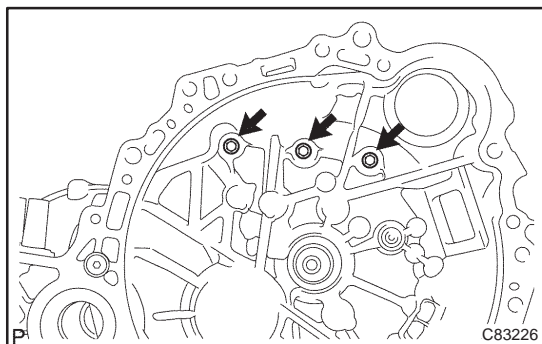

- (c) Install the 3 bolts to the manual transaxle case side.  
**Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)**


## 98. INSTALL CLUTCH TUBE BRACKET

- (a) Install the clutch tube with 3 bolt bracket.  
**Torque: 17 N·m (173 kgf·cm, 14 ft·lbf)**

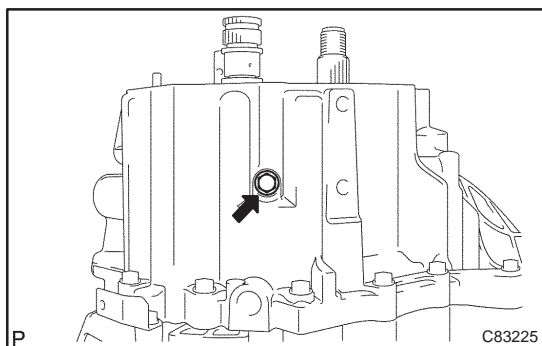

## 99. INSTALL REVERSE IDLER GEAR SHAFT BOLT


- (a) Coat the 4 bolts with sealant, install it and new gasket to the manual transmission case.  
**Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)**  
**Sealant:**  
**Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent**

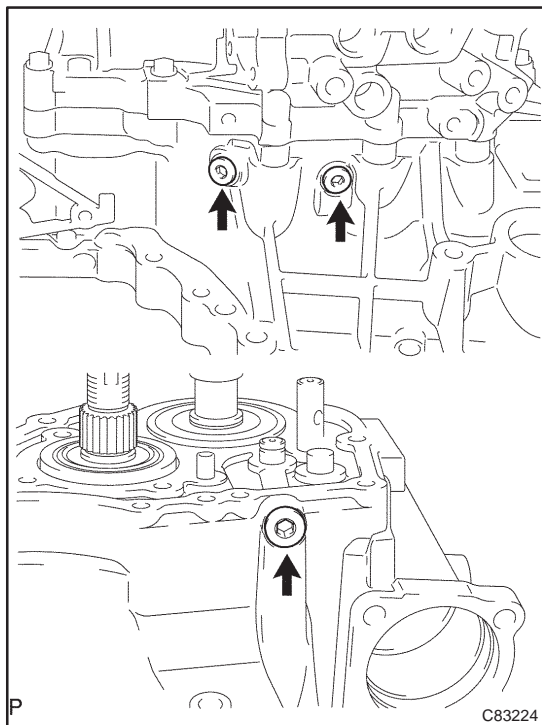


## 100. INSTALL SHIFT DETENT BALL PLUG

- (a) Coat the shift detente ball plug with sealant, install it with using a hexagon wrench(6 mm).  
**Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)**  
**Sealant:**  
**Part No. 08833 – 00080, THREE BOND 1344, LOCTITE**

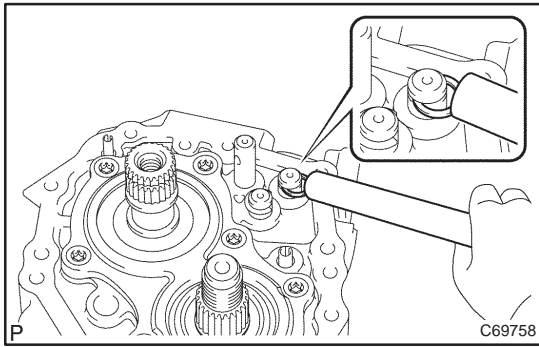


**101. INSTALL SHIFT FORK SHAFT SHAFT SNAP RING**


- (a) Using a brass bar and hammer, install the shift fork shaft snap ring to the gear shift fork shaft No. 1.

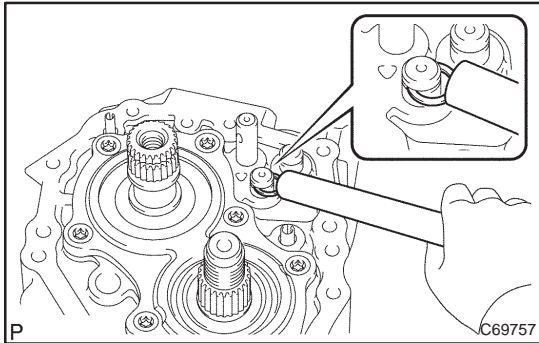

- (b) Using a brass bar and hammer, install the shift fork shaft snap ring to the gear shift fork shaft No. 2.

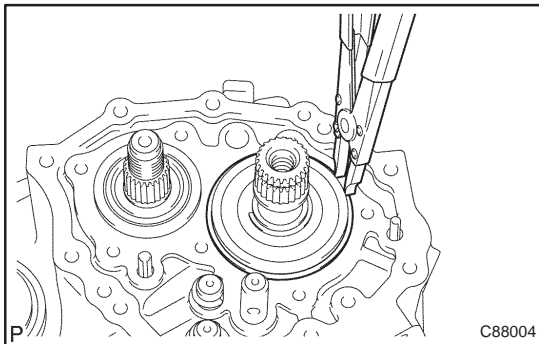**102. INSTALL INPUT SHAFT REAR BEARING SHAFT SNAP RING**


- (a) Using a snap ring expander, install the input shaft rear bearing hole snap ring.

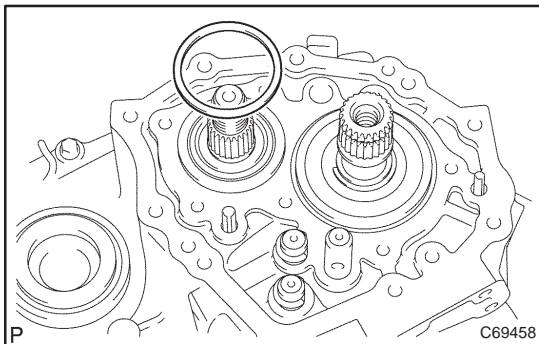**103. INSTALL OUTPUT SHAFT REAR BEARING SHIM**

- (a) Install the output shaft rear bearing shim to the output shaft.


**HINT:**

Install the same thickness of the case shim as the remove one.

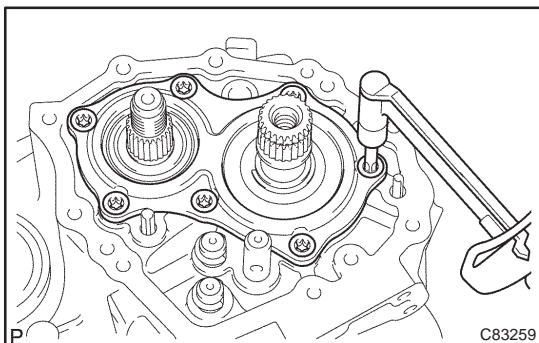
**104. INSTALL BEARING RETAINER REAR (MTM)**

- (a) Coat the bearing retainer rear (MTM) with sealant, install it with using a torx wrench(T45).


**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

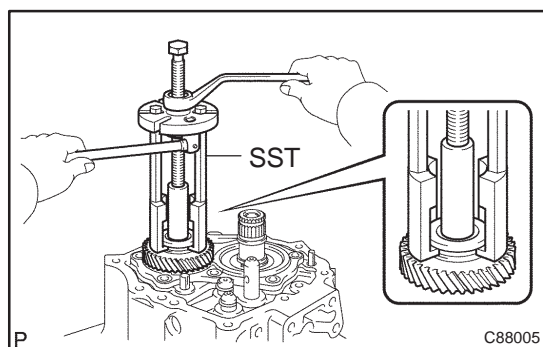**105. INSTALL 5TH DRIVEN GEAR**


- (a) Using SST, install the 5th driven gear to the output shaft.  
SST 09950-30012 (09951-03010, 09953-03010, 09954-03010, 09956-03030, 09955-03011)

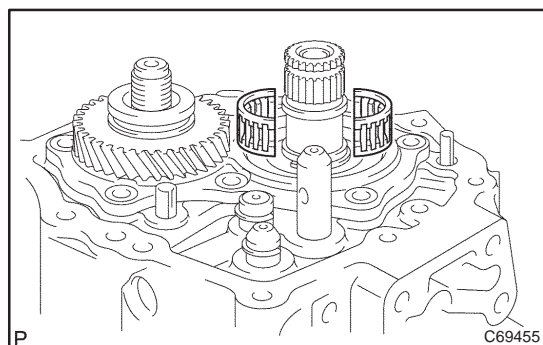**106. INSTALL 5TH GEAR NEEDLE ROLLER BEARING**

- (a) Coat the 5th gear needle roller bearing with gear oil, install it to the input shaft.

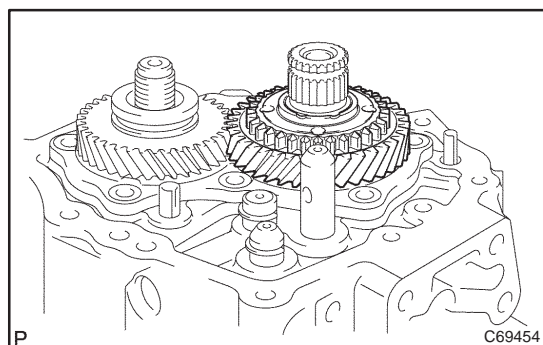**107. INSTALL 5TH GEAR**


- (a) Coat the 5th gear with gear oil, install it to the input shaft.

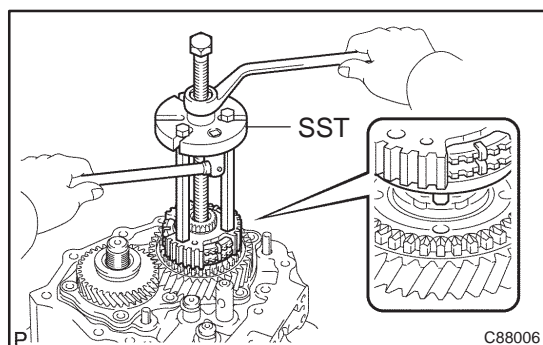**108. INSTALL TRANSMISSION CLUTCH HUB NO.3**


- (a) Using SST, install the transmission clutch hub No. 3 to the input shaft.  
SST 09950-30012 (09951-03010, 09953-03010, 09954-03010)

**NOTICE:**

**Align the projection of the synchronizer ring with the hole of the 5th gear and install them.**

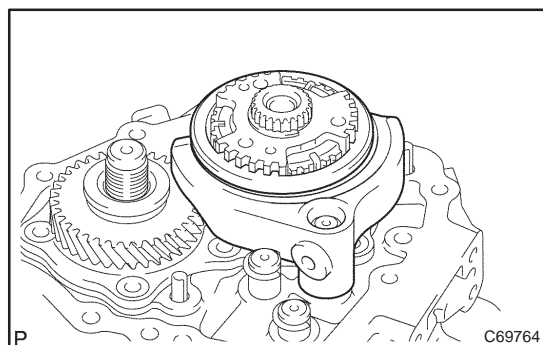

- (b) Install the transmission hub sleeve No. 3 and gear shift fork No. 3 to the transmission clutch hub No. 3.

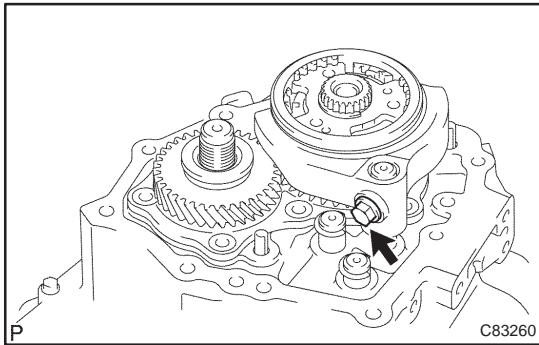


- (c) Coat the shift fork bolt with sealant, install it to the gear shift fork No. 3.

**Sealant:**

**Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent**

**Torque: 24 N·m (244 kgf·cm, 17 ft·lbf)**

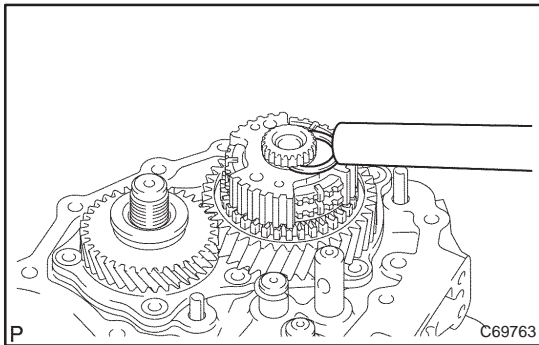


- (d) Select a snap ring that will minimum axial play. Using a brass bar and a hammer, install the shaft snap ring.

**Clearance: 0.1 mm or less**

**Snap ring: mm (in.)**

Part No.	Thickness	Mark
90520-27061	1.75 – 1.80 (0.0695 – 0.0715)	a
90520-27062	1.80 – 1.85 (0.0715 – 0.0734)	b
90520-27063	1.85 – 1.90 (0.0734 – 0.0754)	c
90520-27064	1.90 – 1.95 (0.0754 – 0.0774)	d
90520-27065	1.95 – 2.00 (0.0774 – 0.0794)	e
90520-27066	2.00 – 2.05 (0.0794 – 0.0814)	f
90520-27067	2.05 – 2.10 (0.0814 – 0.0834)	g
90520-27068	2.10 – 2.15 (0.0834 – 0.0854)	h
90520-27069	2.15 – 2.20 (0.0854 – 0.0873)	j

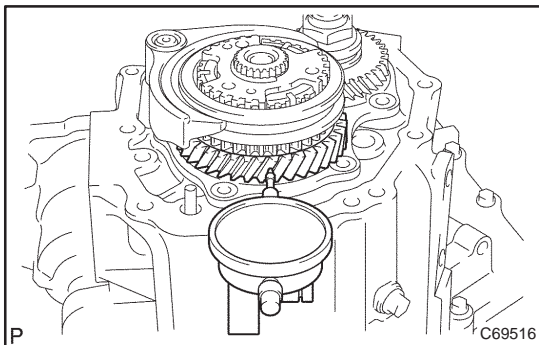


### 109. INSPECT 5TH GEAR RADIAL CLEARANCE

- (a) Using a dial indicator, inspect the 5th gear radial clearance.

**Standard clearance:**

**0.009 – 0.050 mm (0.0004 – 0.0020 in.)**


If the clearance is out of the specification, replace 1st gear needle roller bearing.

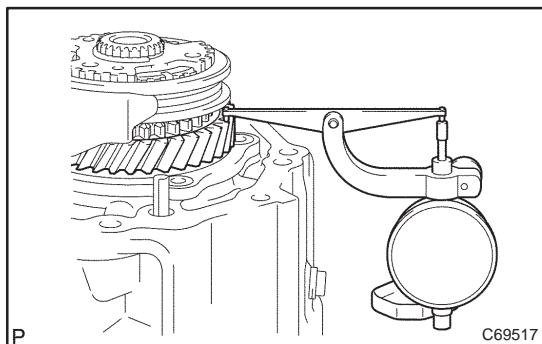**110. INSPECT 5TH GEAR THRUST CLEARANCE**


- (a) Using a dial indicator, inspect the 5th gear thrust clearance.

**Standard clearance:**

**0.10 – 0.65 mm (0.0040 – 0.0258 in.)**

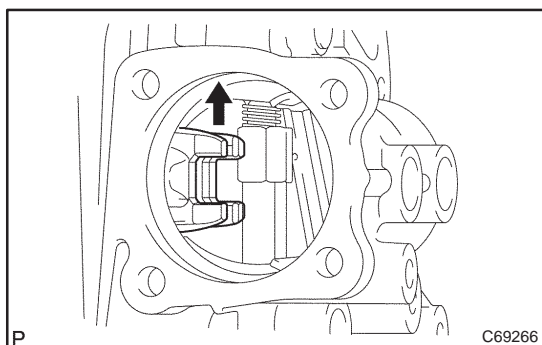
**111. INSTALL MANUAL TRANSMISSION OUTPUT SHAFT REAR SET NUT**

- (a) Engage the gear double meshing.

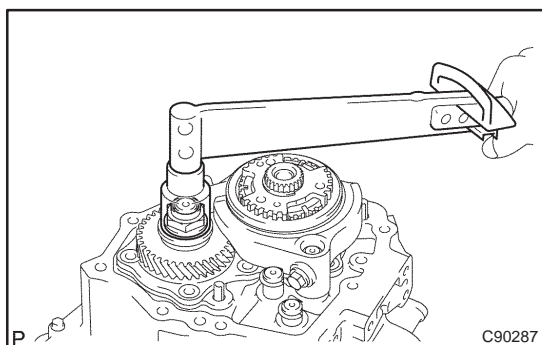


- (b) Install the new manual transmission output shaft rear set nut.

**Torque: 123 N·m (1250 kgf·cm, 90 ft·lbf)**

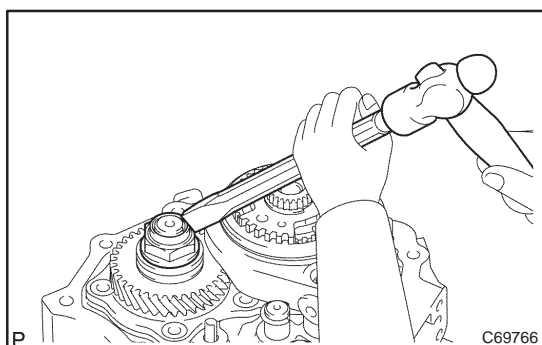

- (c) Using a chisel and a hammer, stake the manual transmission output shaft rear set nut.

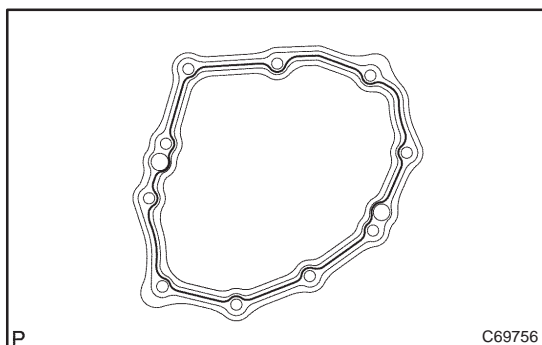**112. INSTALL MANUAL TRANSMISSION CASE COVER SUB-ASSY**


- (a) Apply FIPG to the transaxle case cover sub-assy, as shown to the installation.

**FIPG:**


**Part No. 08826-00090, THREE BOND 1281**

**NOTICE:**

**Parts must be assembled 10 minutes of application otherwise the packing (FIPG) material**

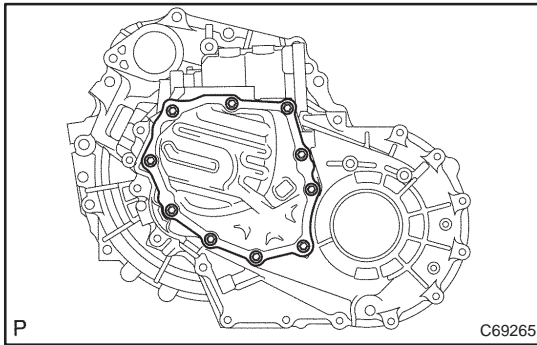


- (b) Install the transmission case cover sub-assy with 10 bolts to the manual transaxle case.

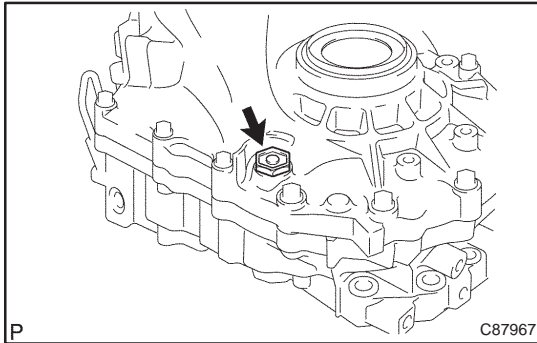


### 113. INSTALL DRAIN (MTM) PLUG SUB-ASSY

- (a) Install the drain plug sub-assy with new gasket to the manual transmission case.  
**Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)**

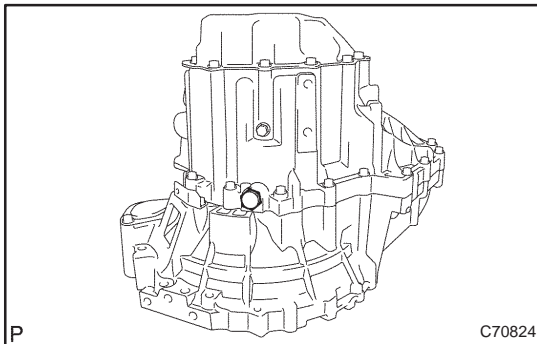


### 114. INSTALL MANUAL TRANSMISSION FILLER PLUG

- (a) Install the manual transmission filler plug with new gasket to the oil seal.  
**Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)**

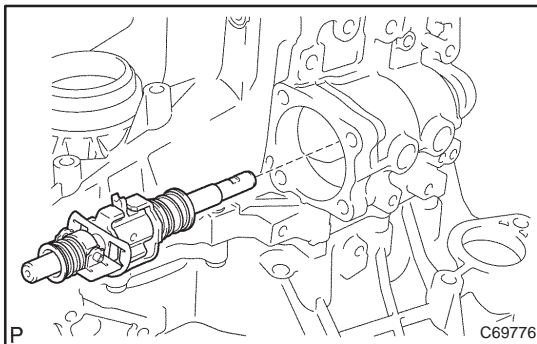


### 115. INSTALL SHIFT & SELECT LEVER SHAFT ASSY

- (a) coat the shift & select lever shaft assy with gear oil, install it to the manual transmission case.

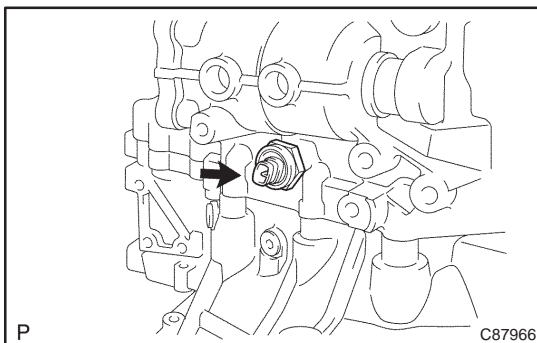


### 116. INSTALL BACK UP LAMP SWITCH ASSY

- (a) install back up lamp switch assy to the manual transmission case.  
**Torque: 40 N·m (410 kgf·cm, 30 ft·lbf)**

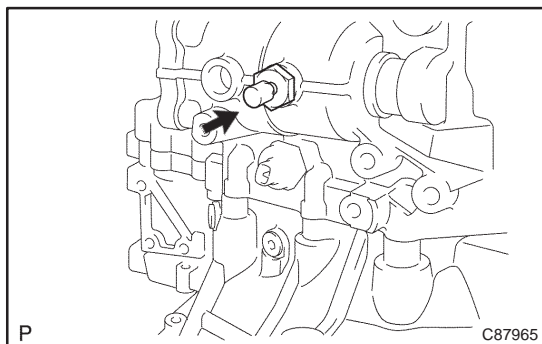


### 117. INSTALL MANUAL TRANSMISSION BREATHER PLUG

- (a) Install the new gasket with manual transmission breather plug to the manual transmission case.  
**Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)**

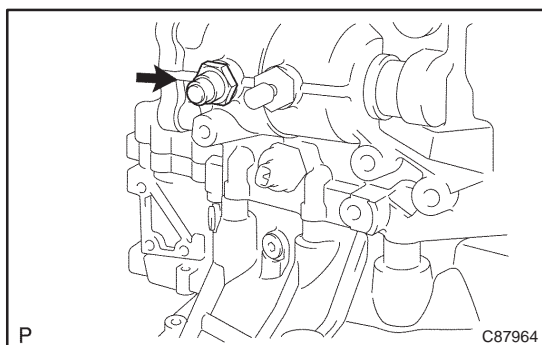

### 118. INSTALL LOCK BALL ASSY NO.1


- (a) Install the lock ball assy No.1 to the manual transmission case.  
**Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)**

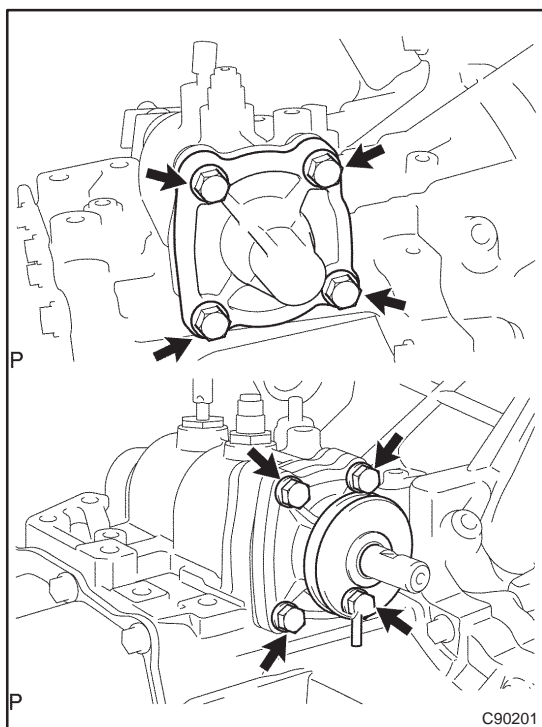

### 119. INSTALL CONTROL SHAFT COVER

- (a) Coat the 4 bolts with sealant, install it, new gasket with control shaft cover.  
**Sealant:**  
**Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent**  
**Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)**

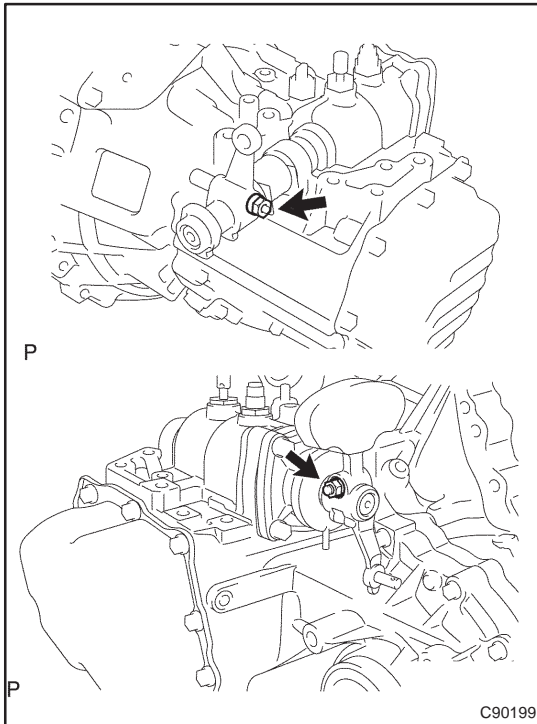

**120. INSTALL CONTROL SHIFT LEVER**

- (a) Install the control shift lever with shift outer lock pin to the
- (b) install the spring washer with nat.

**Torque: 6.4 N·m (65 kgf·cm, 57 in·lbf)**

**121. INSTALL SELECTING BELL CRANK ASSY**

- (a) Coat the 2 bolts with sealant, install it with selecting bell crank assy to the manual transmission cease.

**Sealant:**

**Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent**

**Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)**

**122. INSTALL TRANSAXLE CASE COVER**


- (a) Install the transaxle case cover with 2 bolts.

**123. INSTALL SPEEDOMETER DRIVEN HOLE COVER SUB-ASSY**

- (a) Install the bolt and speedometer driven hole cover sub-assy to the transmission case.

**124. INSTALL CLUTCH RELEASE FORK BOOT**

- (a) Install the clutch release fork bolt to the manual transaxle case.

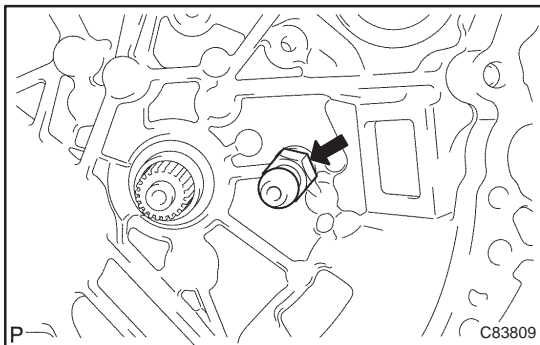

### 125. INSTALL RELEASE FORK SUPPORT

- (a) Using a deep socket wrench, install the release fork support to the manual transaxle case.

**Torque:**

**E355: 39.2 N·m (400 kgf·cm, 28.91 ft·lbf)**

**E356 : 47.1 N·m (480 kgf·cm, 34.74 ft·lbf)**


### 126. INSTALL CLUTCH RELEASE BEARING ASSY

- (a) Coat the clutch release bearing assy with release hub grease, install it to the clutch release fork sub-assy.

**Sealant:**

**Part No. 0887 – 01806, RELEASE HUB GREASE or equivalent**

- (b) Apply clutch spline grease to the input shaft spline.

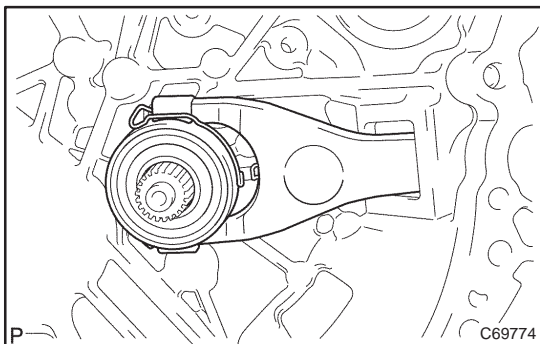

### 127. INSTALL CLUTCH RELEASE FORK SUB-ASSY

- (a) Install the clutch release fork sub – assy to the input shaft.