


## EFI MAIN RELAY INSPECTION

SF0XI-01

### 1. REMOVE EFI MAIN RELAY (Marking: EFI MAIN)

LOCATION: In the engine compartment relay box.

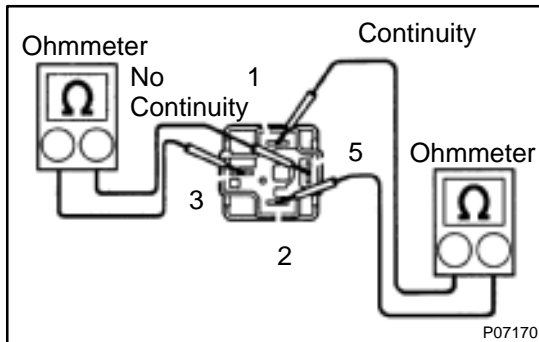


### 2. INSPECT EFI MAIN RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 5 and 3.

If there is continuity, replace the relay.

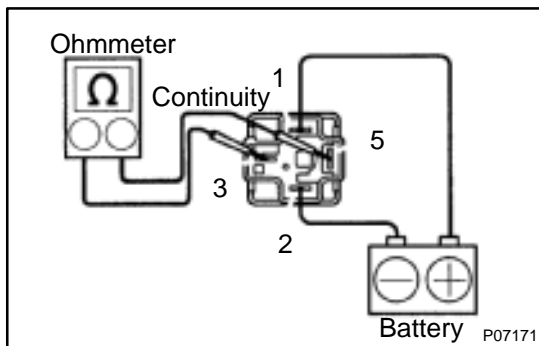

### 3. INSPECT EFI MAIN RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that there is continuity between terminals 5 and 3.

If there is no continuity, replace the relay.

### 4. REINSTALL EFI MAIN RELAY