Mazda MPV

1996 Wiring Diagram

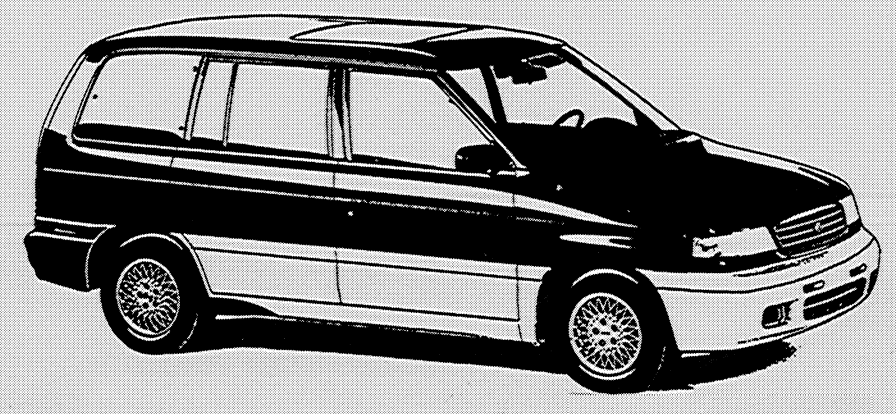

I-4

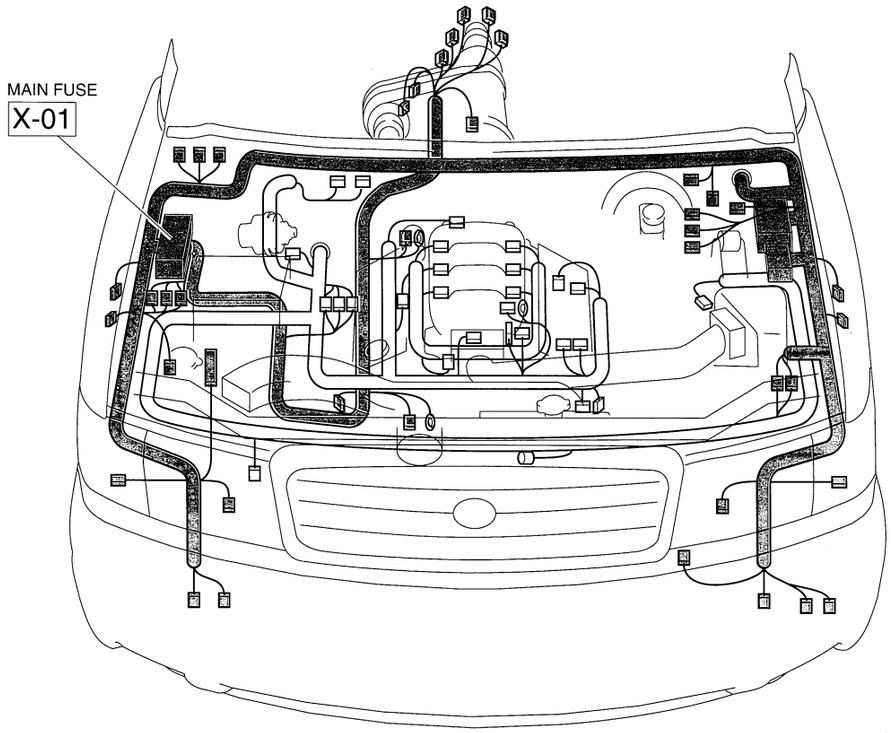

MAIN FUSE

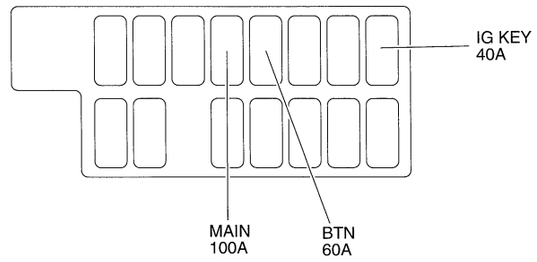

JOINT BOX

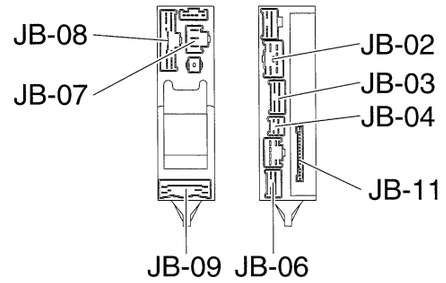

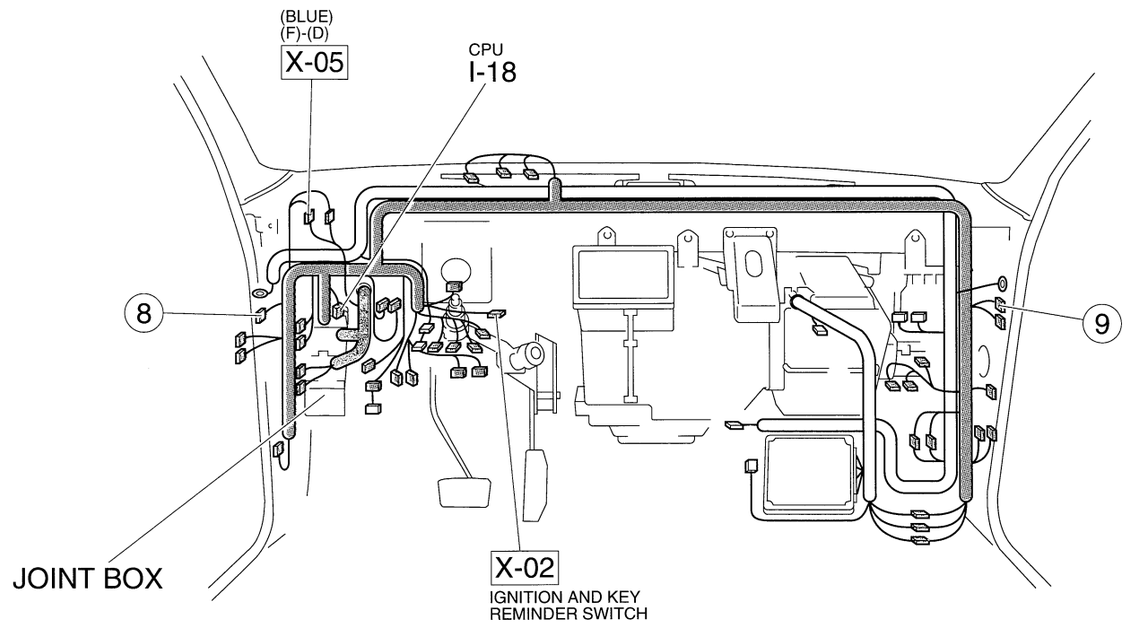

J ■ AUDIO SYSTEM

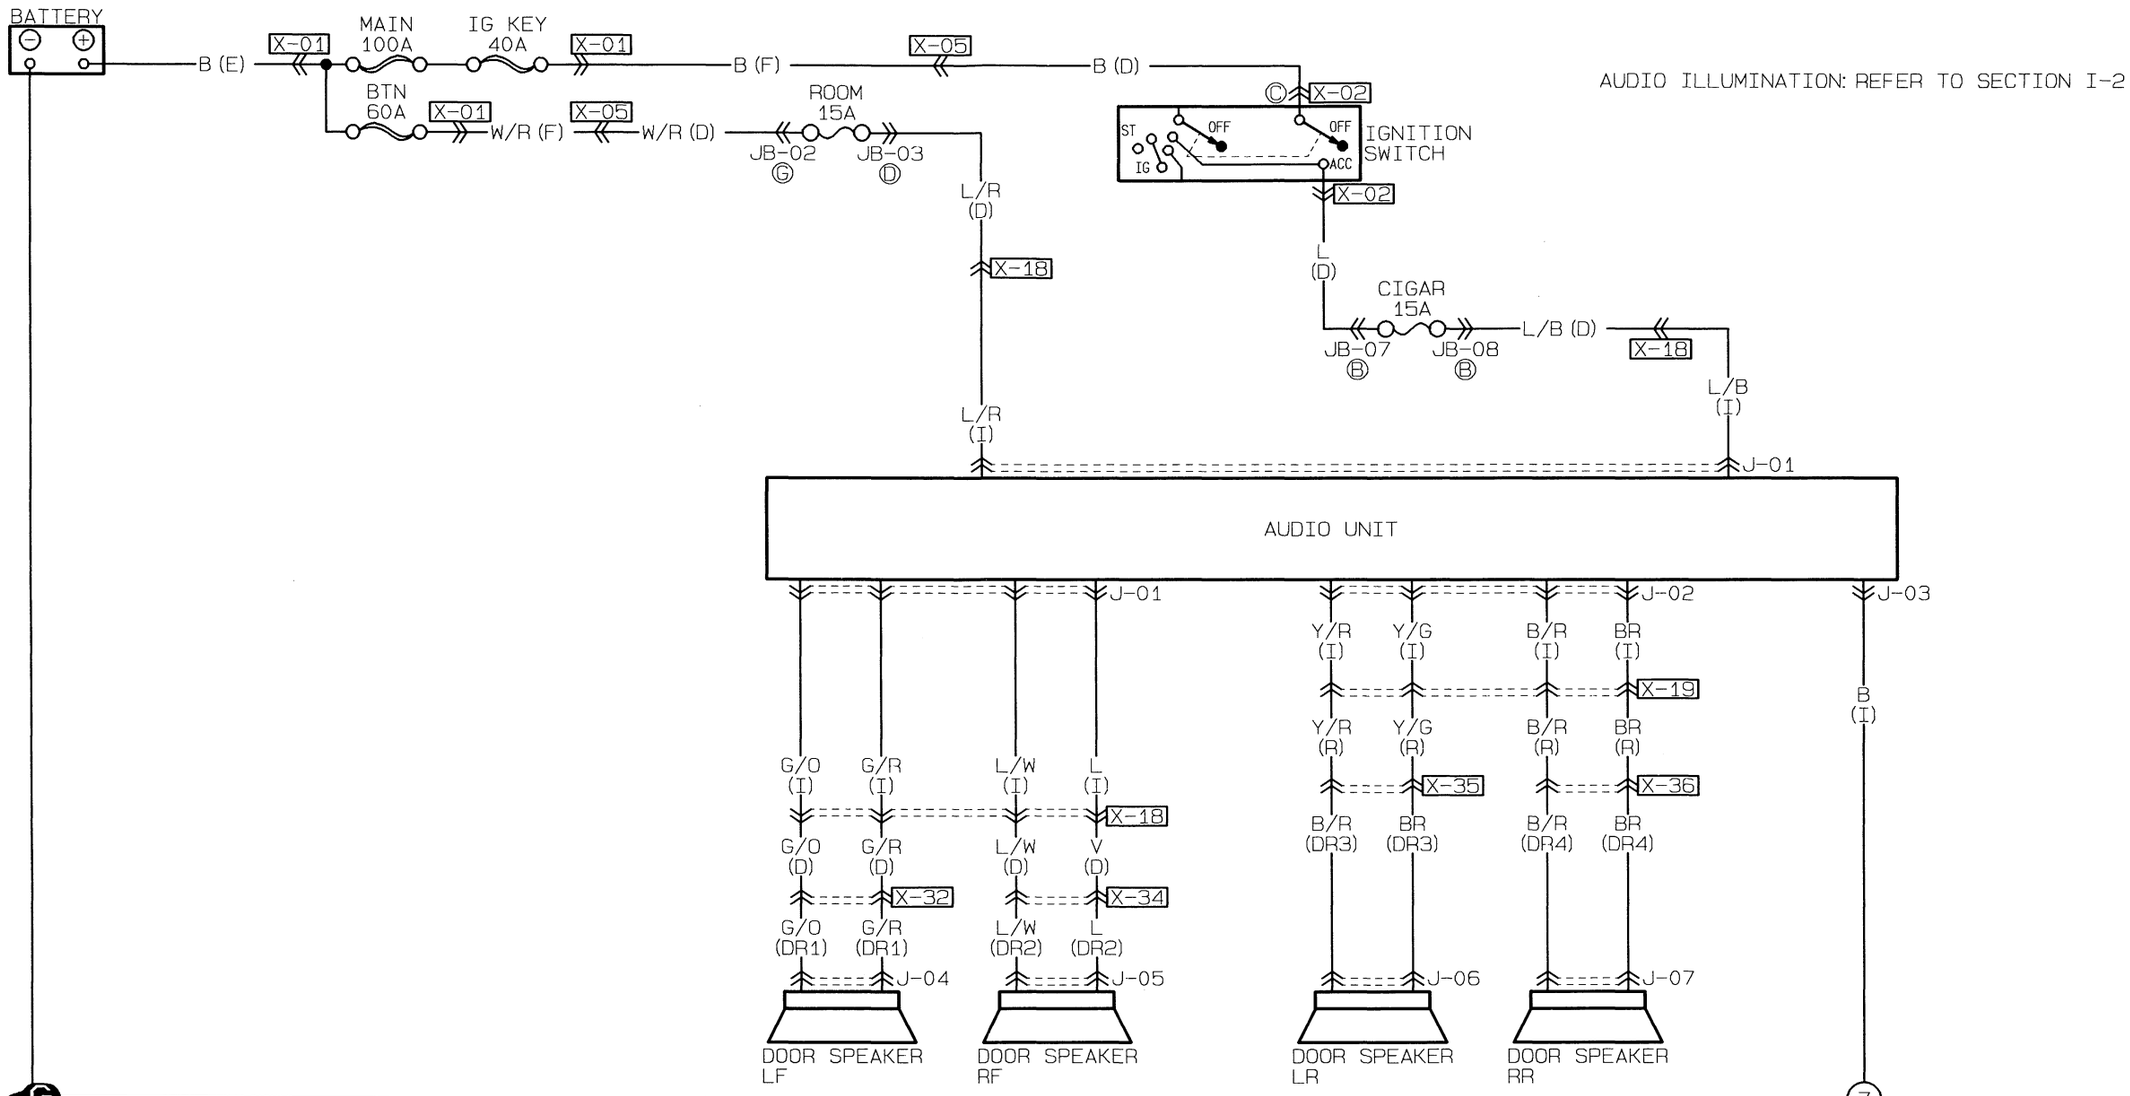

J-01 AUDIO UNIT (I)



J-02 AUDIO UNIT (I)



J-03 AUDIO UNIT (I)

J-04 DOOR SPEAKER LF (DR1)

J-05 DOOR SPEAKER RF (DR2)

J-06 DOOR SPEAKER LR (DR3)

J-07 DOOR SPEAKER RR (DR4)

J

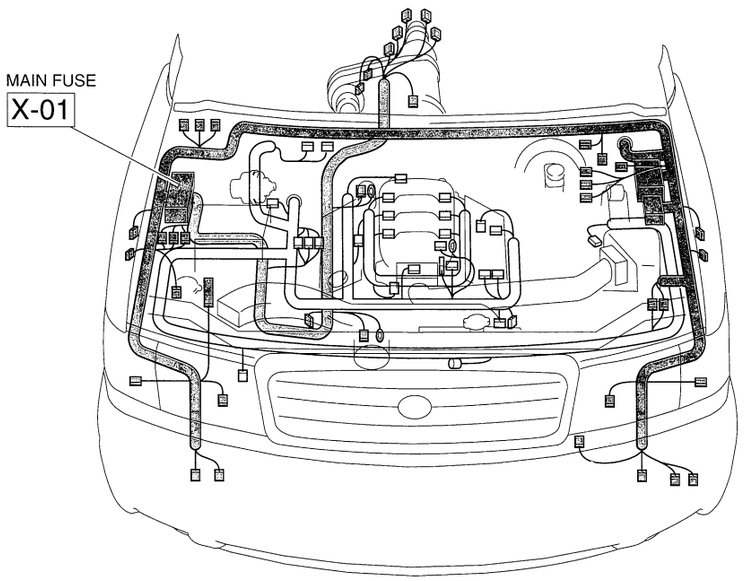
MAIN FUSE
X-01

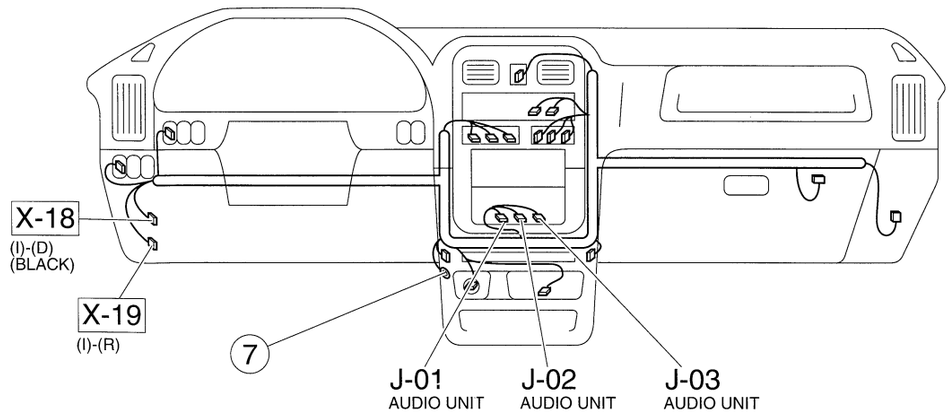
X-18
(I)-(D)
(BLACK)
X-19
(I)-(R)
7
J-01
AUDIO UNIT
J-02
AUDIO UNIT
J-03
AUDIO UNIT

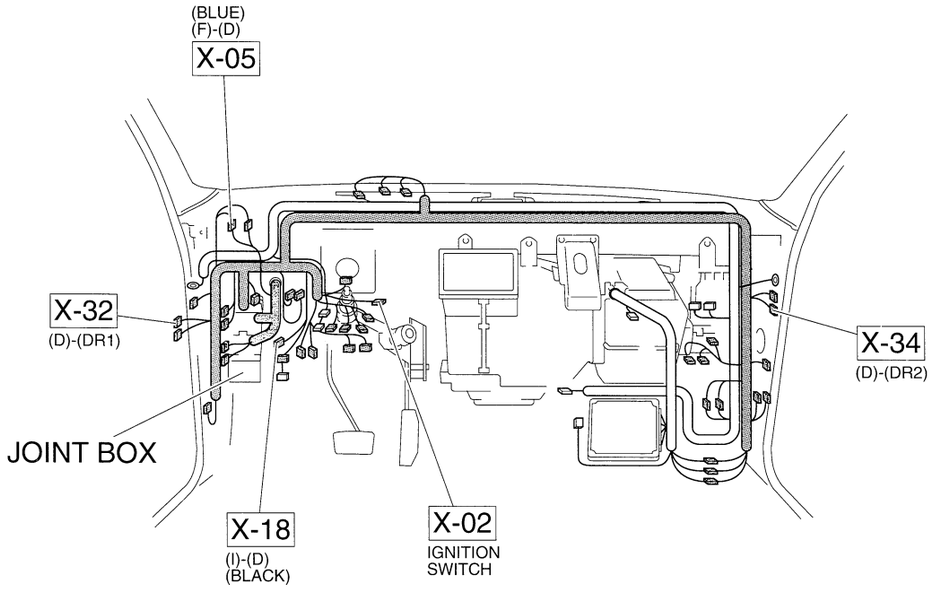
(BLUE)
(F)-(D)
X-05
X-32
(D)-(DR1)
JOINT BOX
X-18
(I)-(D)
(BLACK)
X-02
IGNITION
SWITCH
X-34
(D)-(DR2)

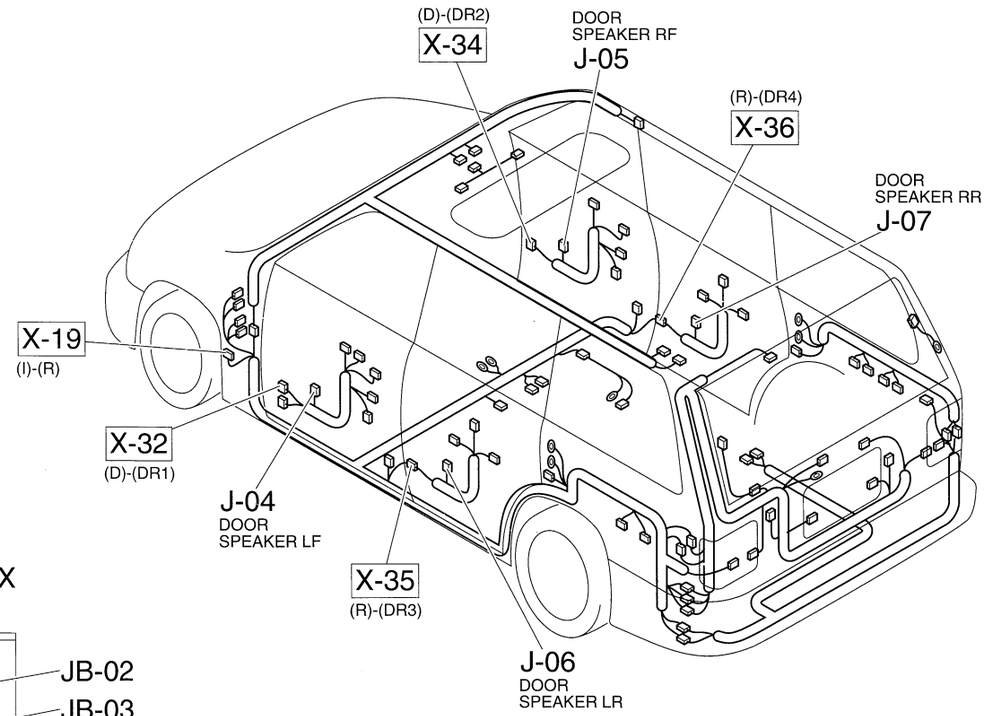
(D)-(DR2)
X-34
DOOR
SPEAKER RF
J-05
(R)-(DR4)
X-36
DOOR
SPEAKER RR
J-07
X-19
(I)-(R)
X-32
(D)-(DR1)
J-04
DOOR
SPEAKER LF
X-35
(R)-(DR3)
J-06
DOOR
SPEAKER LR

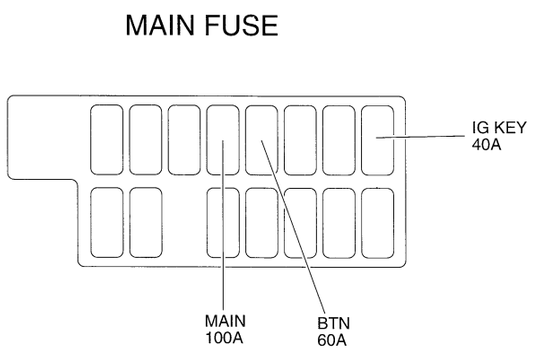
MAIN FUSE
IG KEY
40A
MAIN
100A
BTN
60A

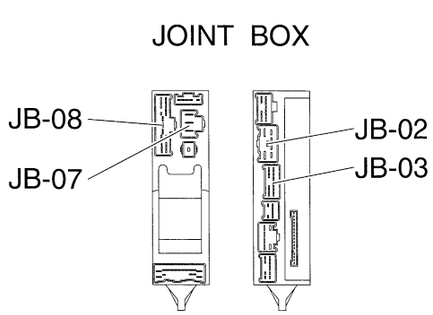
JOINT BOX
JB-08
JB-07
JB-02
JB-03

K-1 ■ POWER WINDOWS

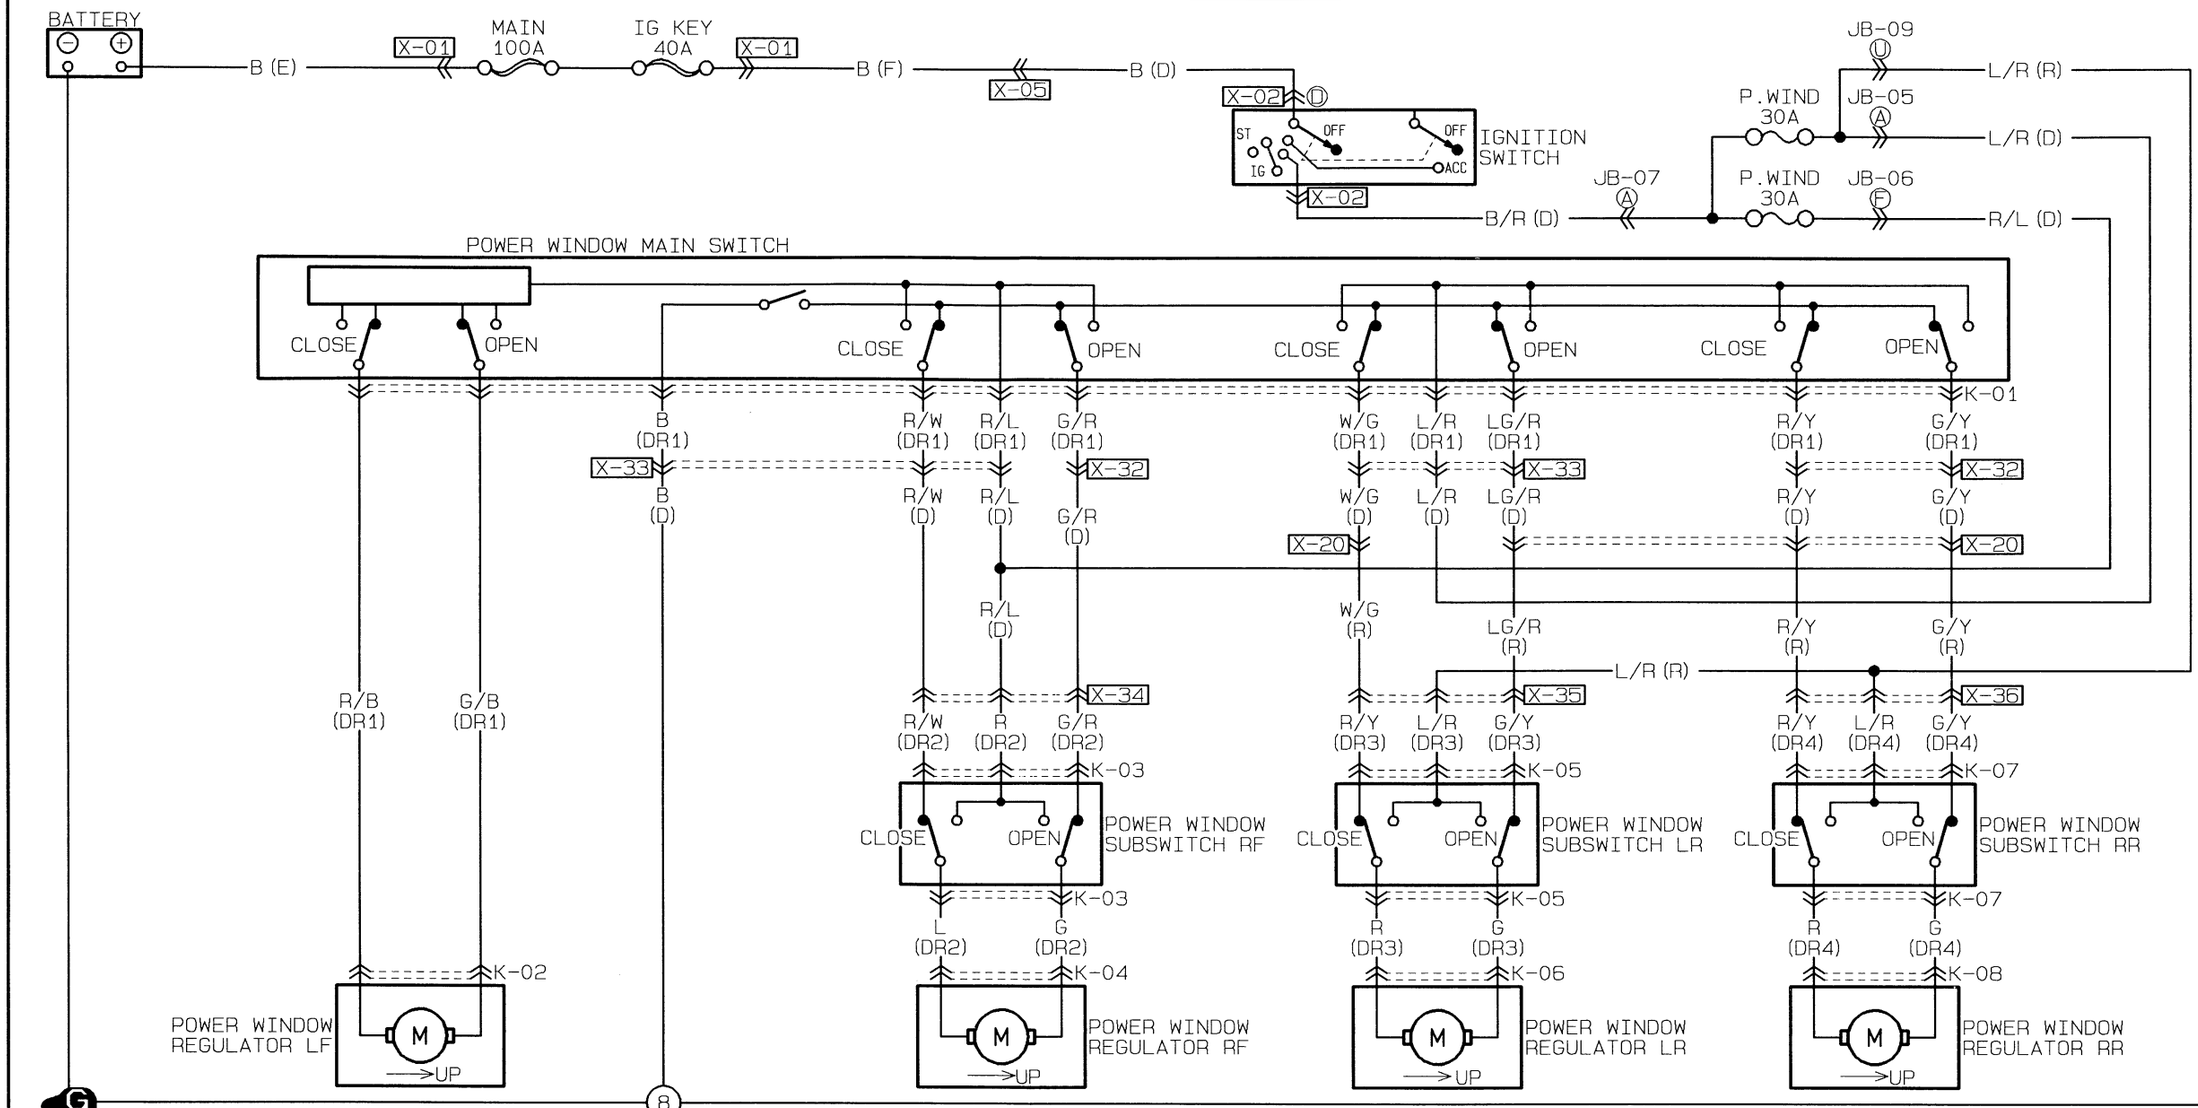

K-01 POWER WINDOW MAIN SWITCH (DR1)



K-02 POWER WINDOW REGULATOR LF (DR1)



K-03 POWER WINDOW SUBSWITCH RF (DR2)



K-04 POWER WINDOW REGULATOR RF (DR2)



K-05 POWER WINDOW SUBSWITCH LR (DR3)



K-06 POWER WINDOW REGULATOR LR (DR3)



K-07 POWER WINDOW SUBSWITCH RR (DR4)



K-08 POWER WINDOW REGULATOR RR (DR4)



K-1

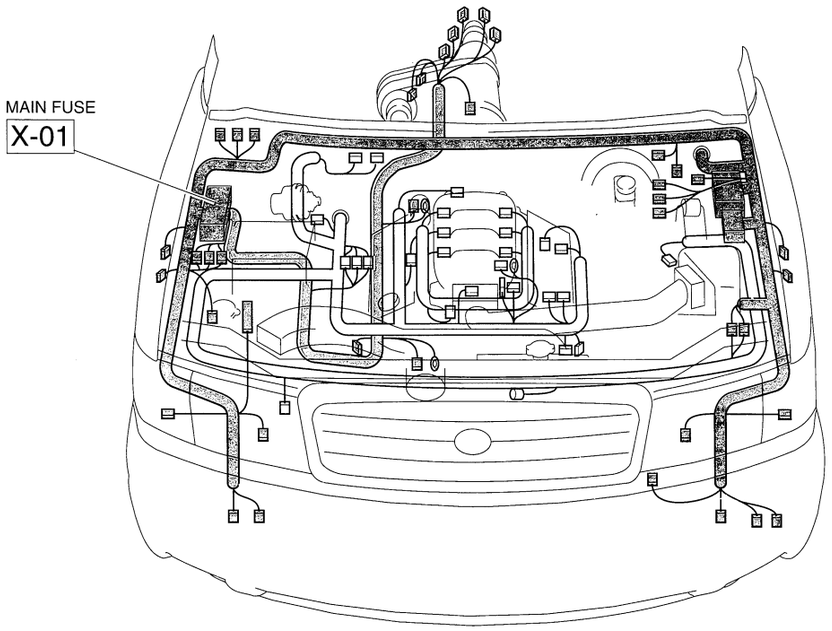
MAIN FUSE
X-01

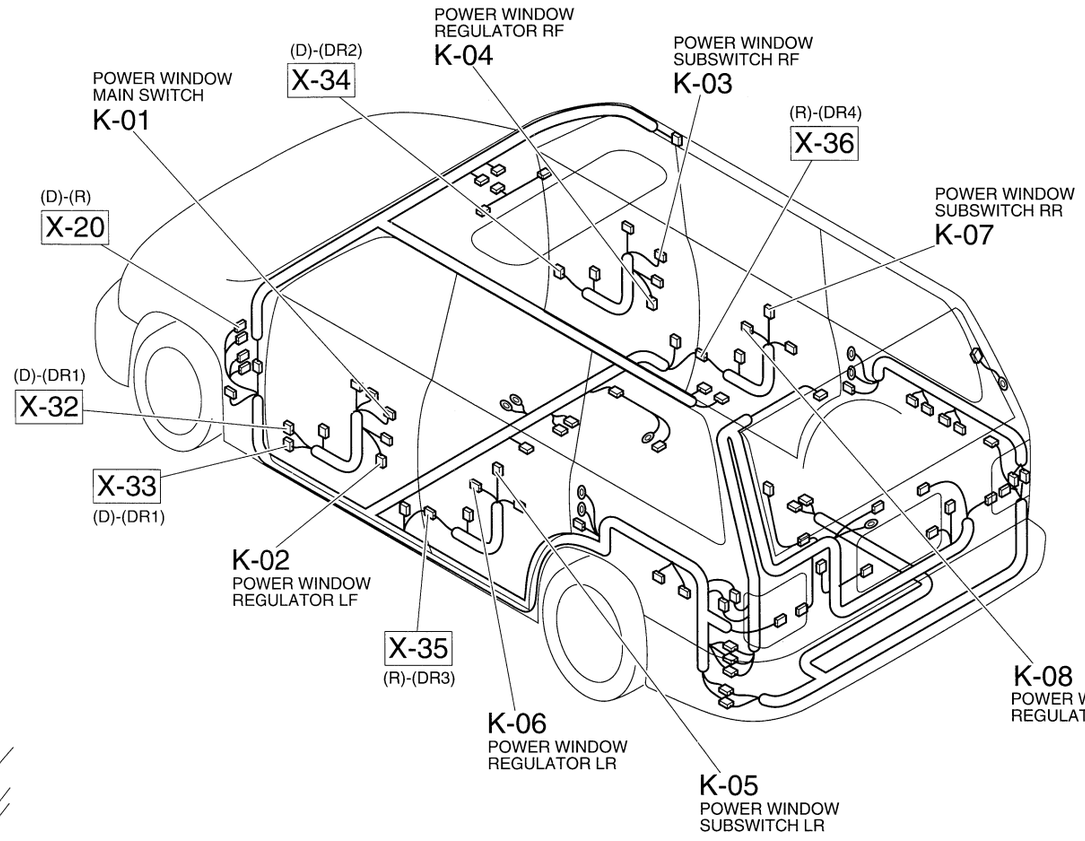
POWER WINDOW MAIN SWITCH
K-01
(D)-(DR2)
X-34
POWER WINDOW REGULATOR RF
K-04
POWER WINDOW SUBSWITCH RF
K-03
(R)-(DR4)
X-36
(D)-(R)
X-20
POWER WINDOW SUBSWITCH RR
K-07
(D)-(DR1)
X-32
X-33
(D)-(DR1)
K-02
POWER WINDOW REGULATOR LF
X-35
(R)-(DR3)
K-06
POWER WINDOW REGULATOR LR
K-05
POWER WINDOW SUBSWITCH LR
K-08
POWER WINDOW REGULATOR RR

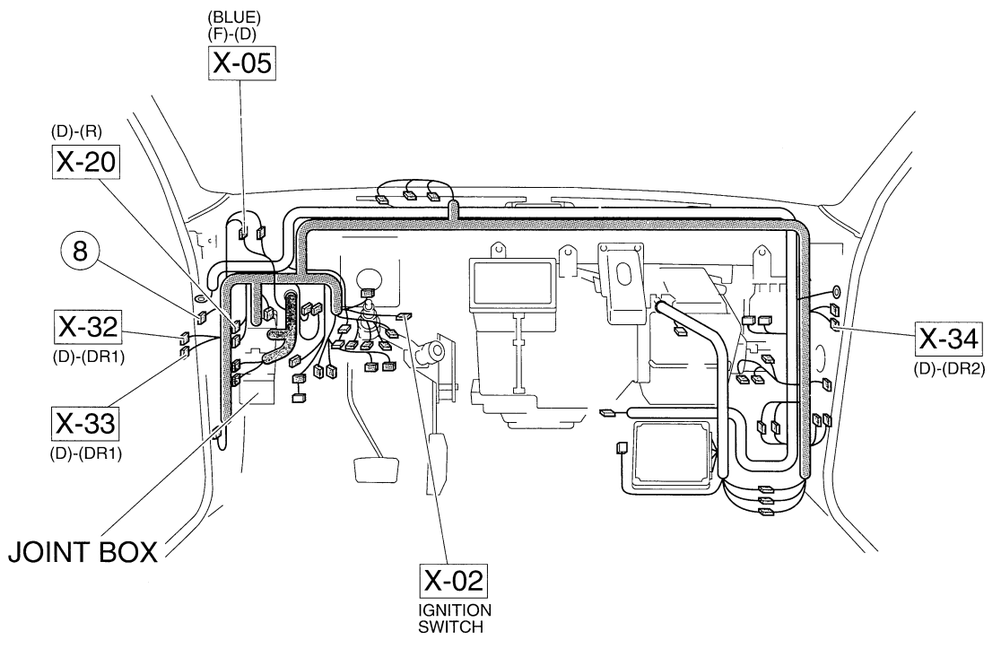
(BLUE)
(F)-(D)
X-05
(D)-(R)
X-20
8
X-32
(D)-(DR1)
X-33
(D)-(DR1)
JOINT BOX
X-02
IGNITION SWITCH
X-34
(D)-(DR2)

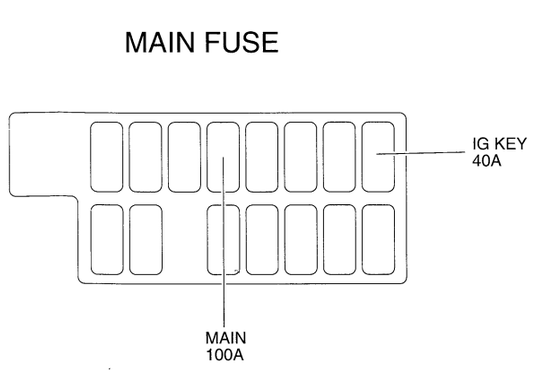
MAIN FUSE
IG KEY 40A
MAIN 100A

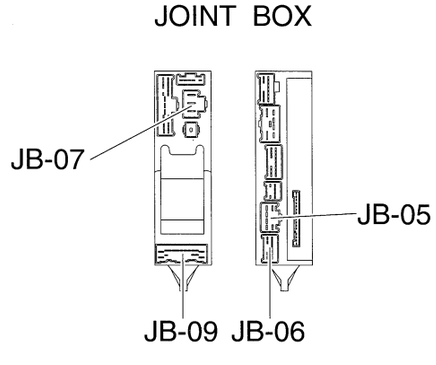
JOINT BOX
JB-07
JB-05
JB-09
JB-06

K-2a ■ POWER DOOR LOCKS (1/2) ■ KEYLESS ENTRY SYSTEM

★...CANADA
THE CPU CONSIST OF I-4 AND K-2

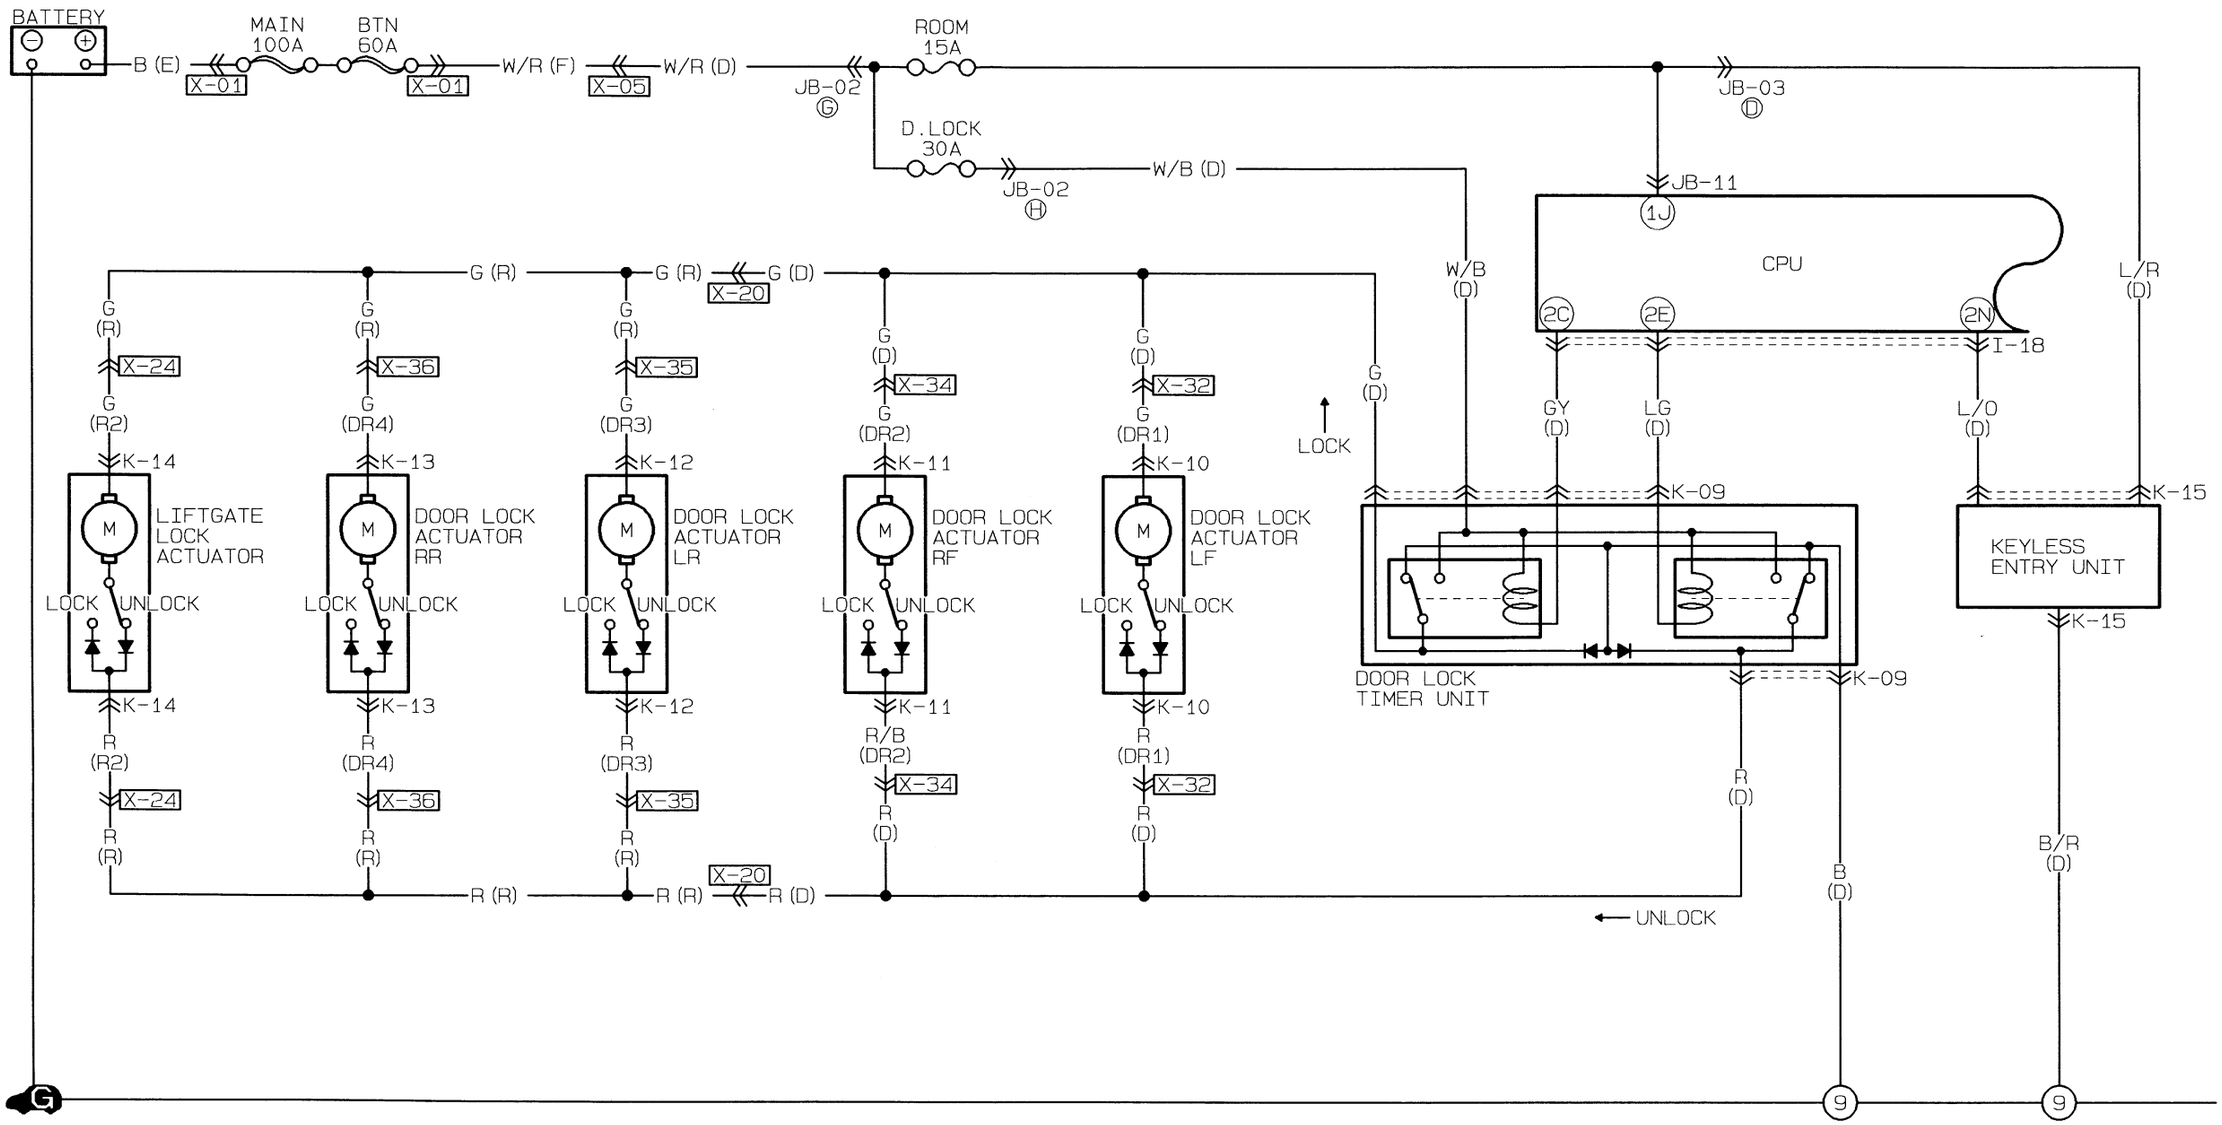

K-09 DOOR LOCK TIMER UNIT (D)

*	G	LG	B
*	R	GY	W/B

K-10 DOOR LOCK ACTUATOR LF (DR1)

*	B	R
G/B	G/W	G

K-11 DOOR LOCK ACTUATOR RF (DR2)

*	*	R/B
*	*	G

K-12 DOOR LOCK ACTUATOR LR (DR3)

R
G

K-13 DOOR LOCK ACTUATOR RR (DR4)

R
G

K-14 LIFTGATE LOCK ACTUATOR (R2)

R	G

K-15 KEYLESS ENTRY UNIT (D)

B/R	L/O	L/R

I-18 CPU (D)

20	2M	2K	2I	2G	2E	2C	2A
W/R	BR	★GY/L *	★GY/R *	G/W	LG	GY	G/B
Y/L	L/O	*	*	*	G/O	★Y *	*
2P	2N	2L	2J	2H	2F	2D	2B

K-2a

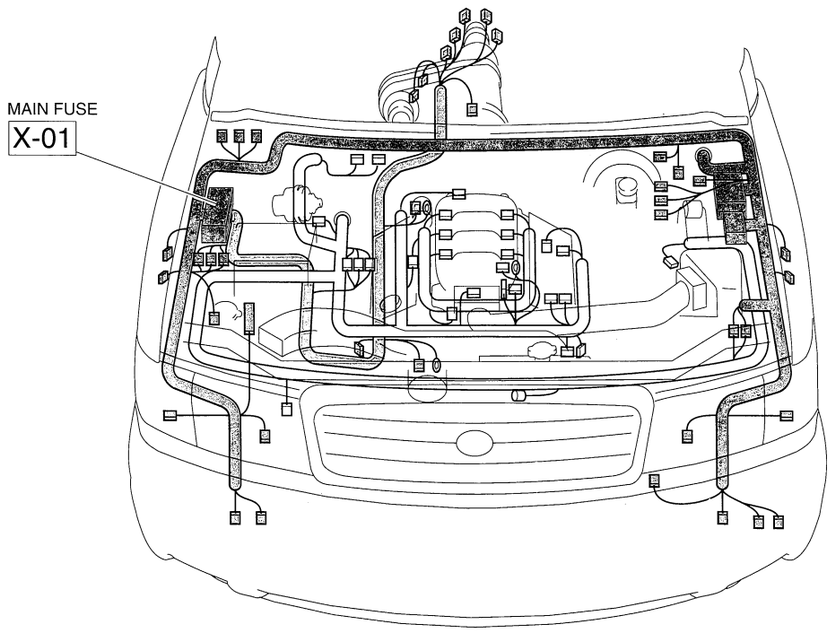
MAIN FUSE
X-01

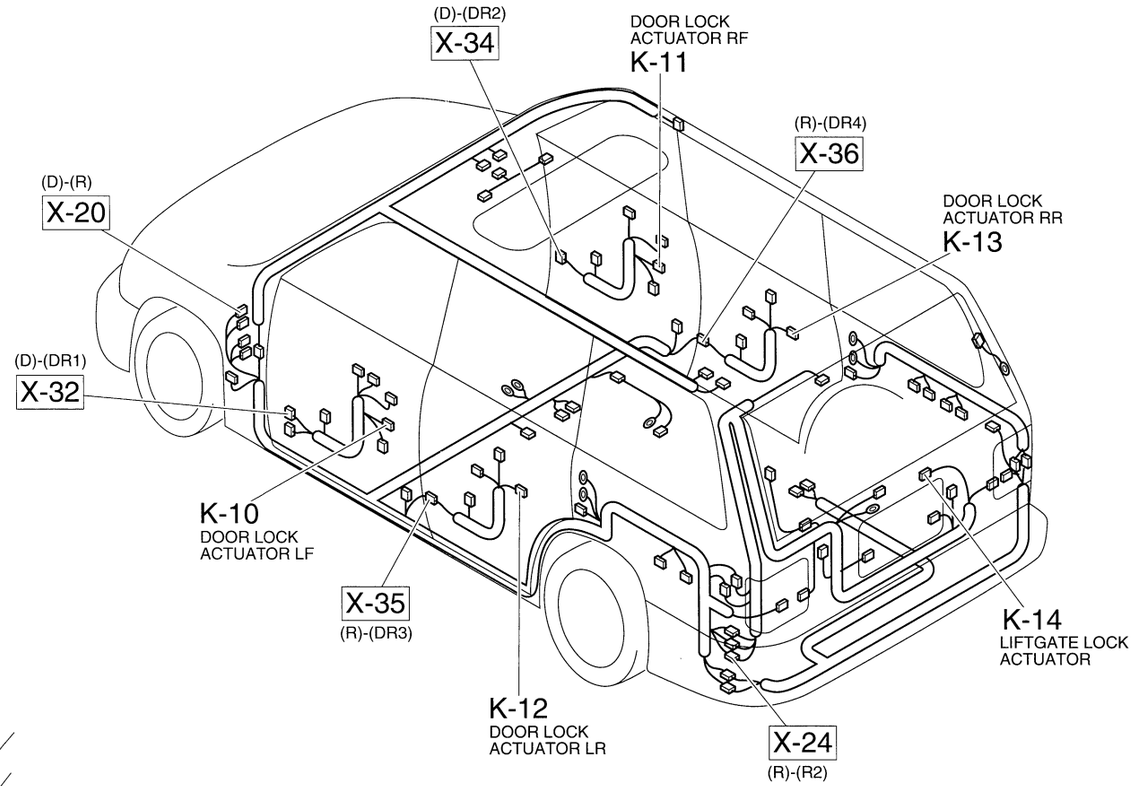
(D)-(DR2)
X-34
DOOR LOCK
ACTUATOR RF
K-11
(R)-(DR4)
X-36
(D)-(R)
X-20
DOOR LOCK
ACTUATOR RR
K-13
(D)-(DR1)
X-32
K-10
DOOR LOCK
ACTUATOR LF
X-35
(R)-(DR3)
K-14
LIFTGATE LOCK
ACTUATOR
K-12
DOOR LOCK
ACTUATOR LR
X-24
(R)-(R2)

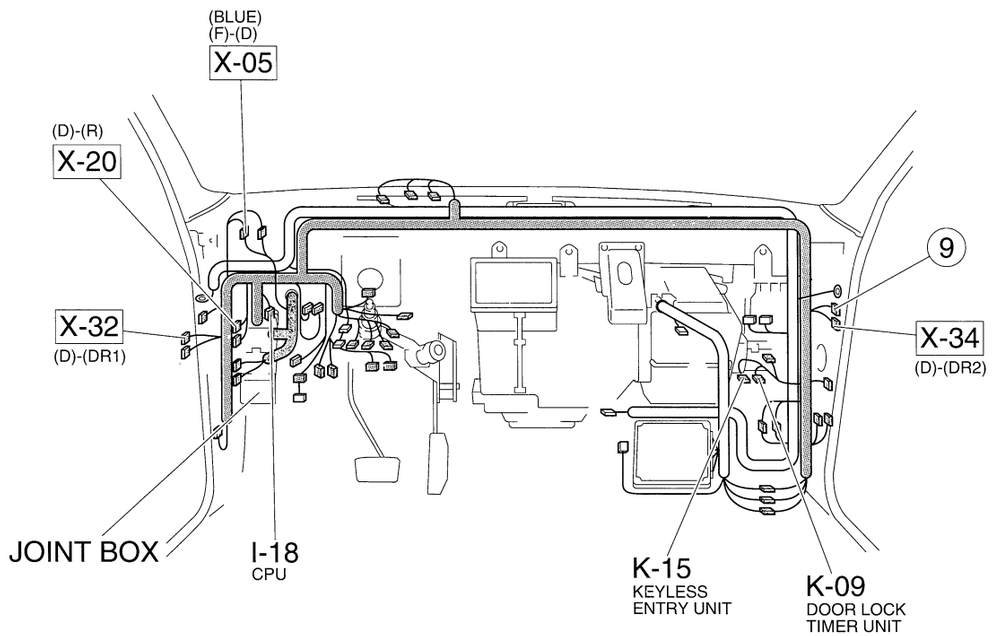
(BLUE)
(F)-(D)
X-05
(D)-(R)
X-20
X-32
(D)-(DR1)
9
X-34
(D)-(DR2)
JOINT BOX
I-18
CPU
K-15
KEYLESS
ENTRY UNIT
K-09
DOOR LOCK
TIMER UNIT

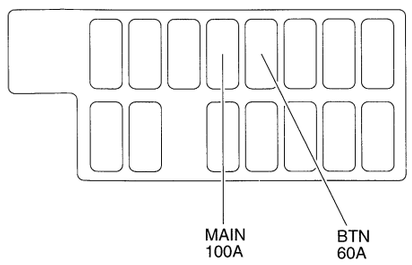
MAIN FUSE
MAIN
100A
BTN
60A

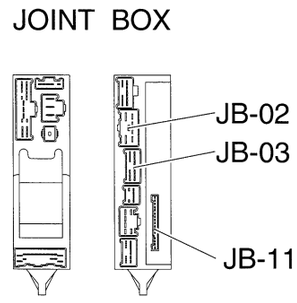
JOINT BOX
JB-02
JB-03
JB-11

K-2b ■ POWER DOOR LOCKS (2/2) ■ KEYLESS ENTRY SYSTEM

★...CANADA
THE CPU CONSIST OF I-4 AND K-2

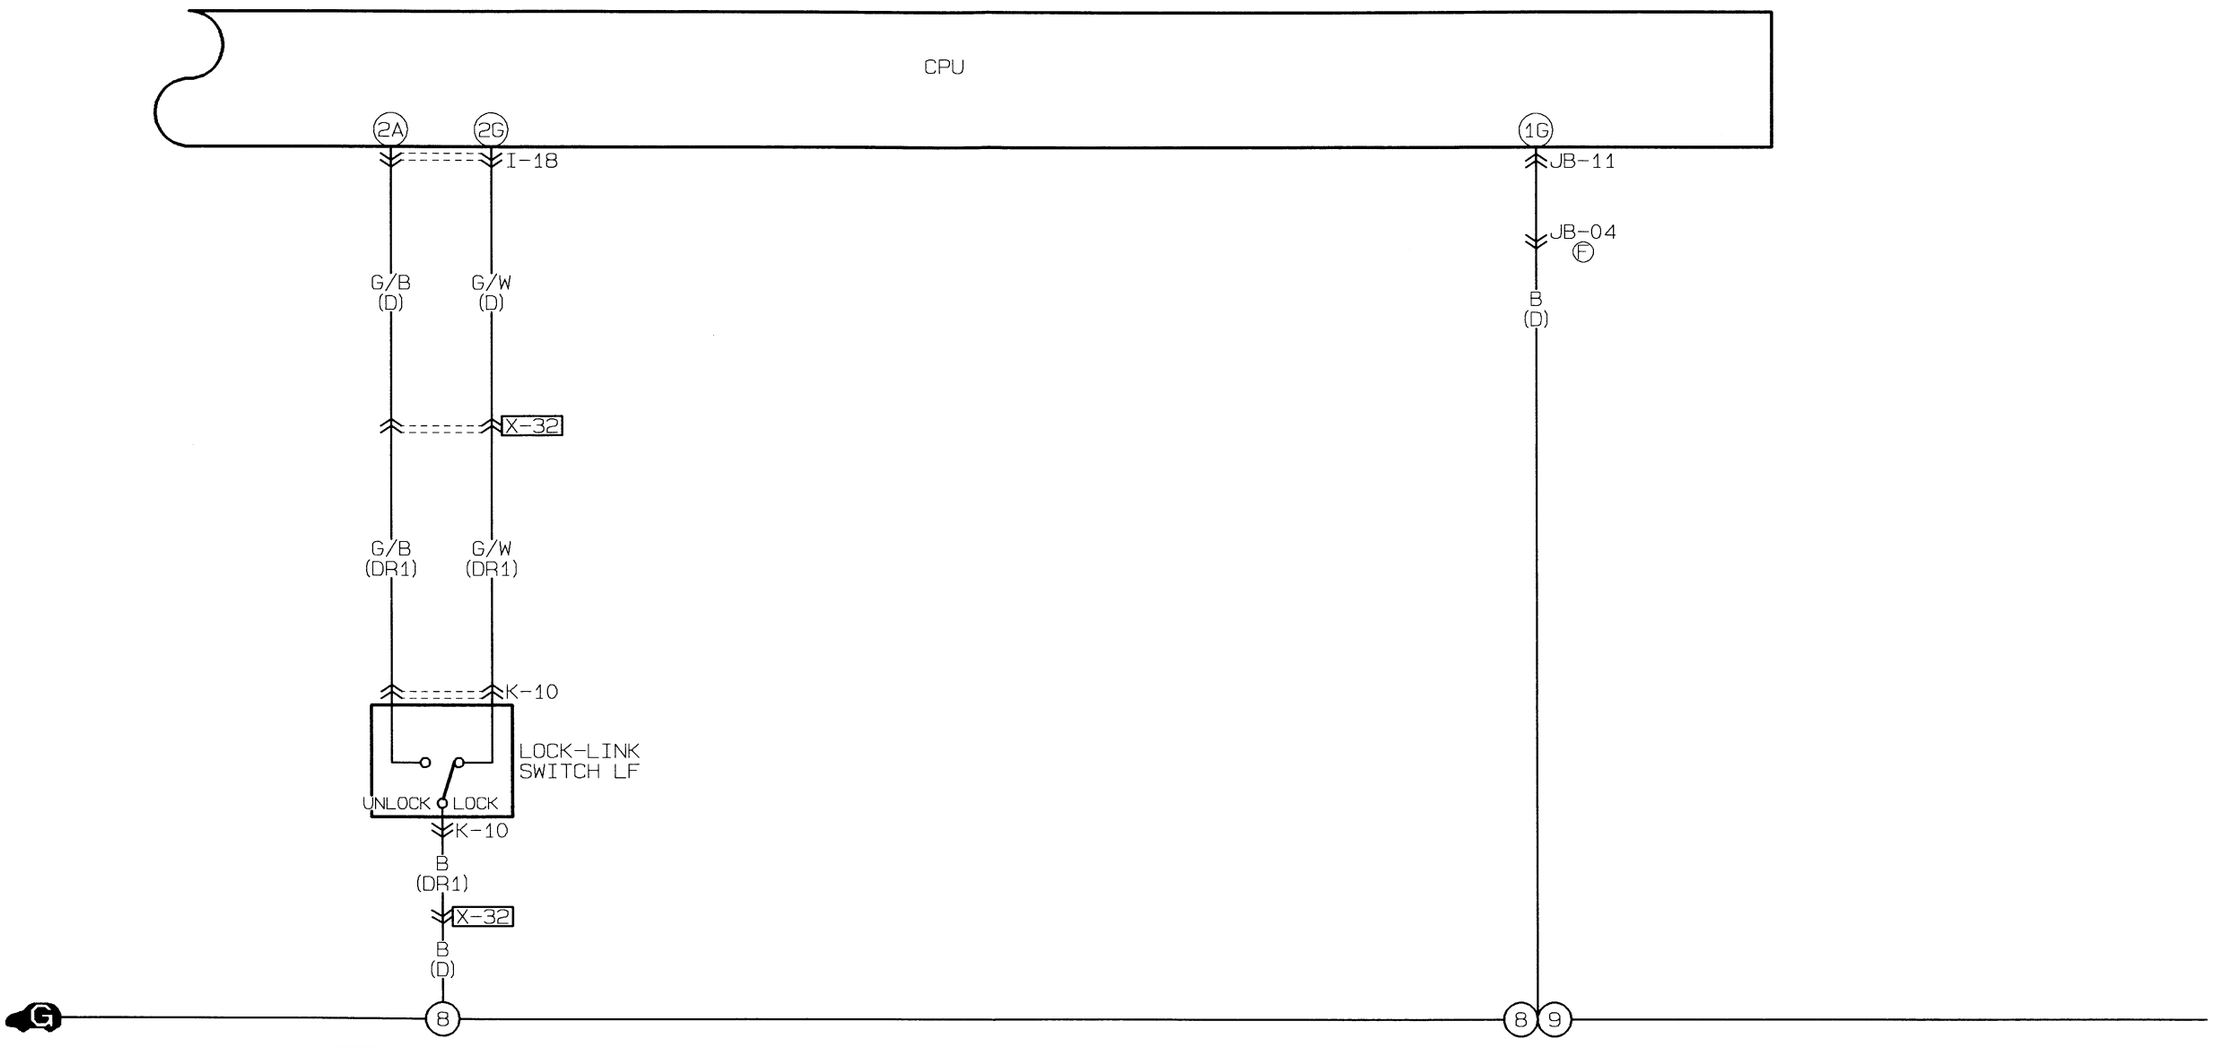

K-10 LOCK-LINK SWITCH LF (DR1)

*	B	R
G/B	G/W	G

I-18 CPU (D)

20	2M	2K	2I	2G	2E	2C	2A
W/R	BR	★GY/L *	★GY/R *	G/W	LG	GY	G/B
Y/L	L/O	*	*	*	G/O	★Y *	*
2P	2N	2L	2J	2H	2F	2D	2B

K-2b

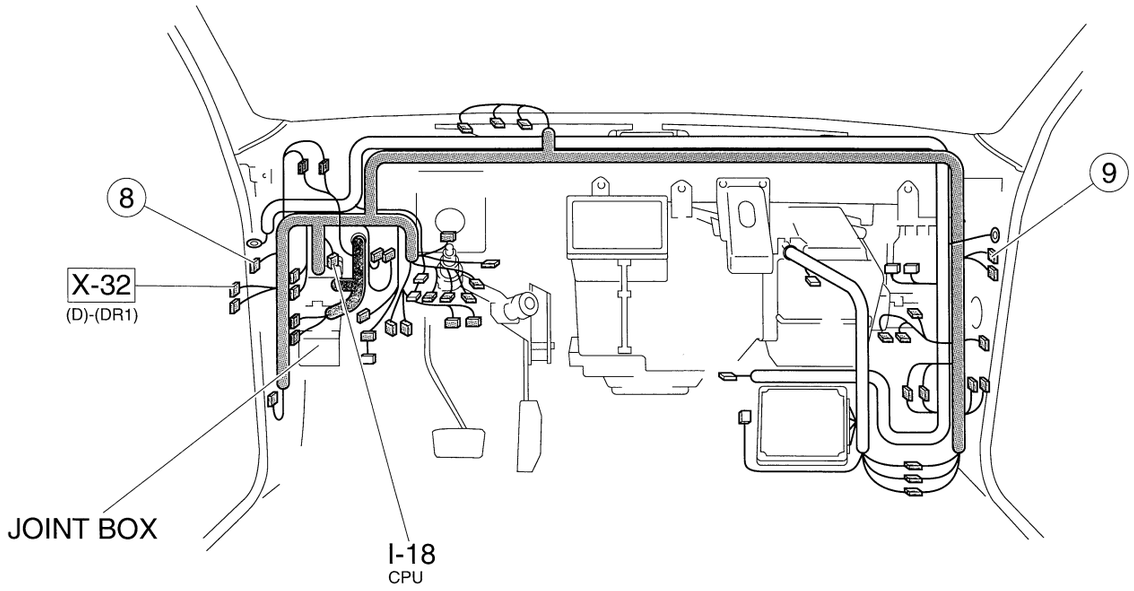

JOINT BOX

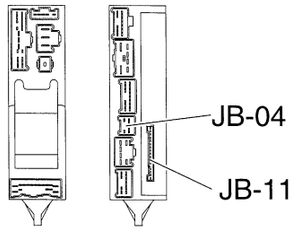

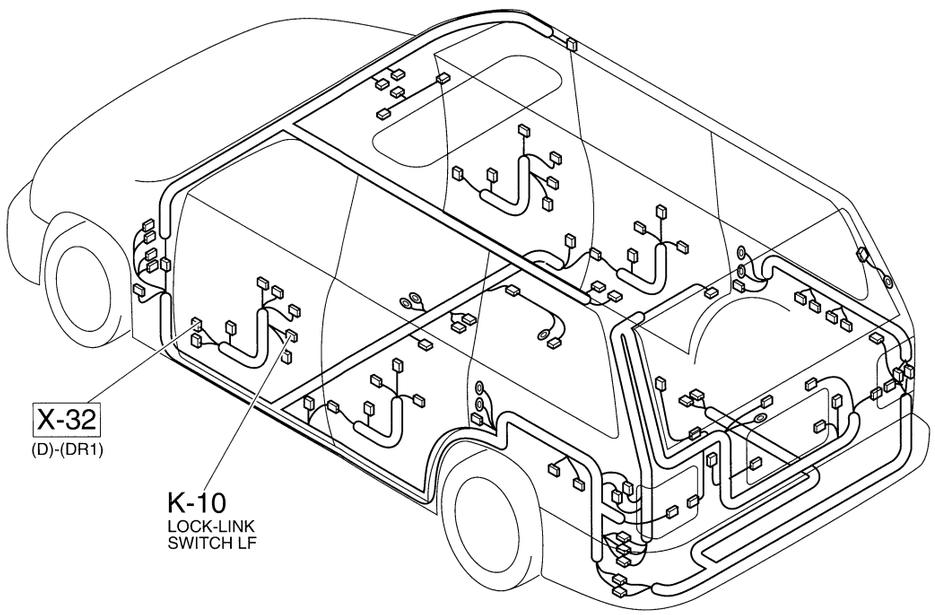

L ■ POWER OUTSIDE MIRRORS

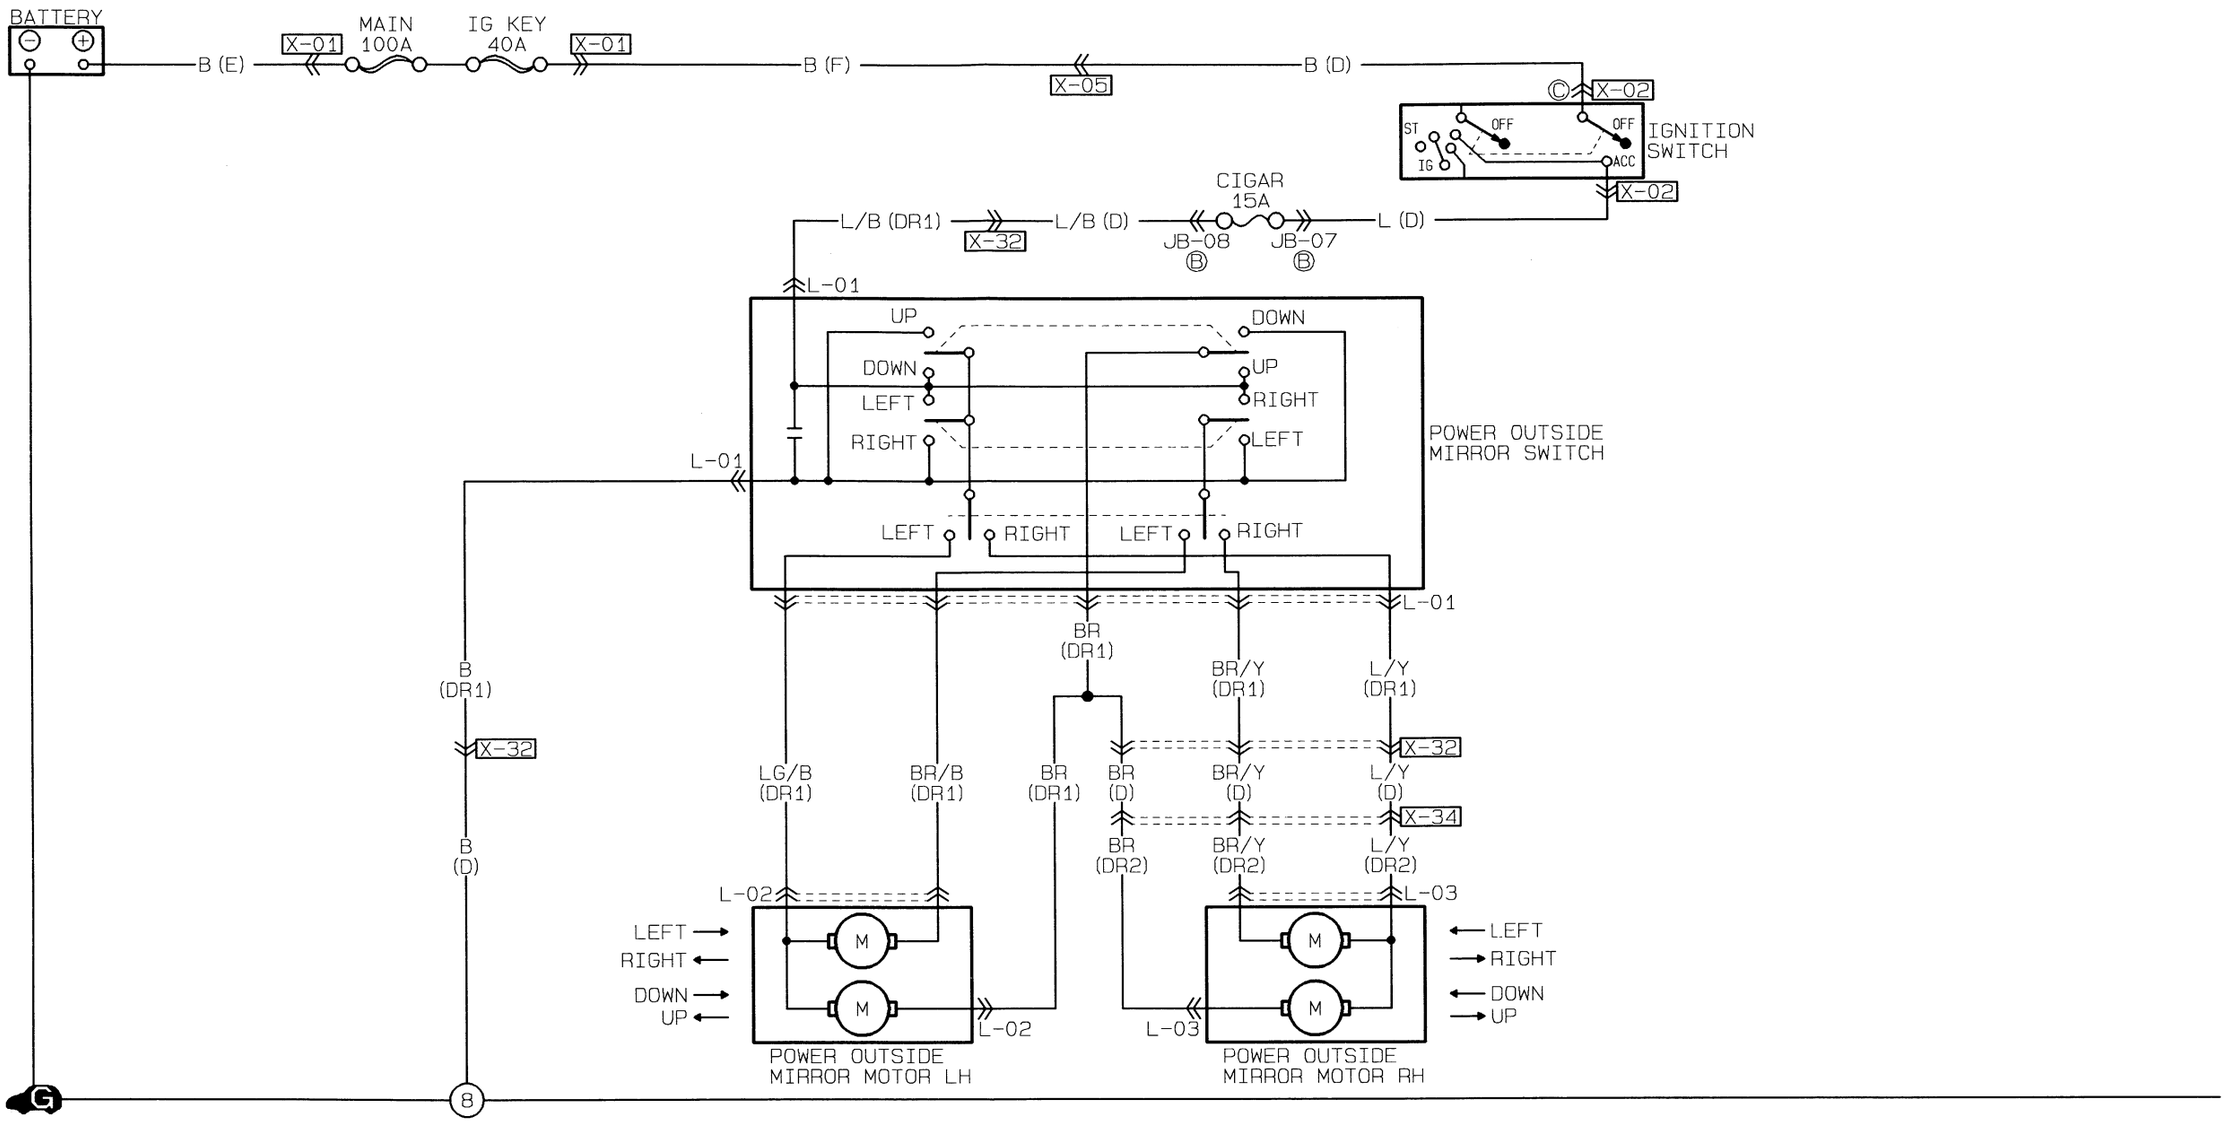

L-01 POWER OUTSIDE MIRROR SWITCH (DR1)



L-02 POWER OUTSIDE MIRROR MOTOR LH (DR1)

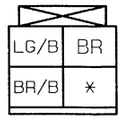

L-03 POWER OUTSIDE MIRROR MOTOR RH (DR2)

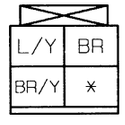

L

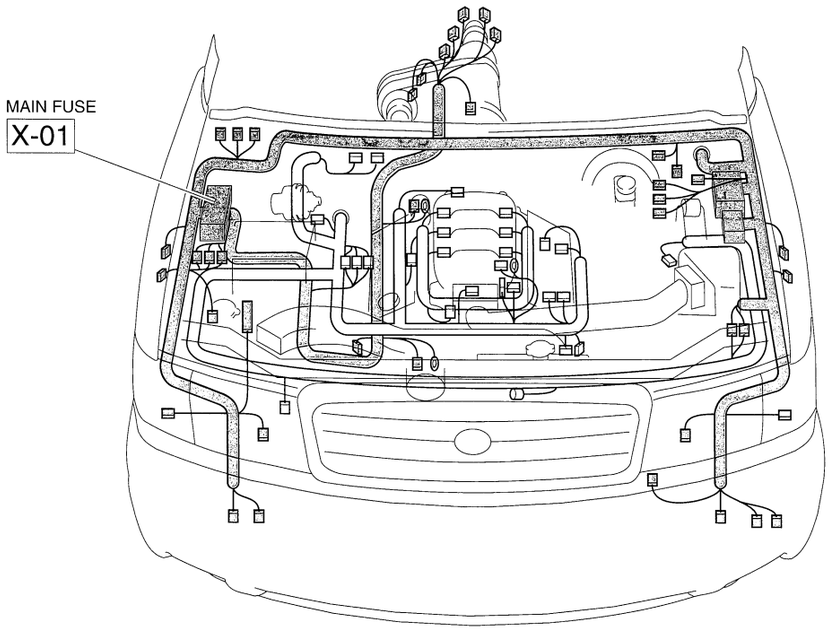
MAIN FUSE
X-01

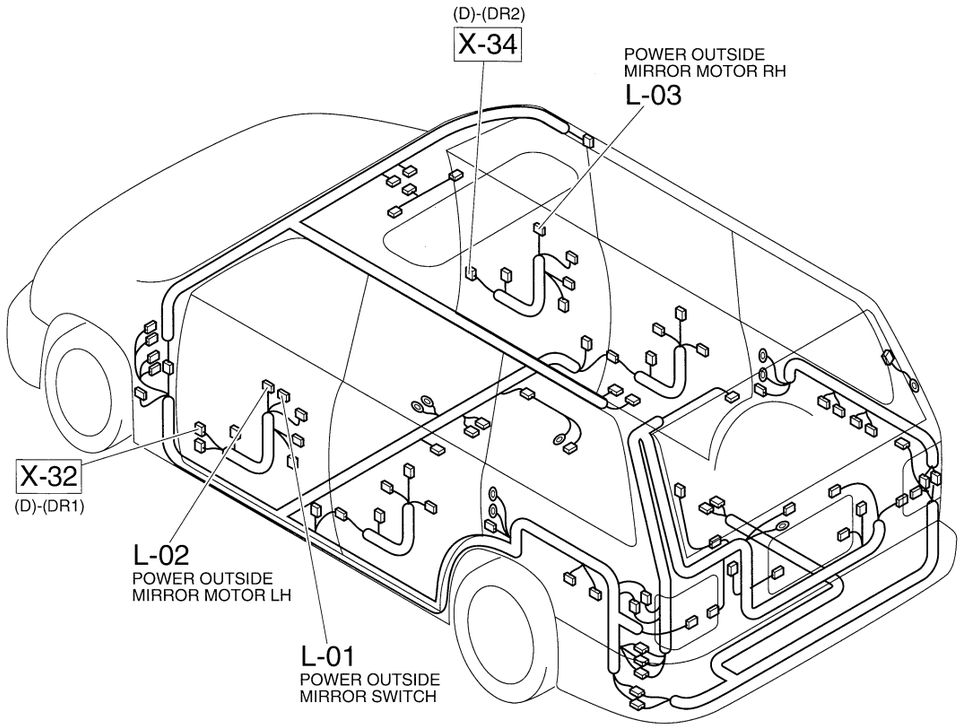
(D)-(DR2)
X-34
POWER OUTSIDE
MIRROR MOTOR RH
L-03
X-32
(D)-(DR1)
L-02
POWER OUTSIDE
MIRROR MOTOR LH
L-01
POWER OUTSIDE
MIRROR SWITCH

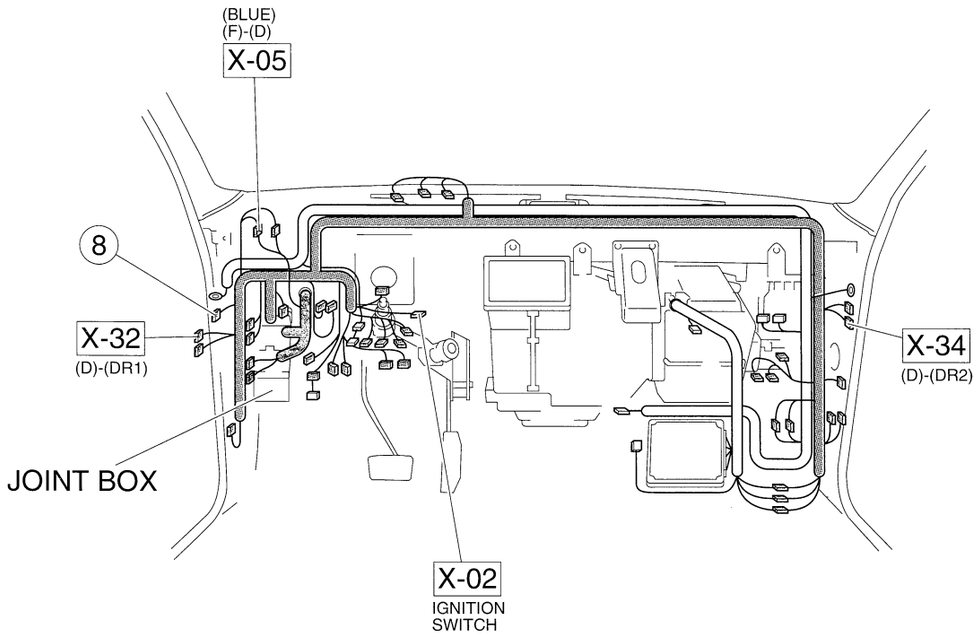
(BLUE)
(F)-(D)
X-05
8
X-32
(D)-(DR1)
JOINT BOX
X-34
(D)-(DR2)
X-02
IGNITION
SWITCH

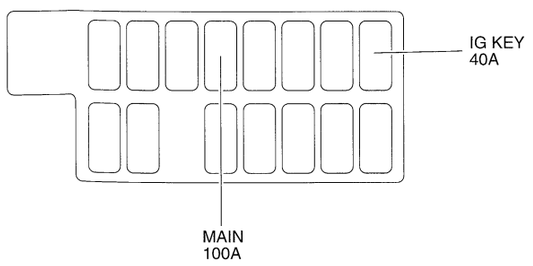
MAIN FUSE
IG KEY
40A
MAIN
100A

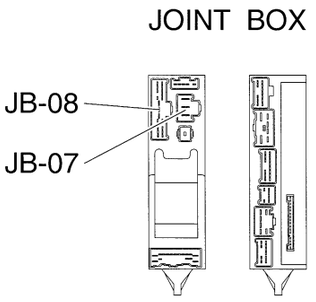
JOINT BOX
JB-08
JB-07

M ■ SLIDING SUNROOF

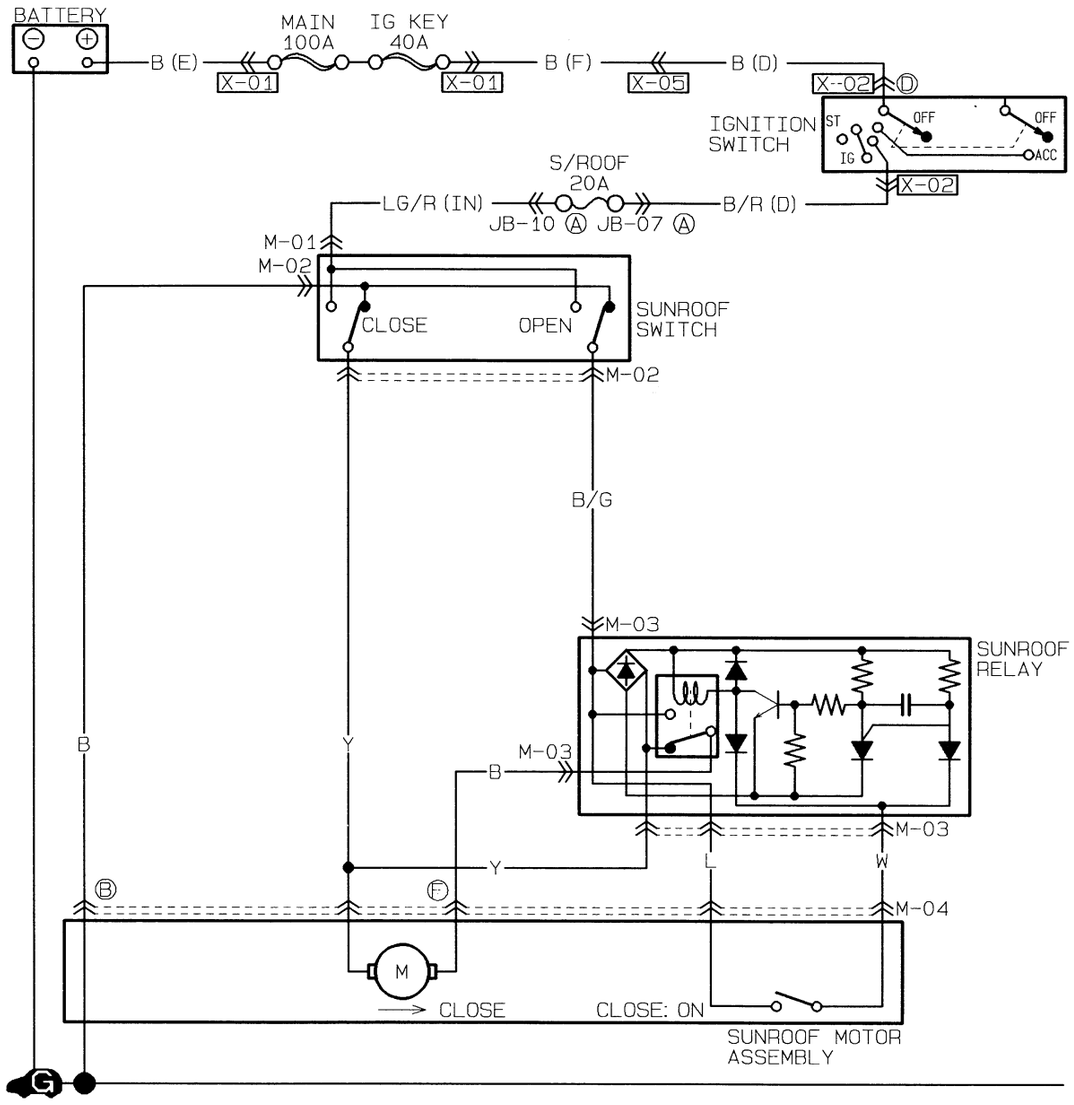

M-01 SUNROOF SWITCH (IN)



M-02 SUNROOF SWITCH



M-03 SUNROOF RELAY



M-04 SUNROOF MOTOR ASSEMBLY

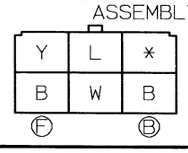

M

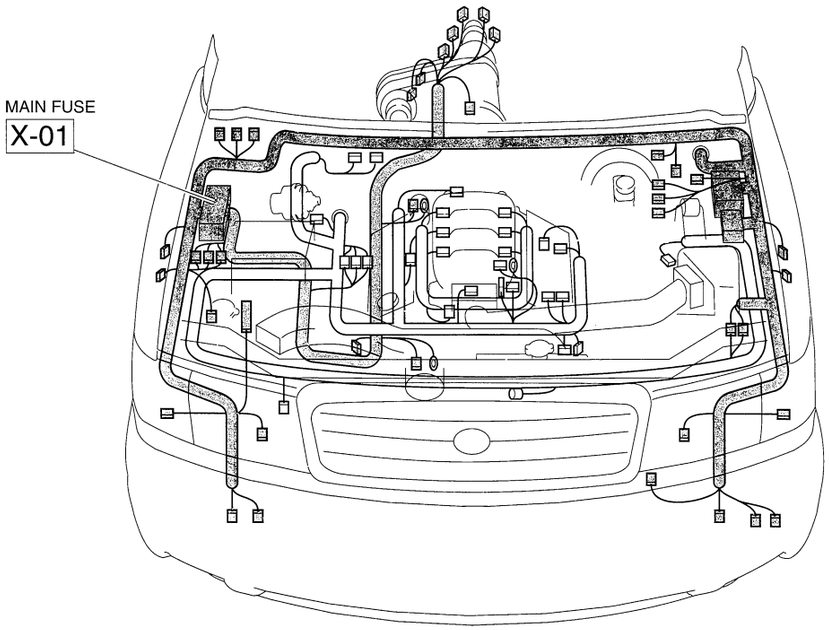
MAIN FUSE
X-01

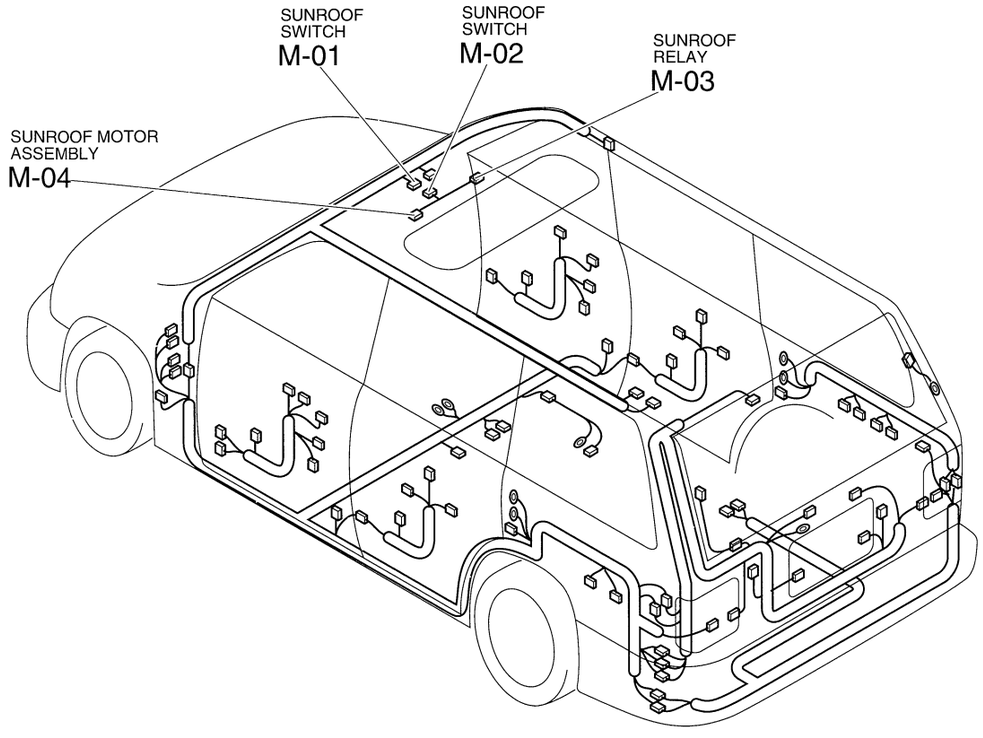
SUNROOF SWITCH
M-01
SUNROOF SWITCH
M-02
SUNROOF RELAY
M-03
SUNROOF MOTOR ASSEMBLY
M-04

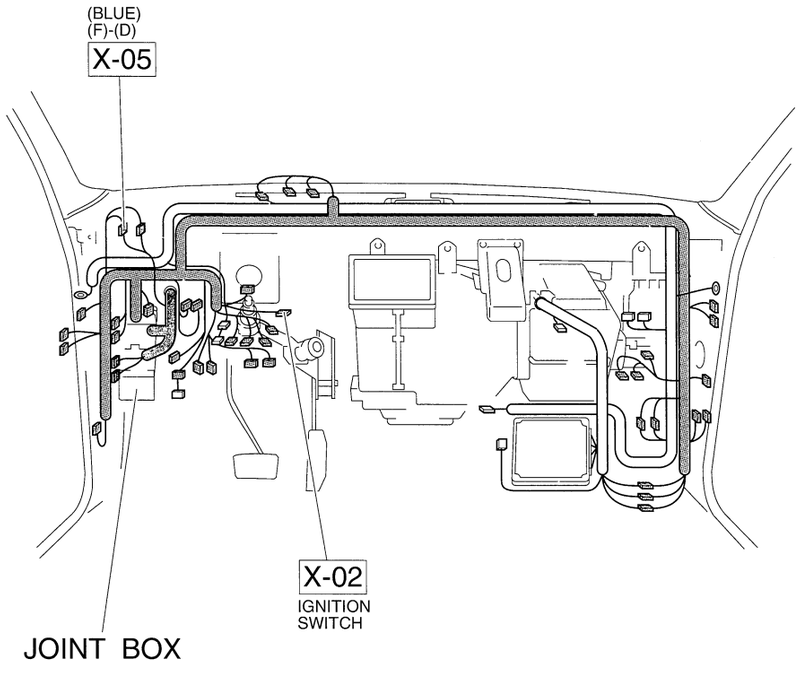
(BLUE)
(F)-(D)
X-05
X-02
IGNITION SWITCH
JOINT BOX

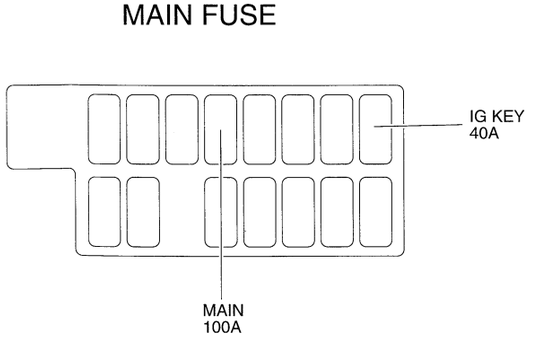
MAIN FUSE
IG KEY 40A
MAIN 100A

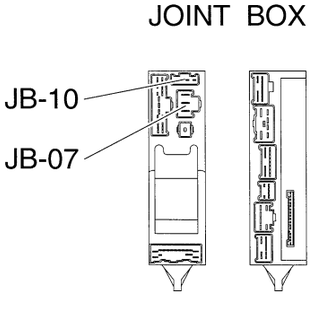
JOINT BOX
JB-10
JB-07

O ■ ANTILOCK BRAKE SYSTEM

() . . . 4WD

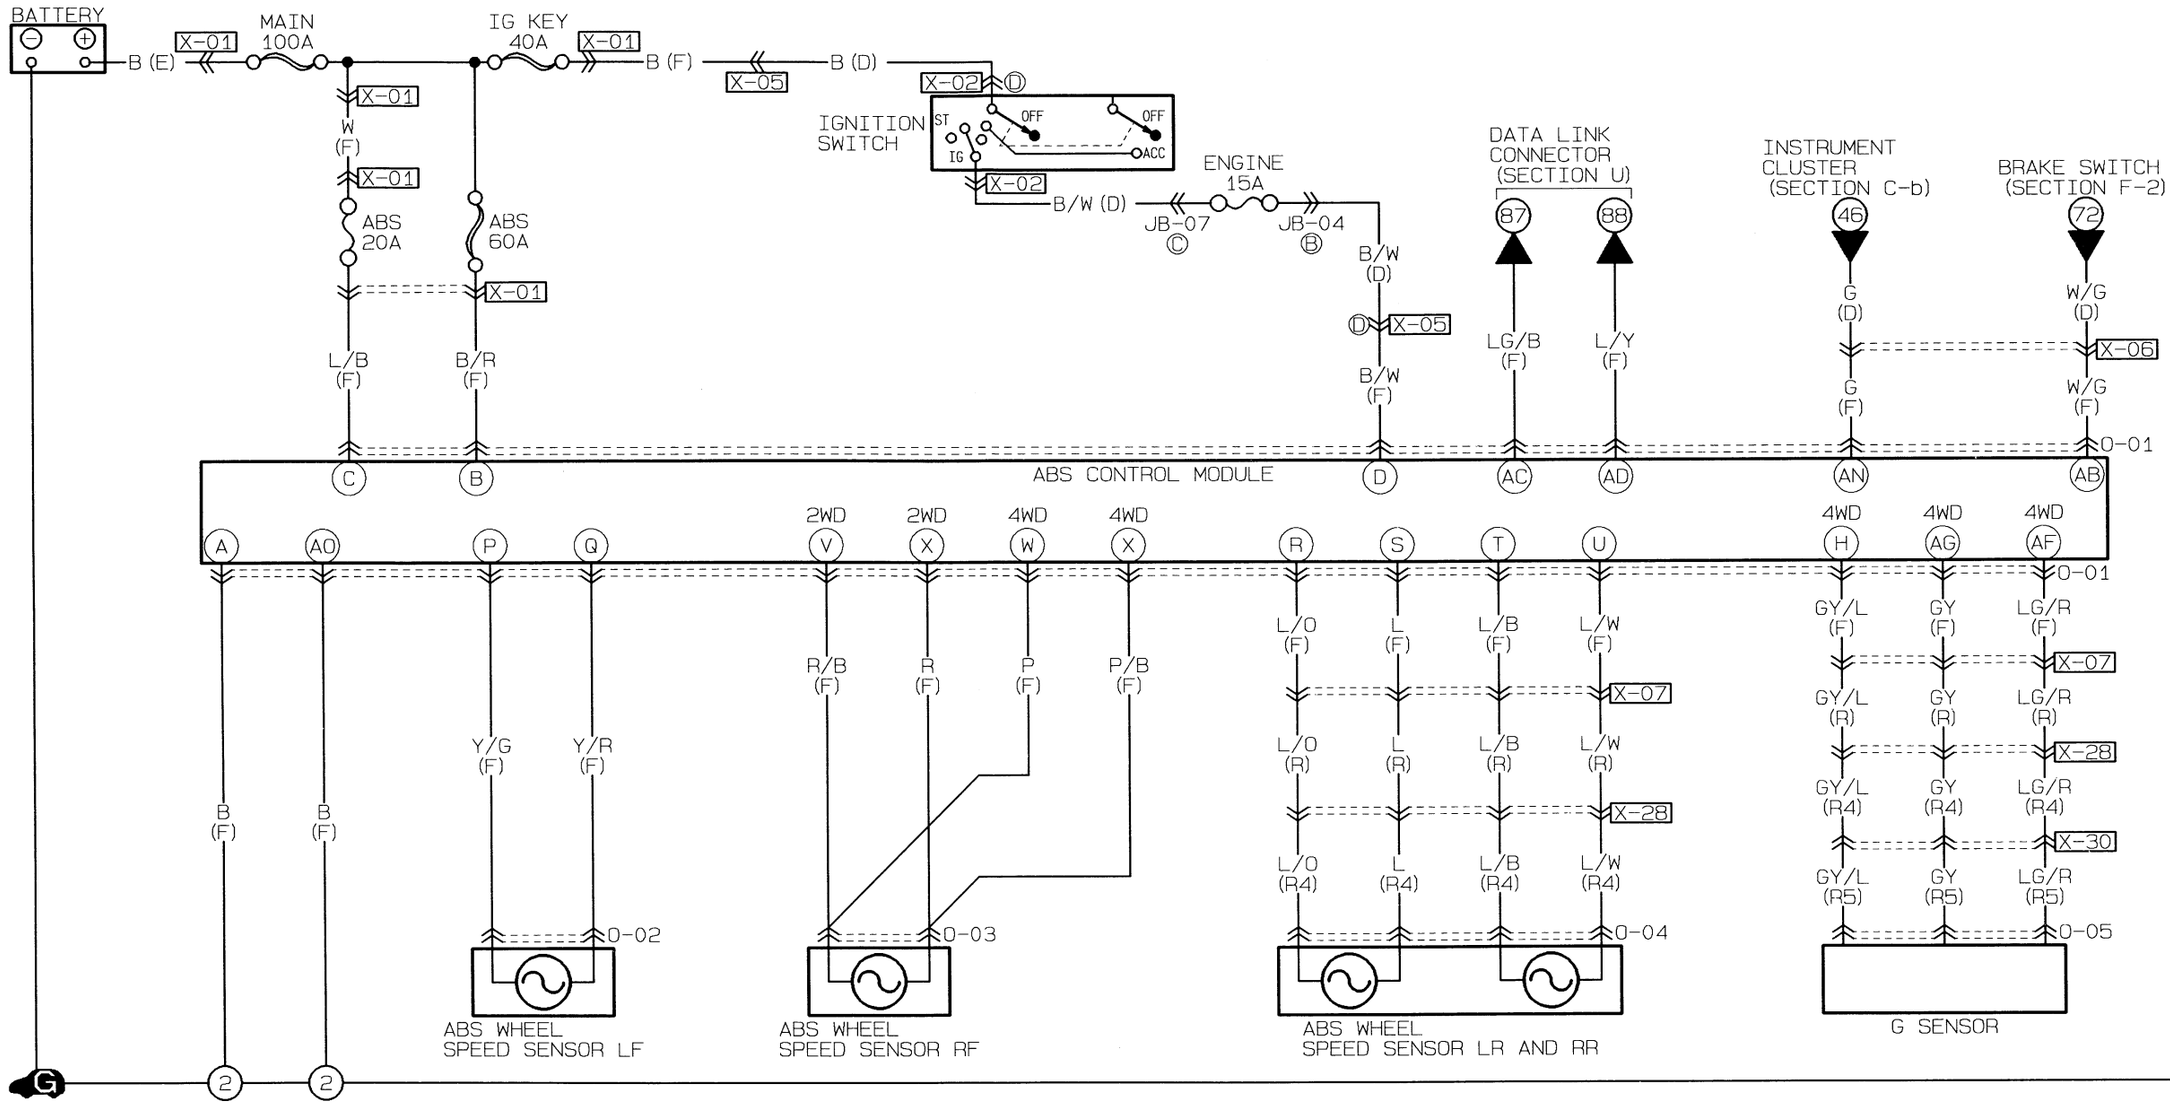

O-01 ABS CONTROL MODULE (F)

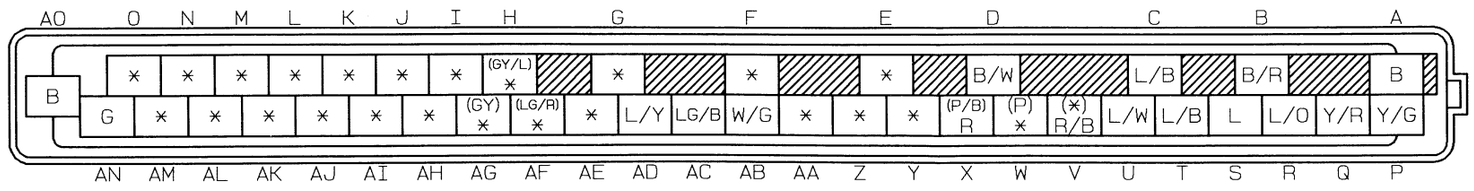

O-02 ABS WHEEL SPEED SENSOR LF (F)



O-03 ABS WHEEL SPEED SENSOR RF (F)



O-04 ABS WHEEL SPEED SENSOR LR AND RR (R4)

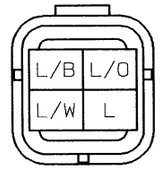

O-05 G SENSOR (R5)

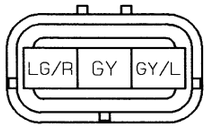

O

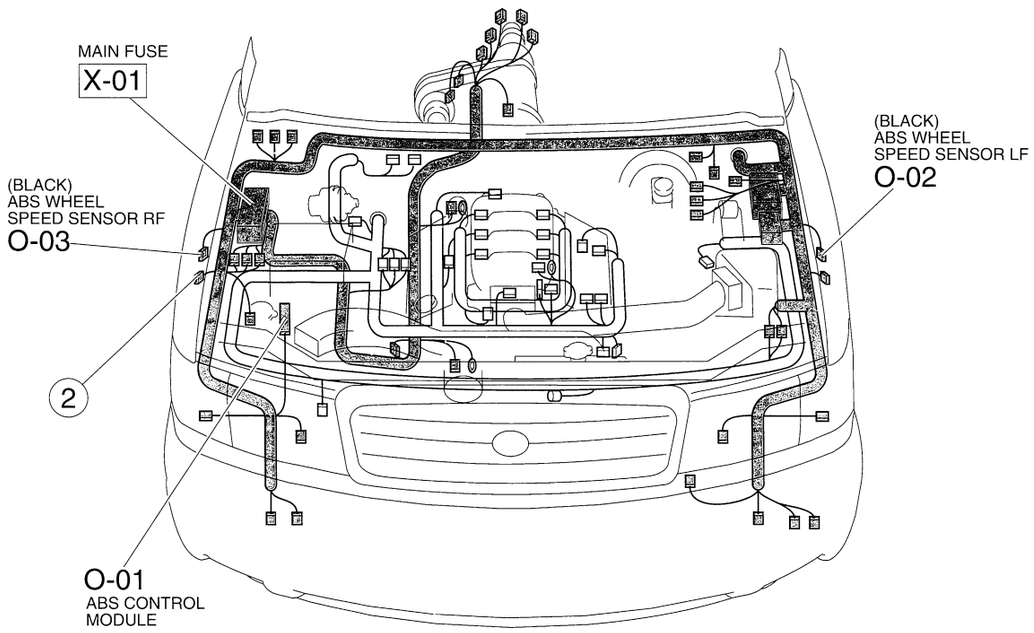
MAIN FUSE
X-01
(BLACK)
ABS WHEEL
SPEED SENSOR RF
O-03
2
O-01
ABS CONTROL
MODULE
(BLACK)
ABS WHEEL
SPEED SENSOR LF
O-02

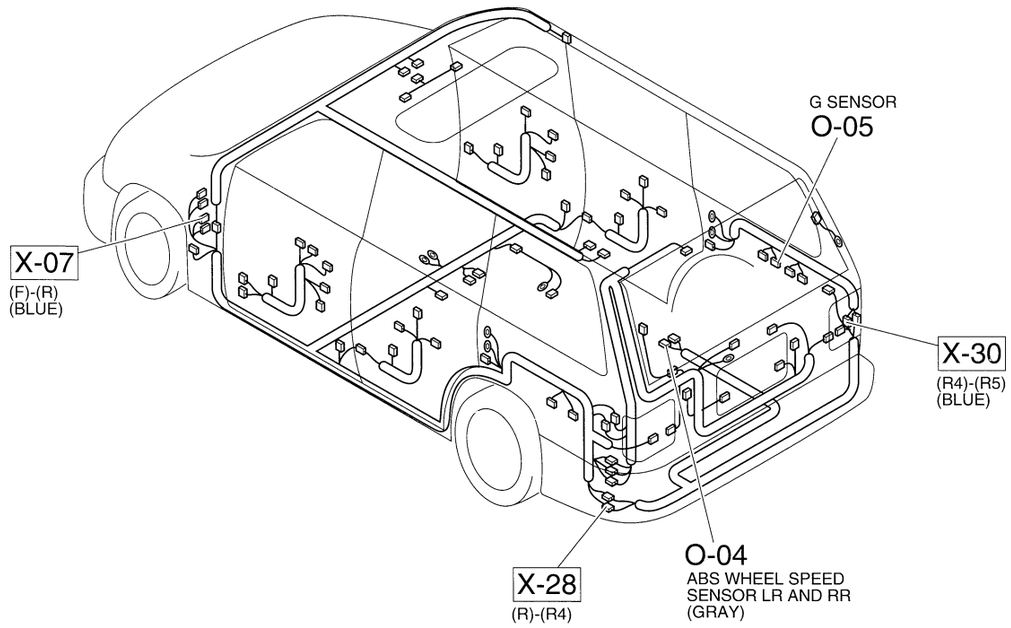
G SENSOR
O-05
X-07
(F)-(R)
(BLUE)
X-30
(R4)-(R5)
(BLUE)
O-04
ABS WHEEL SPEED
SENSOR LR AND RR
(GRAY)
X-28
(R)-(R4)

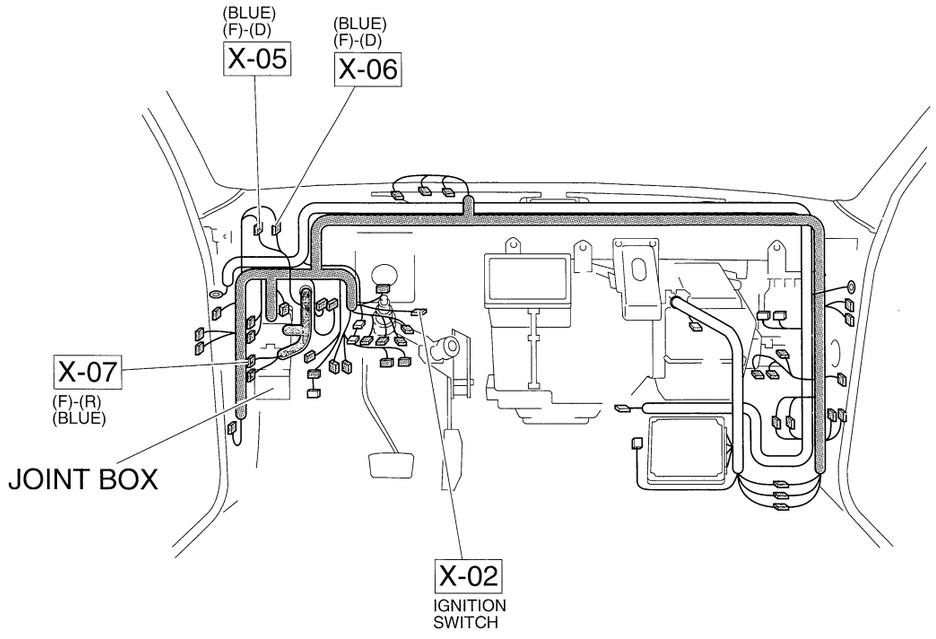
(BLUE)
(F)-(D)
X-05
(BLUE)
(F)-(D)
X-06
X-07
(F)-(R)
(BLUE)
JOINT BOX
X-02
IGNITION
SWITCH

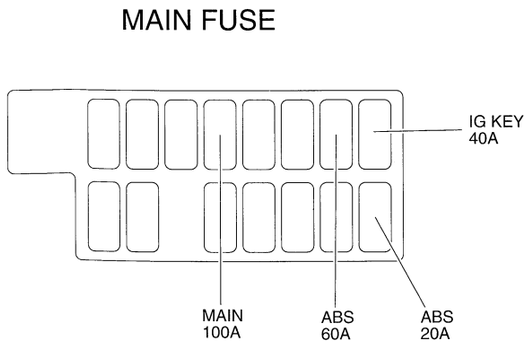
MAIN FUSE
IG KEY
40A
MAIN
100A
ABS
60A
ABS
20A

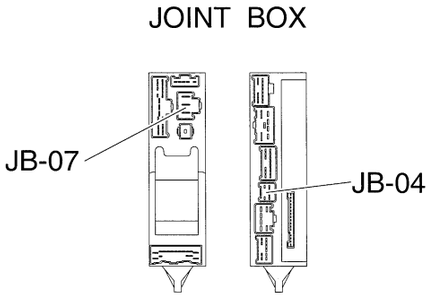
JOINT BOX
JB-07
JB-04

Q ■ CRUISE CONTROL SYSTEM

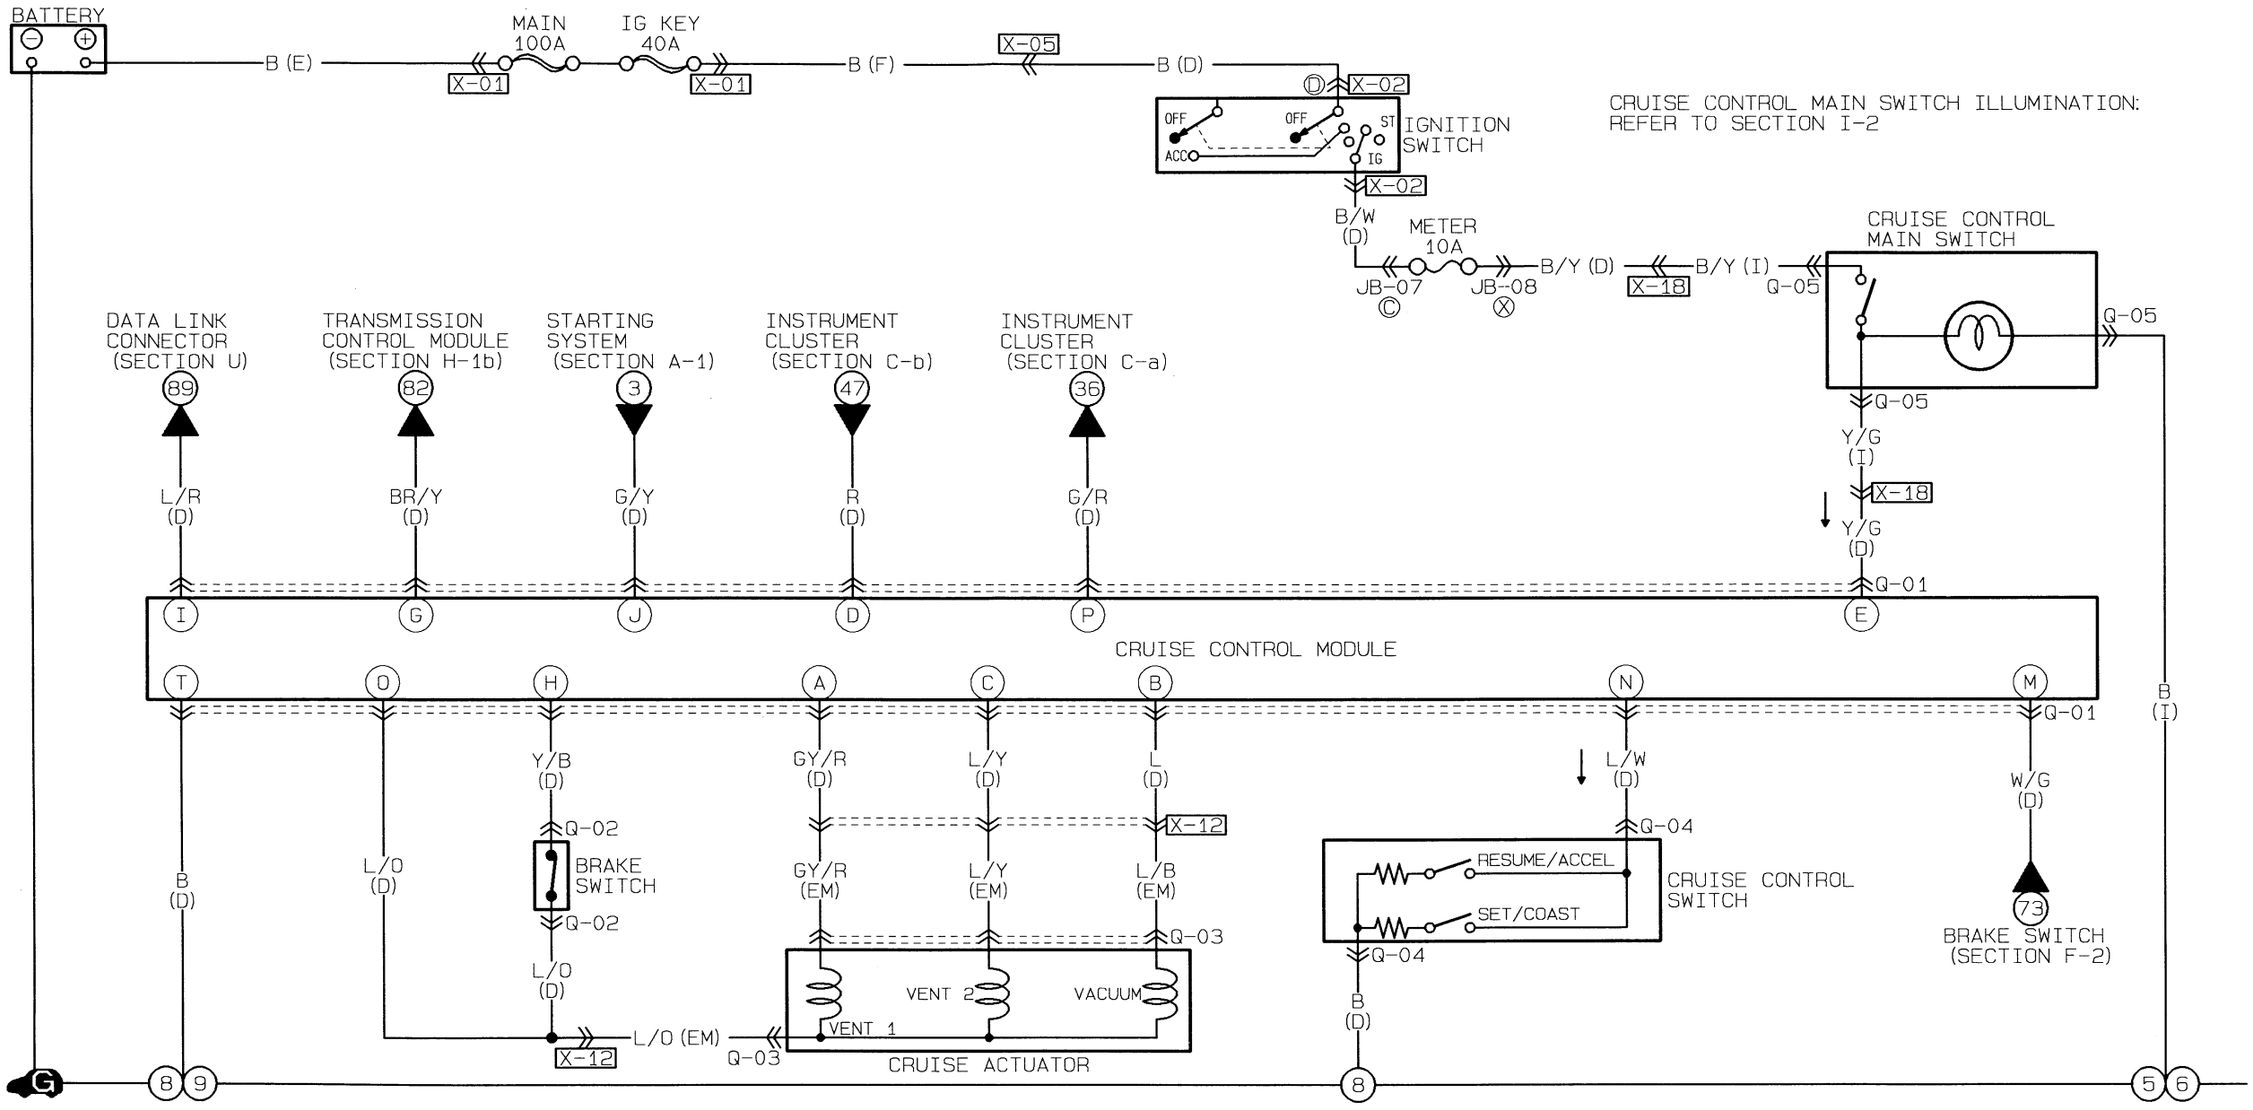

Q-01 CRUISE CONTROL MODULE (D)

S	Q	O	M	K	I	G	E	C	A
*	*	L/O	W/G	*	L/R	BR/Y	Y/G	L/Y	GY/R
B	*	G/R	L/W	*	G/Y	Y/B	*	R	L
T	R	P	N	L	J	H	F	D	B

Q-02 BRAKE SWITCH (D)

Y/B	L/O

Q-03 CRUISE ACTUATOR (EM)

L/O	L/Y
GY/R	L/B

Q-04 CRUISE CONTROL SWITCH (D)

*	L/W
B	*

Q-05 CRUISE CONTROL MAIN SWITCH (I)

*	Y/G	R/W
B	B/Y	R

Q

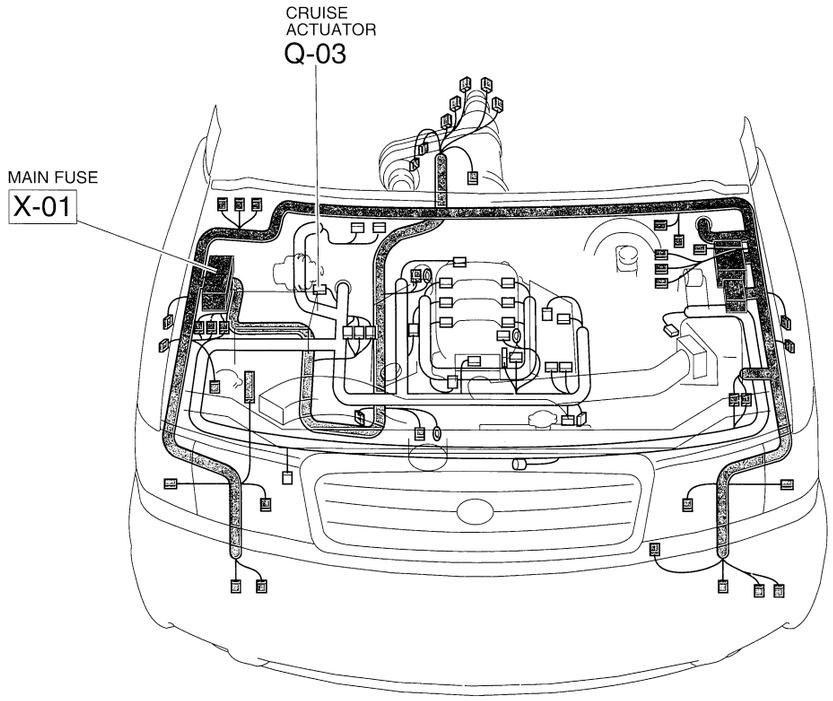
CRUISE
ACTUATOR
Q-03
MAIN FUSE
X-01

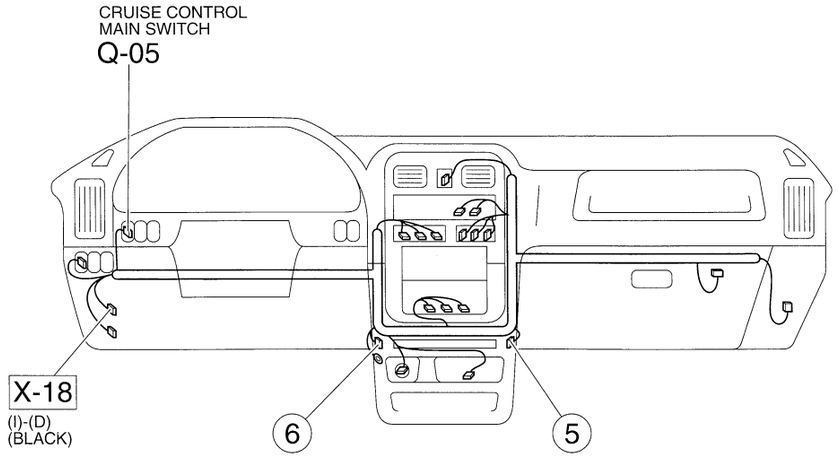
CRUISE CONTROL
MAIN SWITCH
Q-05
X-18
(I)-(D)
(BLACK)
6
5

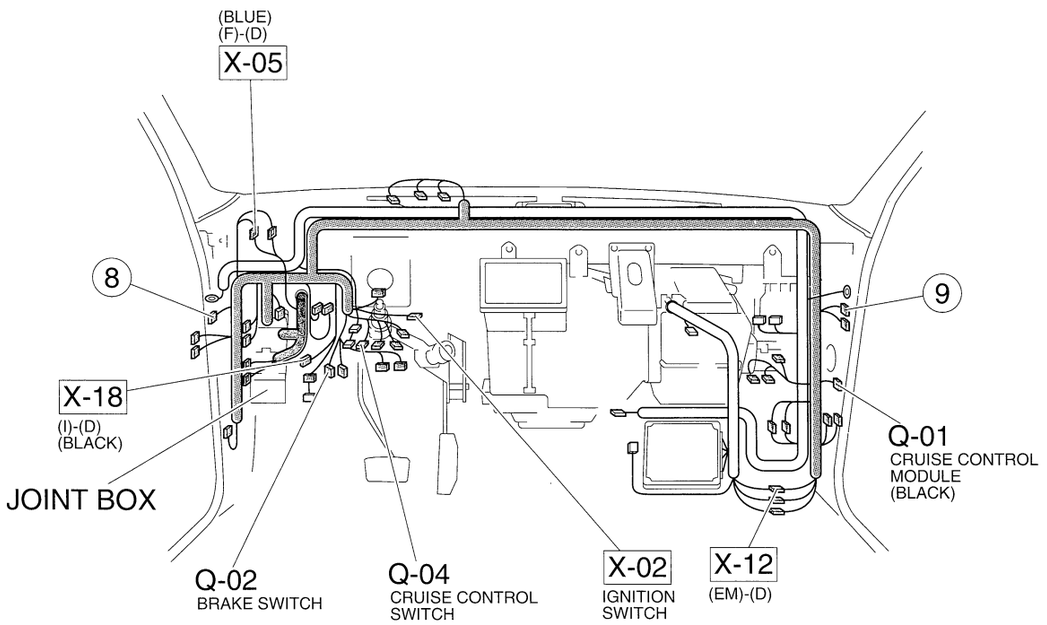
(BLUE)
(F)-(D)
X-05
8
9
X-18
(I)-(D)
(BLACK)
JOINT BOX
Q-02
BRAKE SWITCH
Q-04
CRUISE CONTROL
SWITCH
X-02
IGNITION
SWITCH
X-12
(EM)-(D)
Q-01
CRUISE CONTROL
MODULE
(BLACK)

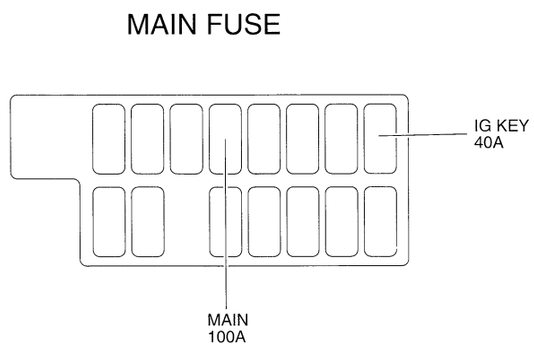
MAIN FUSE
IG KEY
40A
MAIN
100A

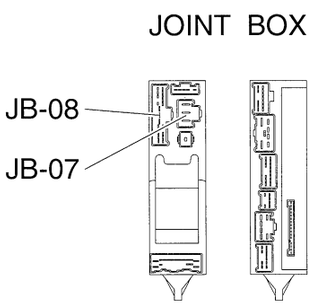
JOINT BOX
JB-08
JB-07

R ■ AUTOMATIC LOAD LEVELING (ALL) SYSTEM

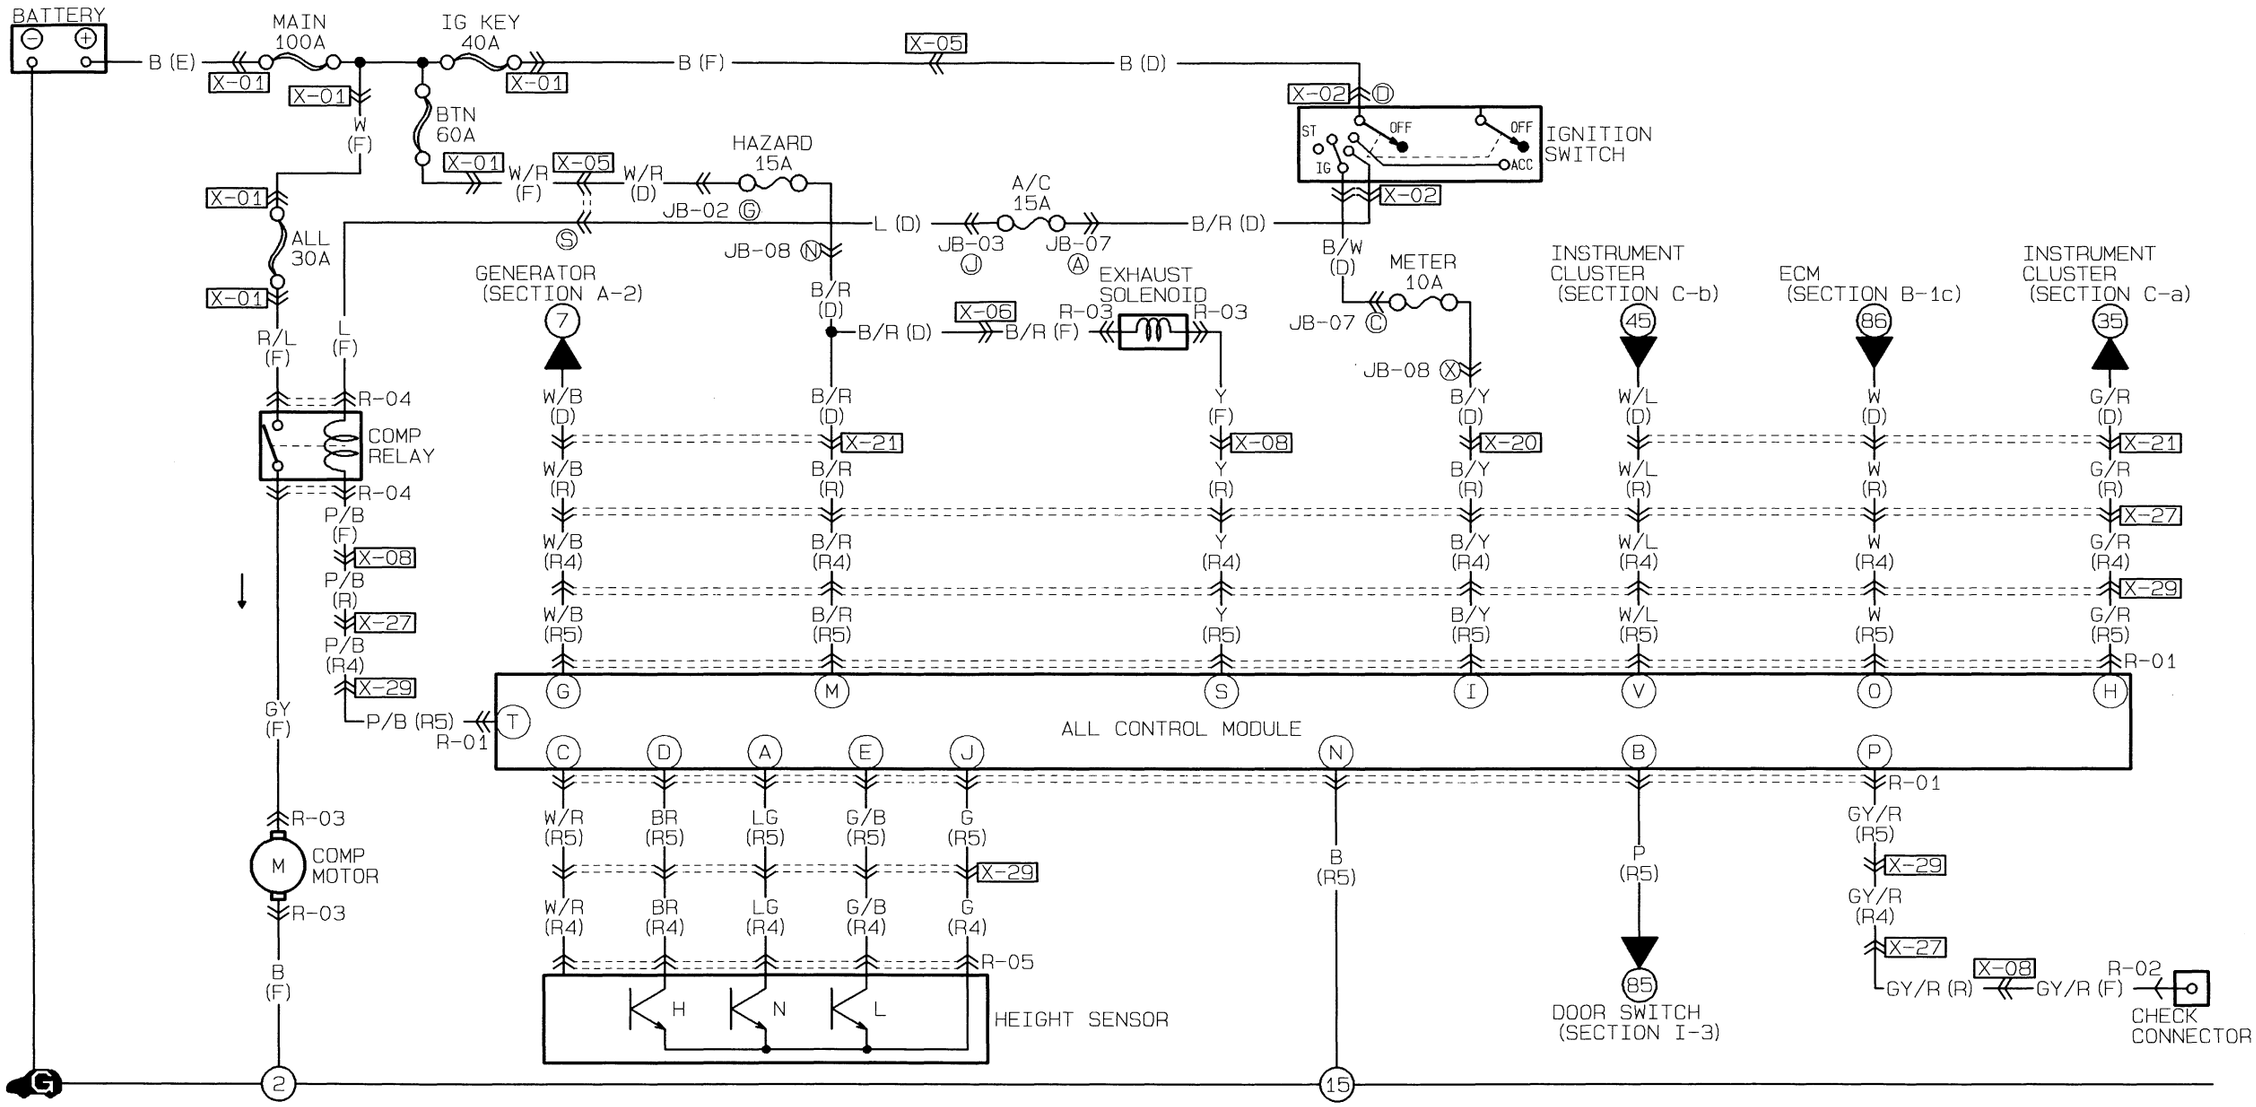

R-01 ALL CONTROL MODULE (R5)

U	S	Q	O	M		I	G	E	C	A
*	Y	*	W	B/R		B/Y	W/B	G/B	W/R	LG
W/L	P/B	*	GY/R	B	*	G	G/R	*	BR	P
V	T	R	P	N	L	J	H	F	D	B

R-02 CHECK CONNECTOR (F)

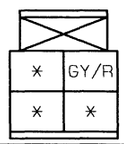

R-03 COMP MOTOR AND EXHAUST SOLENOID (F)



R-04 COMP RELAY (F)



R-05 HEIGHT SENSOR (R4)

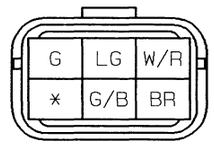

R

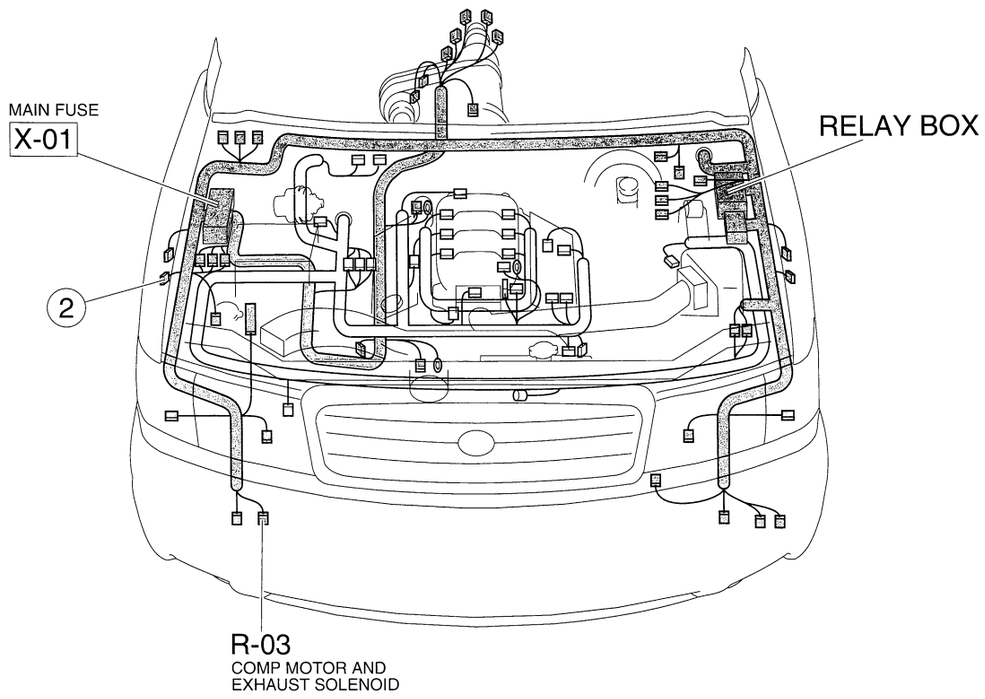

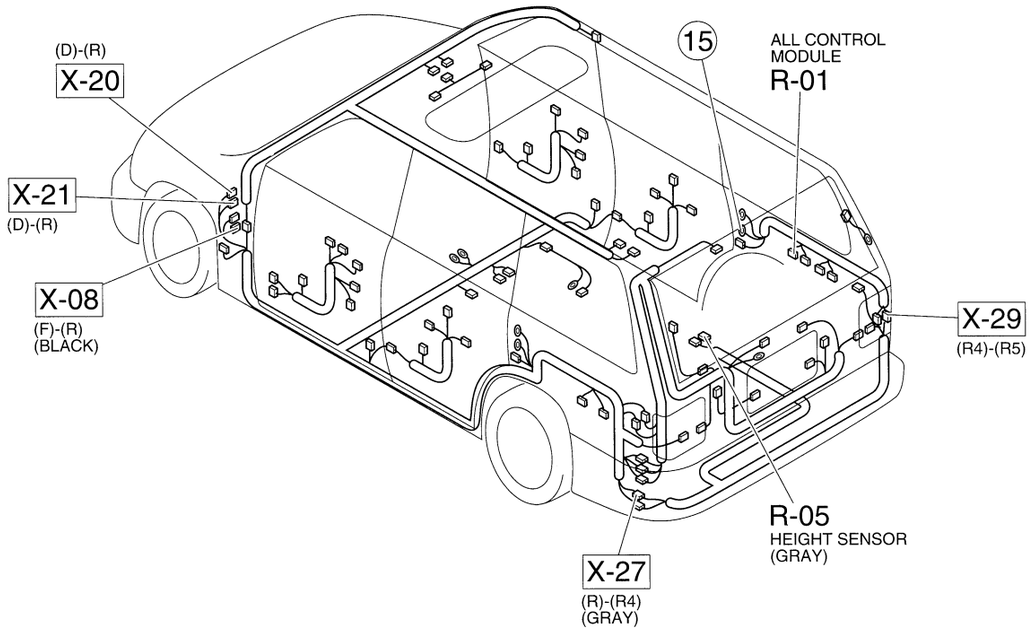

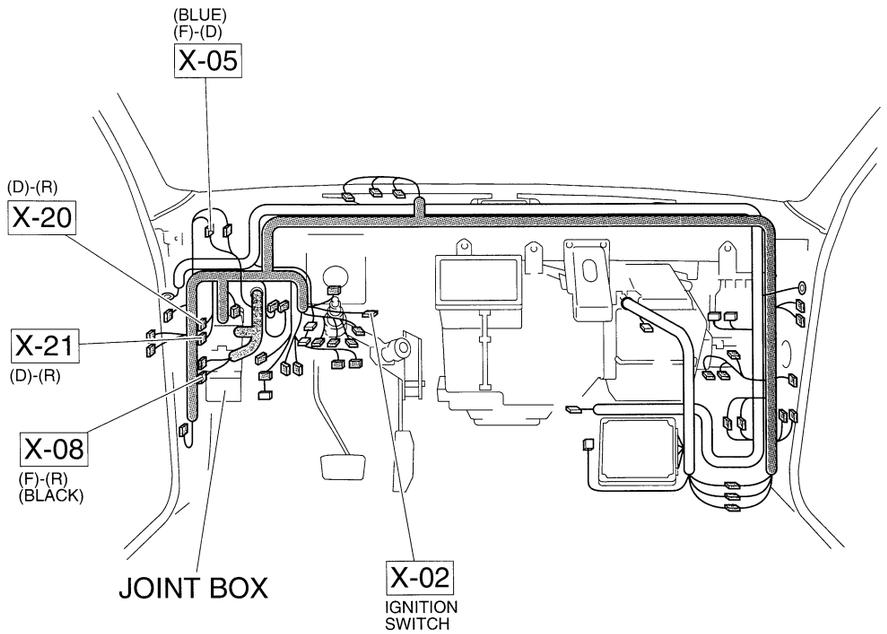

MAIN FUSE

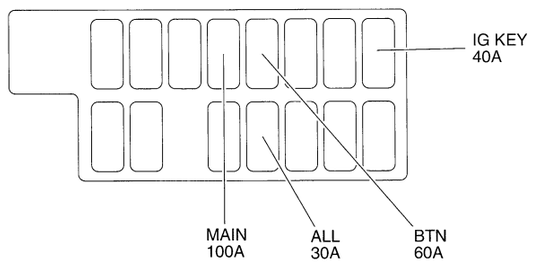

JOINT BOX

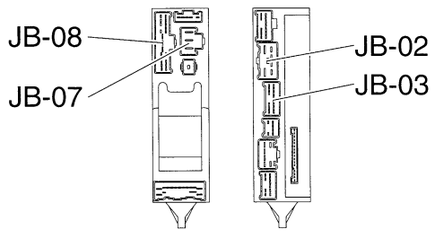

RELAY BOX

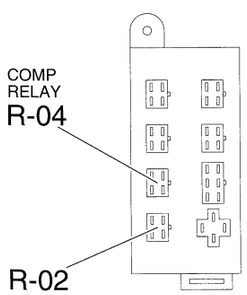

S

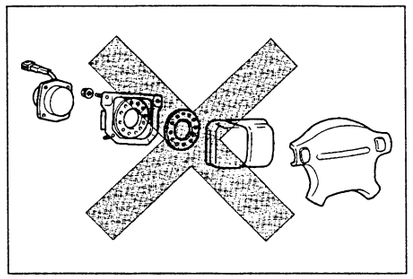

SERVICE WARNINGS
Component Disassembly
- **Disassembling and reassembling the components of the air bag system can render the system inoperative, which may result in serious injury or death in the event of an accident. Do not disassemble any air bag system components.**

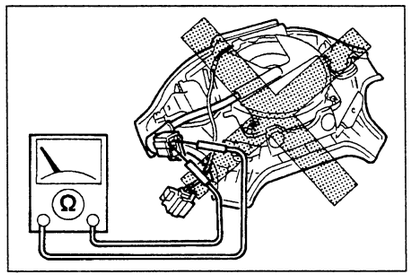

Air Bag Module Inspection
- **Inspecting the air bag module with an ohmmeter can deploy the air bag, which can cause serious injury. Do not use an ohmmeter to inspect the air bag module.**

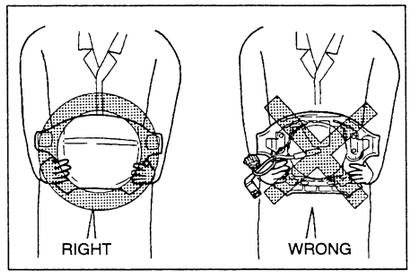

Air Bag Module Handling
- **A live (undeployed) air bag may accidently deploy when it is handled and cause serious injury. When carrying a live air bag module, point the trim cover away from your body to lesson the chance of injury in case it deploys.**

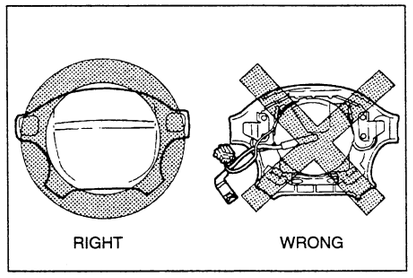

- **A live air bag placed face down on a surface is dangerous. If the air bag deploys, the motion of the module can cause serious injury. Always face the trim cover up to reduce the motion of the module in case it accidently deploys.**

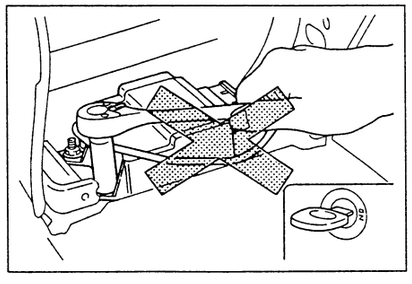

SAS Unit Handling
- **Disconnecting the SAS unit connector or removing the SAS unit with the ignition switch at ON can cause the air bags to deploy, which may seriously injure you. Before disconnecting the SAS unit connector or removing the SAS unit, turn the ignition switch to LOCK.**

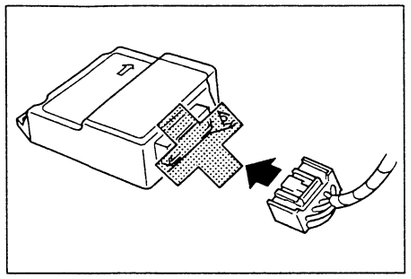

- **Connecting the SAS unit connector before installing the SAS unit is dangerous. The shock of installation can cause the air bags to deploy, which may seriously injure you. Before connecting the SAS unit connector, firmly mount the SAS unit to the vehicle.**

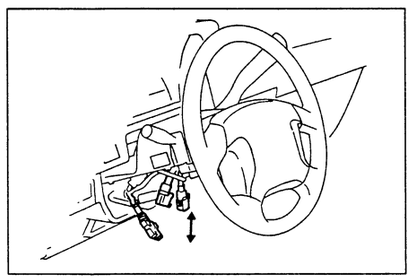

GENERAL PROCEDURES
Before Servicing
1. Turn the ignition switch to LOCK.
2. Disconnect the negative battery cable and wait for more than one minute to allow the backup power supply to deplete its stored power.
3. Remove the column cover.
   (Refer to section S.)
4. Disconnect the orange and blue clock spring connectors.

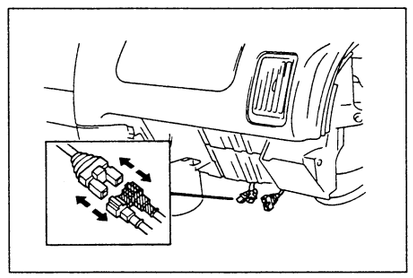

5. Remove the glove compartment cover.
   (Refer to section S.)
6. Disconnect the orange and blue passenger-side air bag module connector.

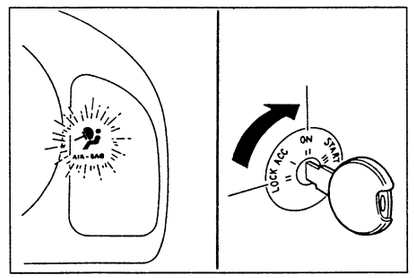

After Servicing
1. Connect the negative battery cable.
2. Turn the ignition switch to ON.
3. Verify that the air bag system warning light illuminates for approximately 6 seconds and then goes off.

S ■ AIR BAG SYSTEM

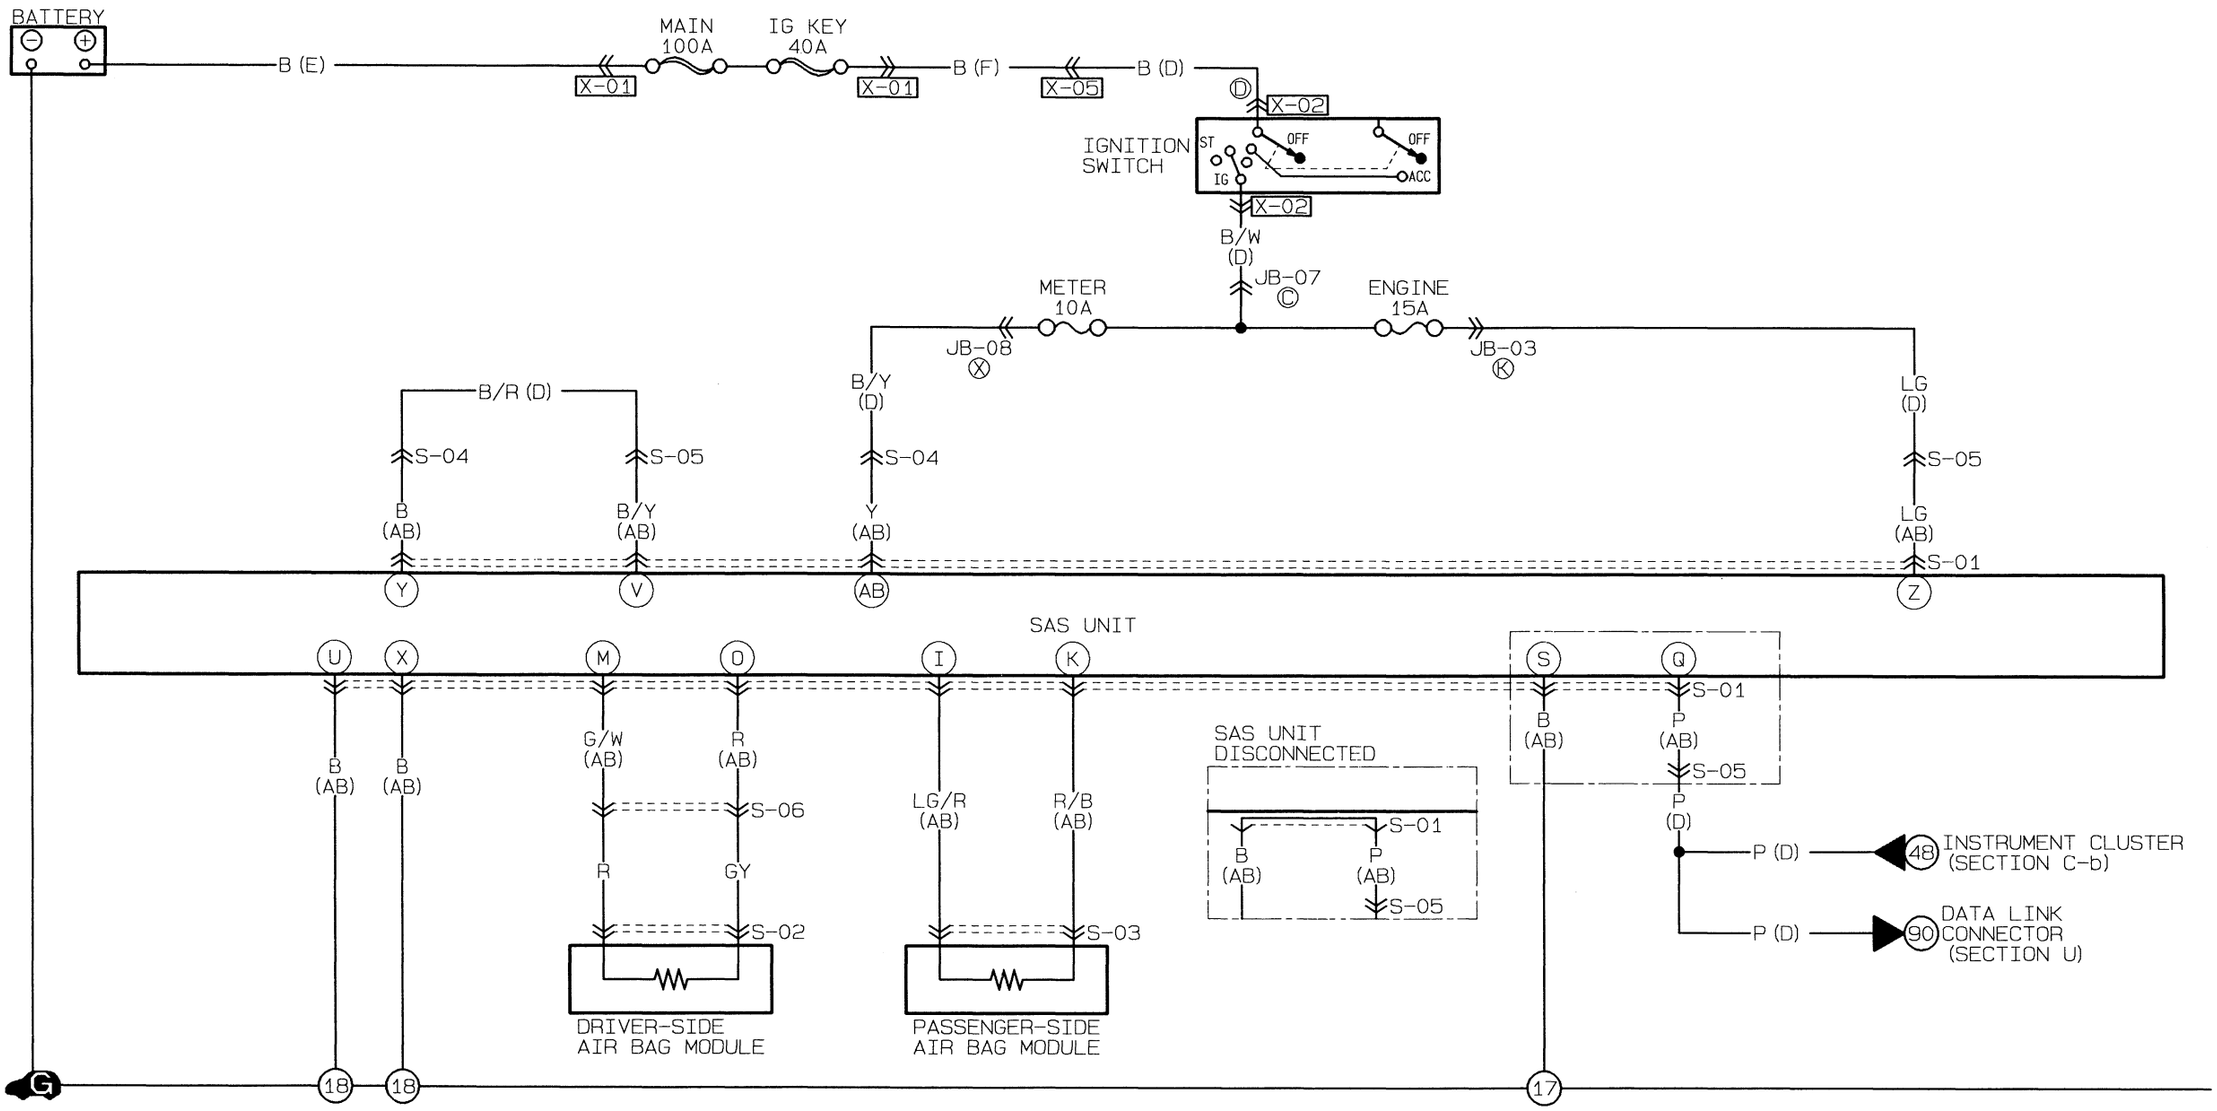

S-01 SAS UNIT (AB)

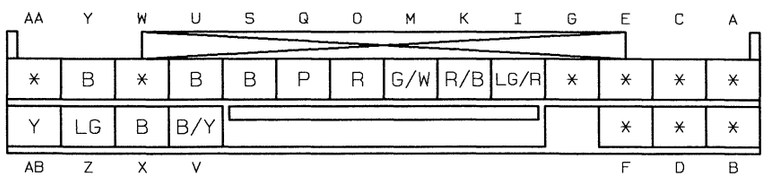

S-02 DRIVER-SIDE AIR BAG MODULE

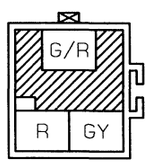

S-03 PASSENGER-SIDE AIR BAG MODULE (AB)

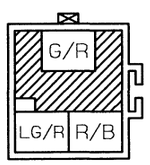

S-06 AIR BAG (AB) -CLOCK SPRING

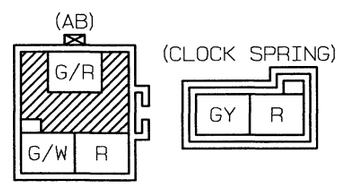

S-04 DASH (D) -AIR BAG (AB)



S-05 DASH (D) -AIR BAG (AB)



S

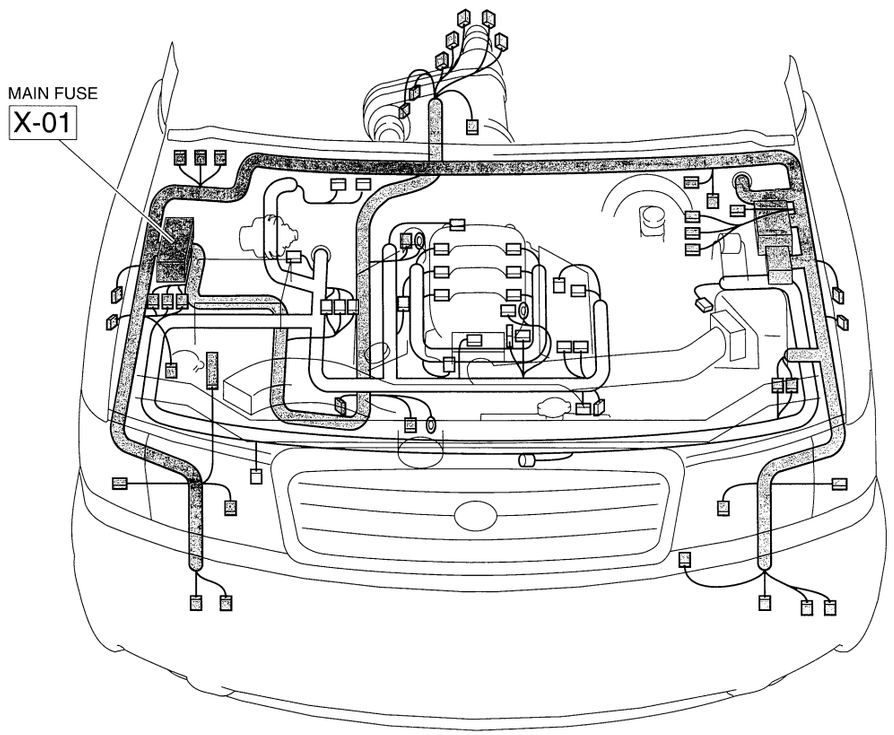

MAIN FUSE

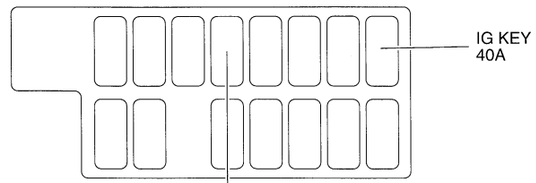

JOINT BOX

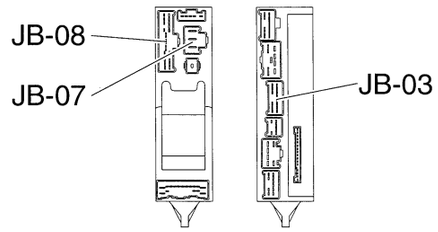

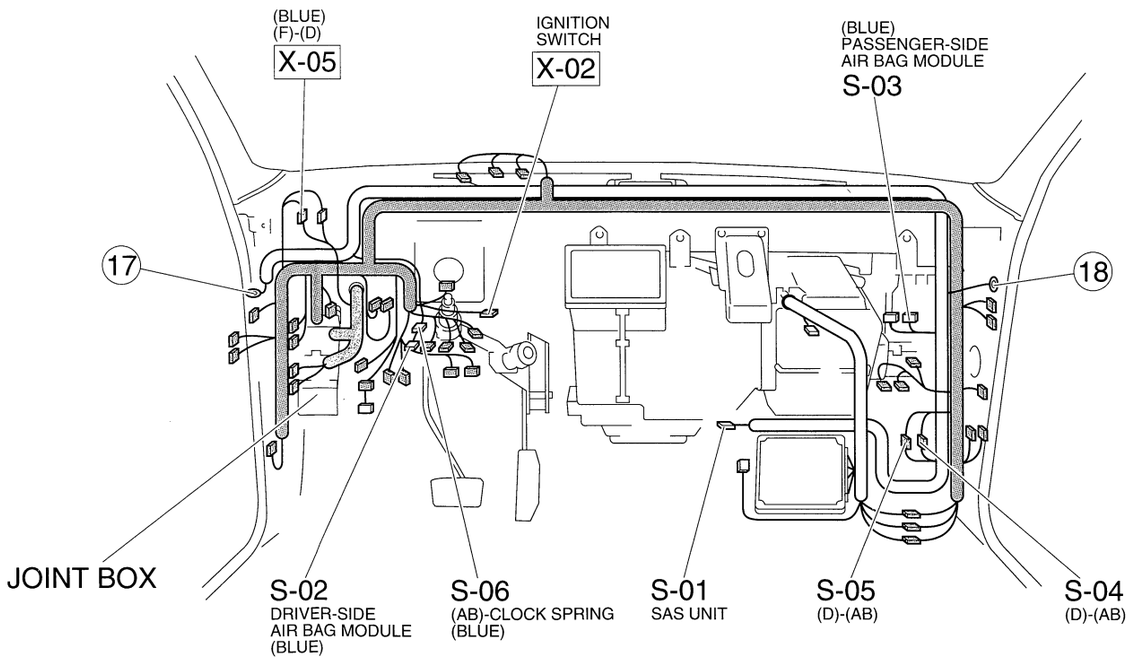

U ■ DATA LINK CONNECTORS

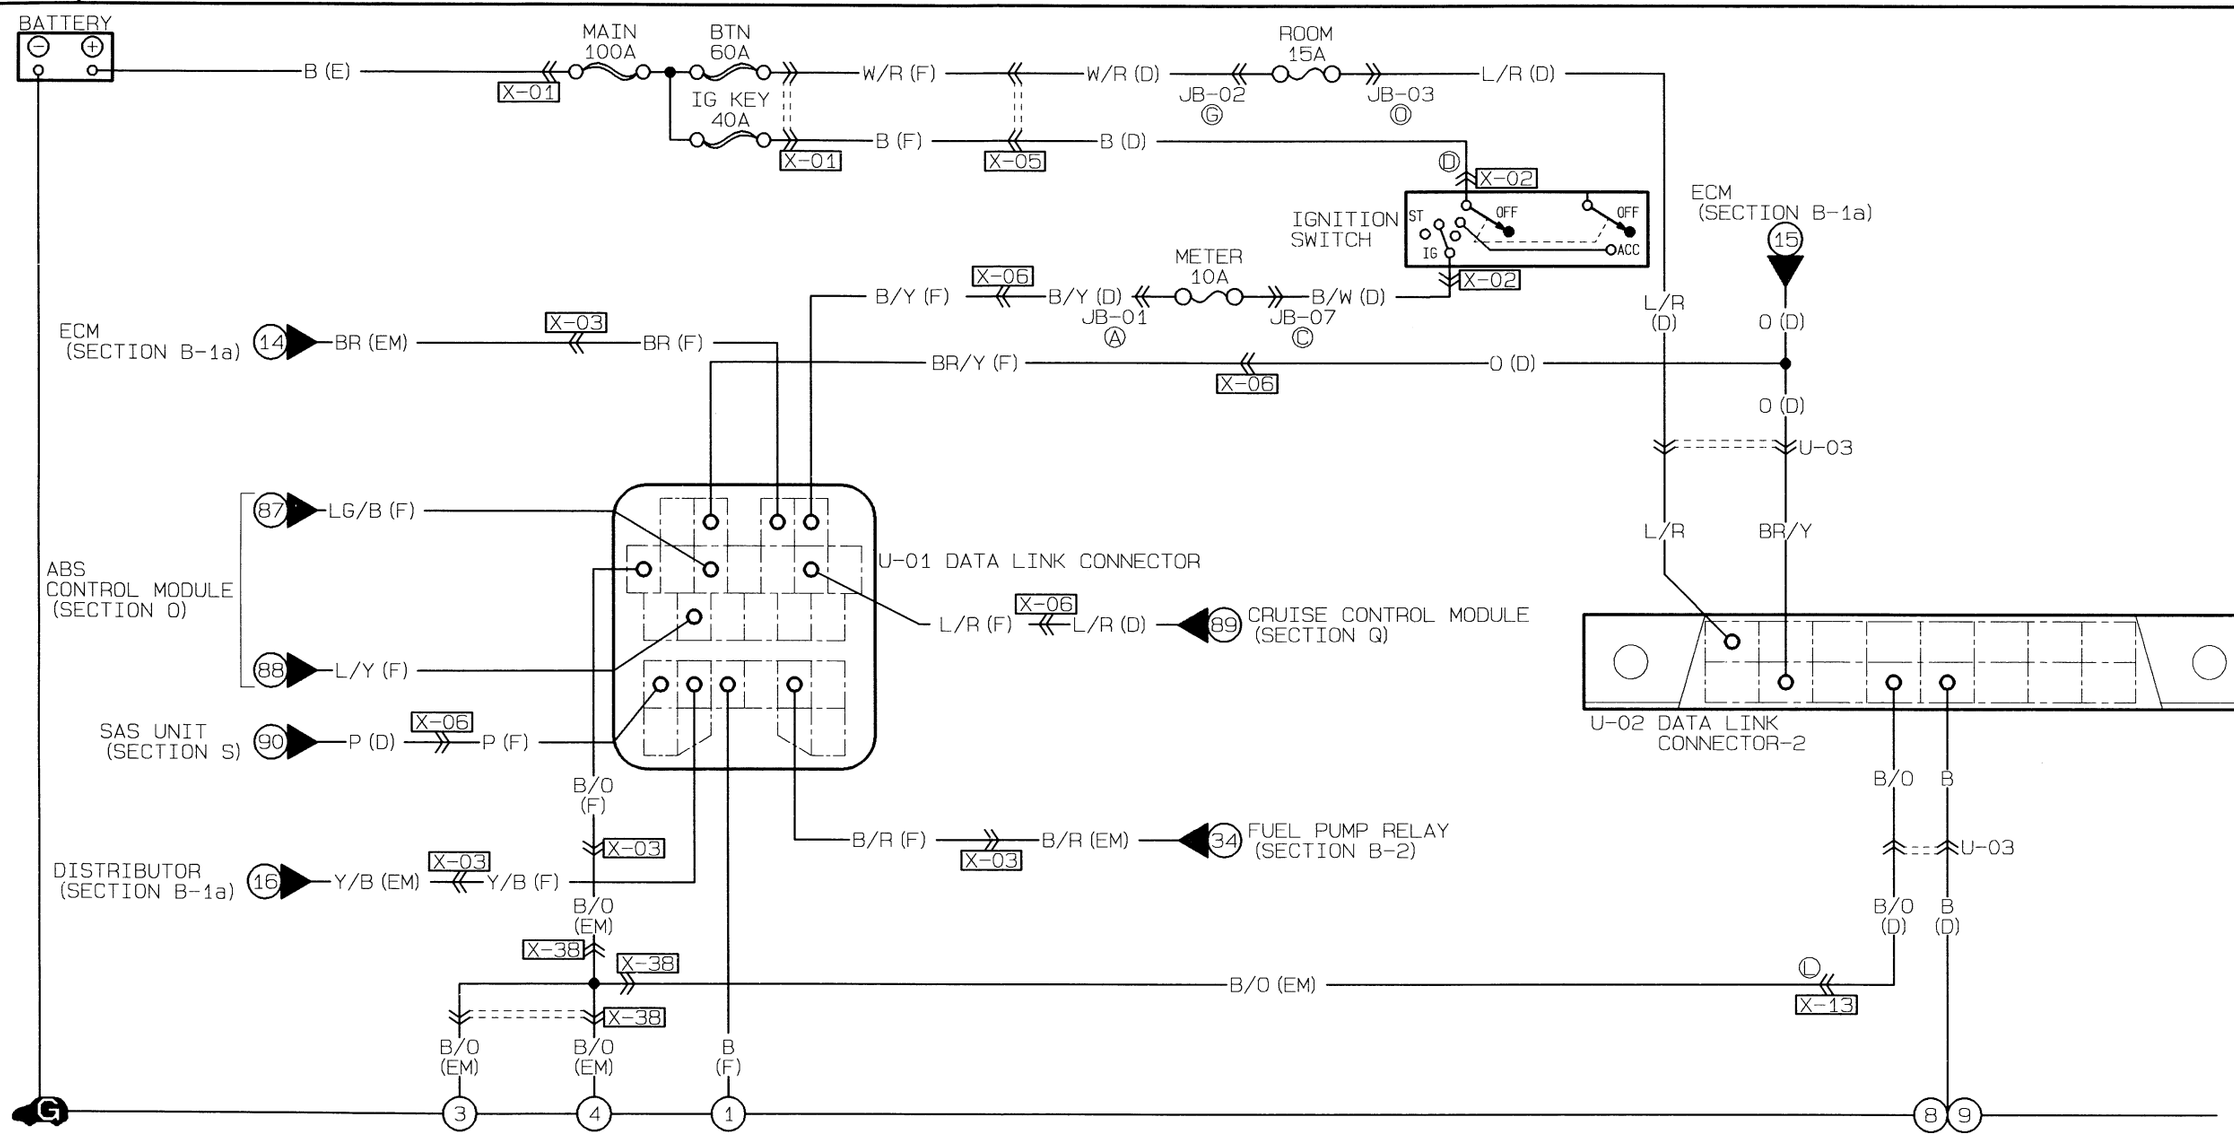

U-01 DATA LINK CONNECTOR (F)

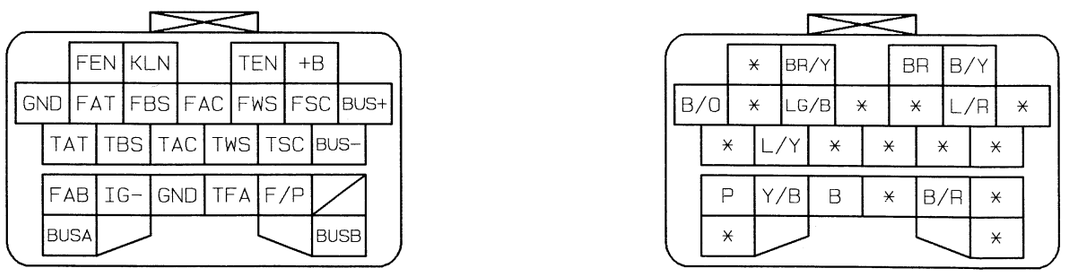

NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.

U-02 DATA LINK CONNECTOR-2

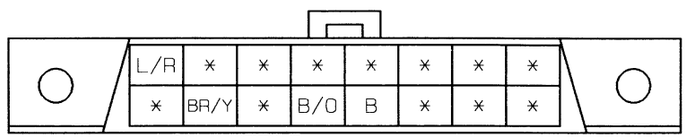

NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.

U-03 DASH (D) -SHORT CORD



U

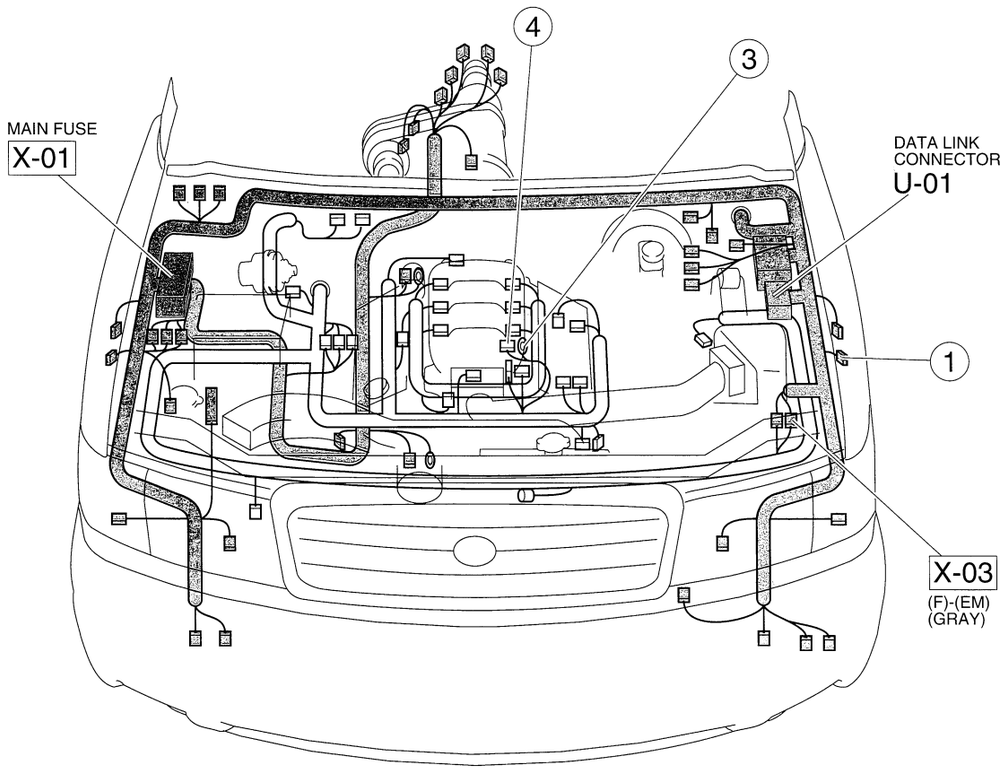

MAIN FUSE

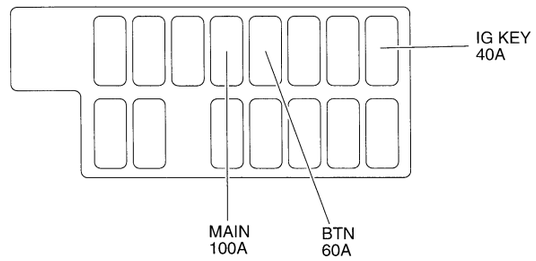

JOINT BOX

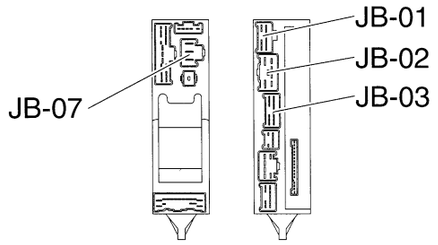

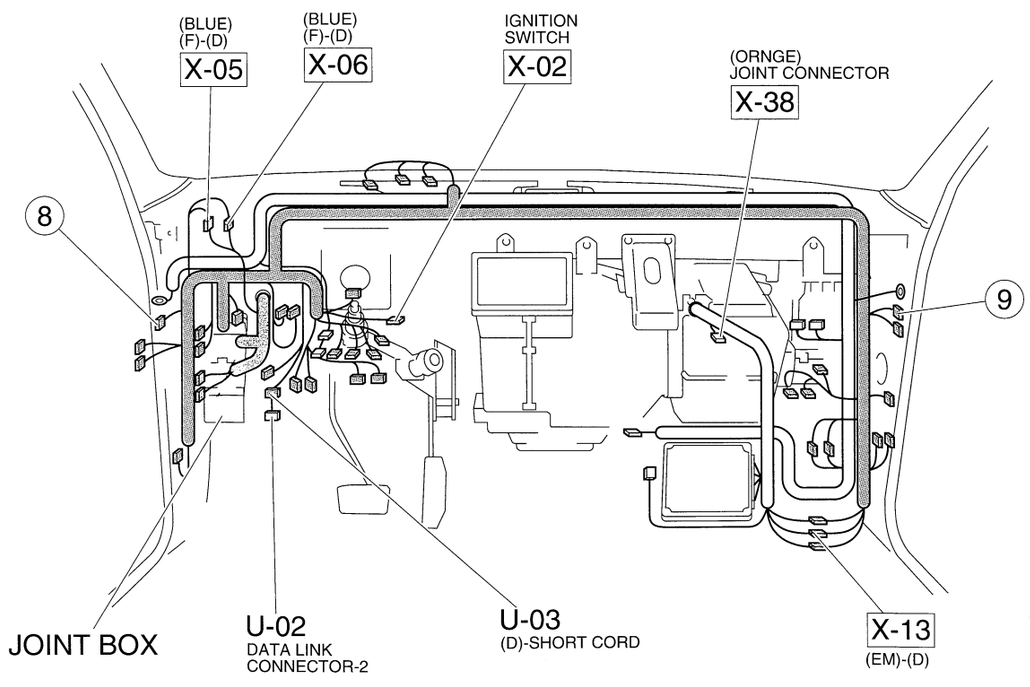

X-1 ■ COMMON CONNECTOR LIST (1/3)

() 4WD
★. . . . CANADA

X-01 MAIN FUSE

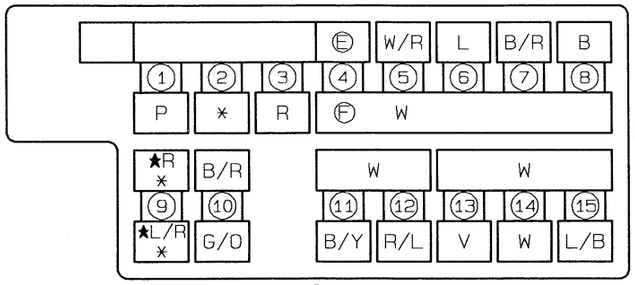

①	EGI	30A	⑨	DRL	15A
②	*		⑩	ST.SIG	10A
③	HEAD	30A	⑪	R.A/C	20A
④	MAIN	100A	⑫	ALL	30A
⑤	BTN	60A	⑬	AD FAN	20A
⑥	HEATER	40A	⑭	A/C	15A
⑦	ABS	60A	⑮	ABS	20A
⑧	IG KEY	40A			

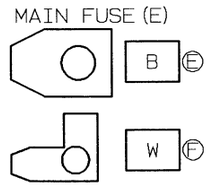

X-02 IGNITION AND KEY REMINDER SWITCH (D)

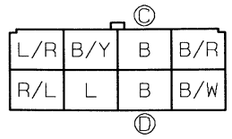

X-03 FRONT (F) -EMISSION (EM)

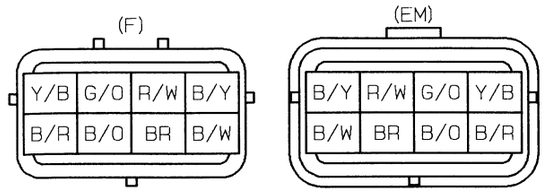

X-04 FRONT (F) -EMISSION (EM)

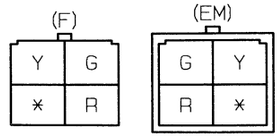

X-05 FRONT (F) -DASH (D)

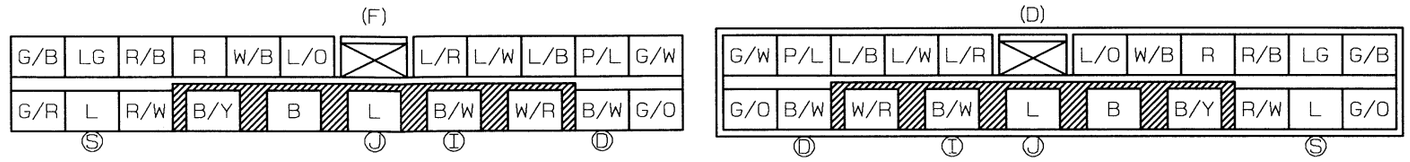

X-06 FRONT (F) -DASH (D)

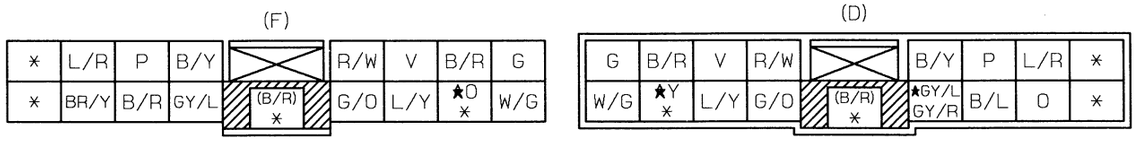

X-07 FRONT (F) -REAR (R)

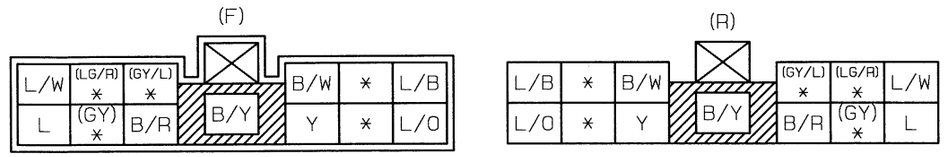

X-08 FRONT (F) -REAR (R)

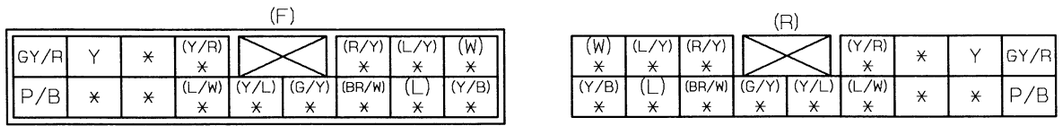

X-09 FRONT (F) -ENGINE (E)

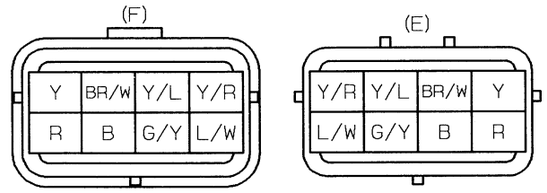

X-11 FRONT (F) -ENGINE (E)

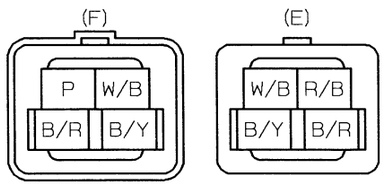

X-12 EMISSION (EM) -DASH (D)

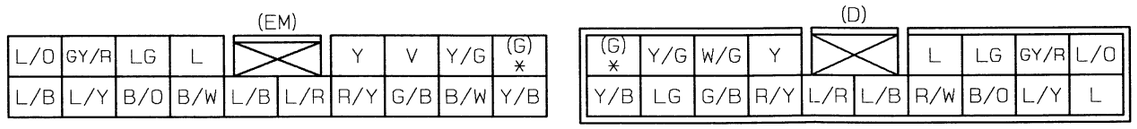

X-13 EMISSION (EM) -DASH (D)

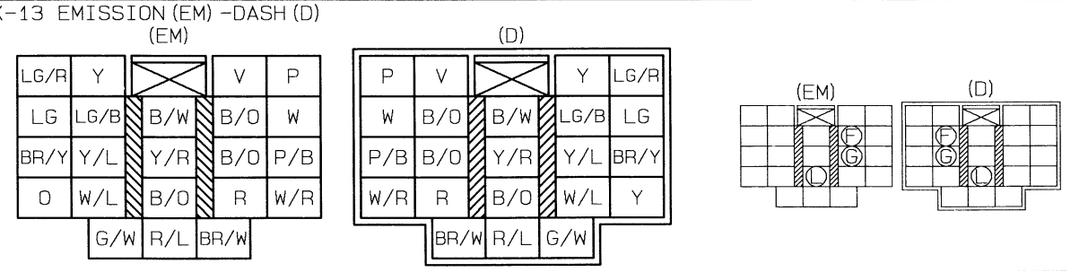

X-14 EMISSION (EM) -DASH (D)

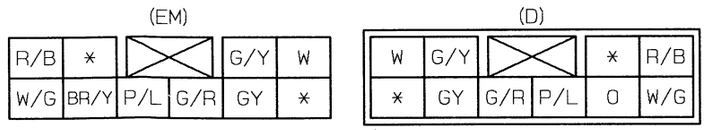

X-2 ■ COMMON CONNECTOR LIST (2/3)

X-15 EMISSION (EM) -ENGINE (E)

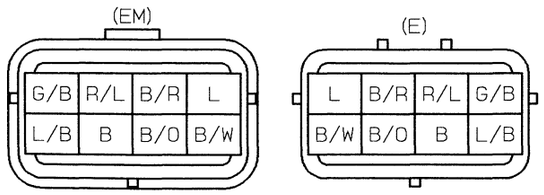

X-16 EMISSION (EM) -ENGINE (E)

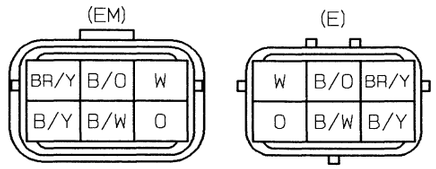

X-17 EMISSION (EM) -ENGINE (E)

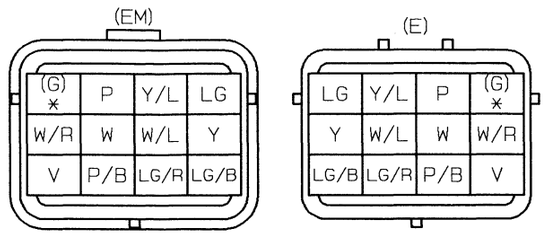

X-18 INSTRUMENT PANEL (I) -DASH (D)

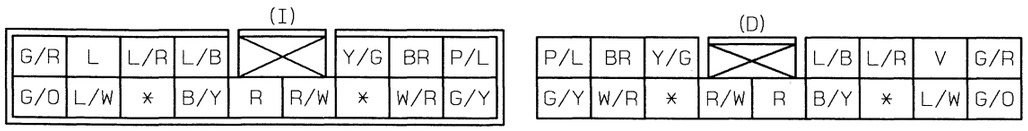

X-19 INSTRUMENT PANEL (I) -REAR (R)

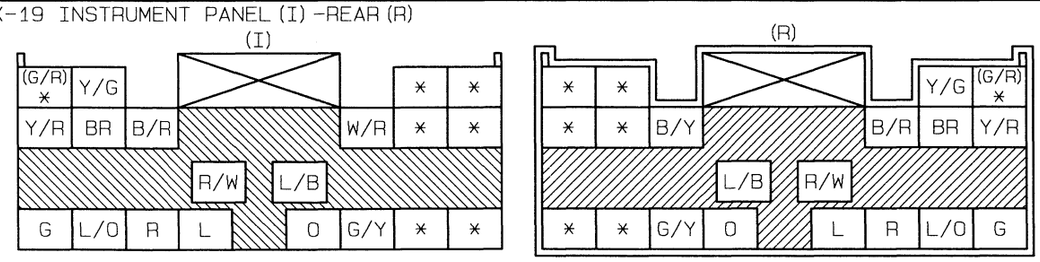

X-20 DASH (D) -REAR (R)

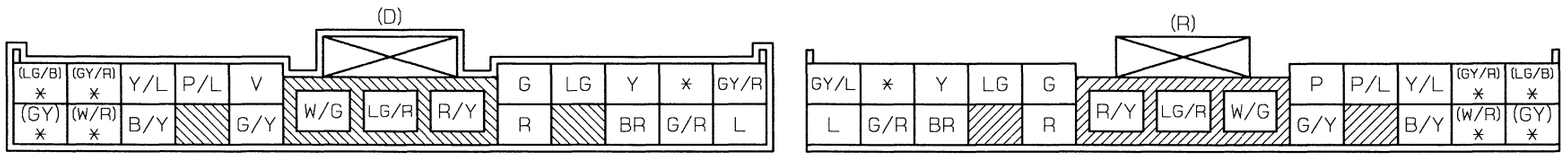

X-21 DASH (D) -REAR (R)

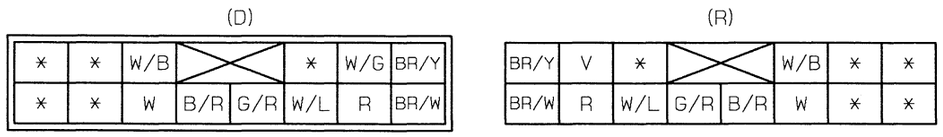

X-22 REAR (R) -REAR NO.2 (R2)

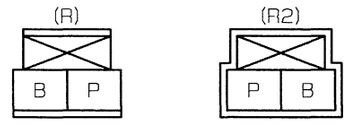

X-23 REAR (R) -REAR NO.2 (R2)

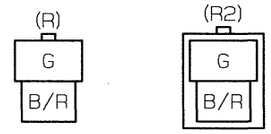

X-24 REAR (R) -REAR NO.2 (R2)

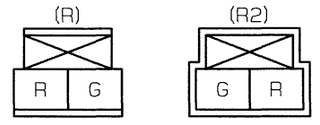

X-25 REAR (R) -REAR NO.2 (R2)

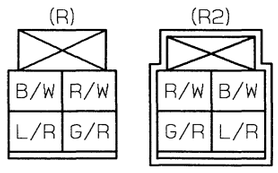

X-26 REAR (R) -REAR NO.2 (R2)

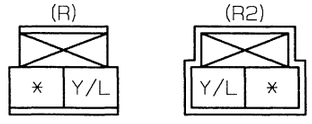

X-27 REAR (R) -REAR NO.4 (R4)

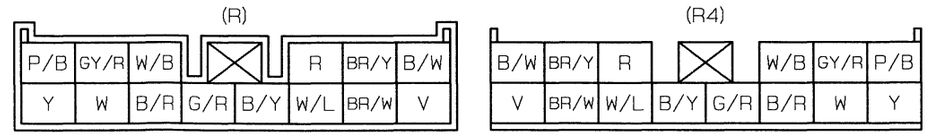

X-28 REAR (R) -REAR NO.4 (R4)

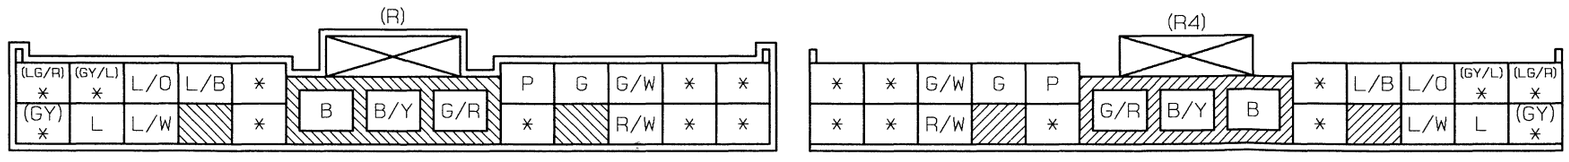

() 4WD

X-3 ■ COMMON CONNECTOR LIST (3/3)

X-29 REAR NO.4 (R4) -REAR NO.5 (R5)

(R4)

W/B	B/Y	W		G	LG	W/R	
G/R	B/R	GY/R	Y	P/B	W/L	G/B	BR

(R5)

W/R	LG	G		W	B/Y	W/B	
BR	G/B	W/L	P/B	Y	GY/R	B/R	G/R

X-30 REAR NO.4 (R4) -REAR NO.5 (R5)

(R4)

(LG/R) *	(GY/L) *	*		R	BR/Y	B/W
(GY) *	*	B	P	*	BR/W	V

(R5)

B/W	BR/Y	R		*	(GY/L) *	(LG/R) *
V	BR/W	*	P	B	*	(GY) *

X-31 REAR (R) -INTERIOR (IN)

(R)

R	G
L	L/O

(IN)

G	R
L/O	L

X-32 DASH (D) -DOOR NO.1 (DR1)

(D)

G/R	BR	BR/Y		G/B	B	R
G/Y	R/Y	L/B	G/O	G/R	L/Y	G/W	G

(DR1)

R	B	G/B		BR/Y	BR	G/R	
G	G/W	L/Y	G/R	G/O	L/B	R/Y	G/Y

X-33 DASH (D) -DOOR NO.1 (DR1)

(D)

W/G	LG/R	L/R	R/L	B	R/W

(DR1)

R/W	B	R/L	L/R	LG/R	W/G

X-34 DASH (D) -DOOR NO.2 (DR2)

(D)

V	G	*		L/Y	G/R	R/L		
L/W	R	*	*	BR	BR/Y	*	R/W	

(DR2)

R	G/R	L/Y		*	G	L		
R/W	*	BR/Y	BR	*	*	R/B	L/W	

X-35 REAR (R) -DOOR NO.3 (DR3)

(R)

*		G	Y/G	
LG/R	W/G	L/R	R	Y/R

(DR3)

BR	G		*	
B/R	R	L/R	R/Y	G/Y

X-36 REAR (R) -DOOR NO.4 (DR4)

(R)

*		G	BR	
G/Y	R/Y	L/R	R	B/R

(DR4)

BR	G		*	
B/R	R	L/R	R/Y	G/Y

X-37 EMISSION (EM) -INJECTION (INJ)

(EM)

B/Y	P/B	Y/R	G
W/R	O	L	Y/B

(INJ)

G	Y/R	P/B	B/Y
Y/B	L	O	W/R

X-38 JOINT CONNECTOR (EM)

B/O	B/O	B/O	B/W	B/W	B/W	B/W	
B/O	B/O	B/O	B/W	B/W	B/W	B/W	

X-39 REAR (R) -REAR NO.3 (R3)

(R)

Y	B
BR	LG

(R3)

B	R
B/W	L

X-40 INSTRUMENT PANEL (I) -DASH (D)

(I)

L			*
L/O	R/B	*	*

(D)

*			L
*	*	R/B	L/O

■ INTERCONNECTING DIAGRAM OF JOINT BOX

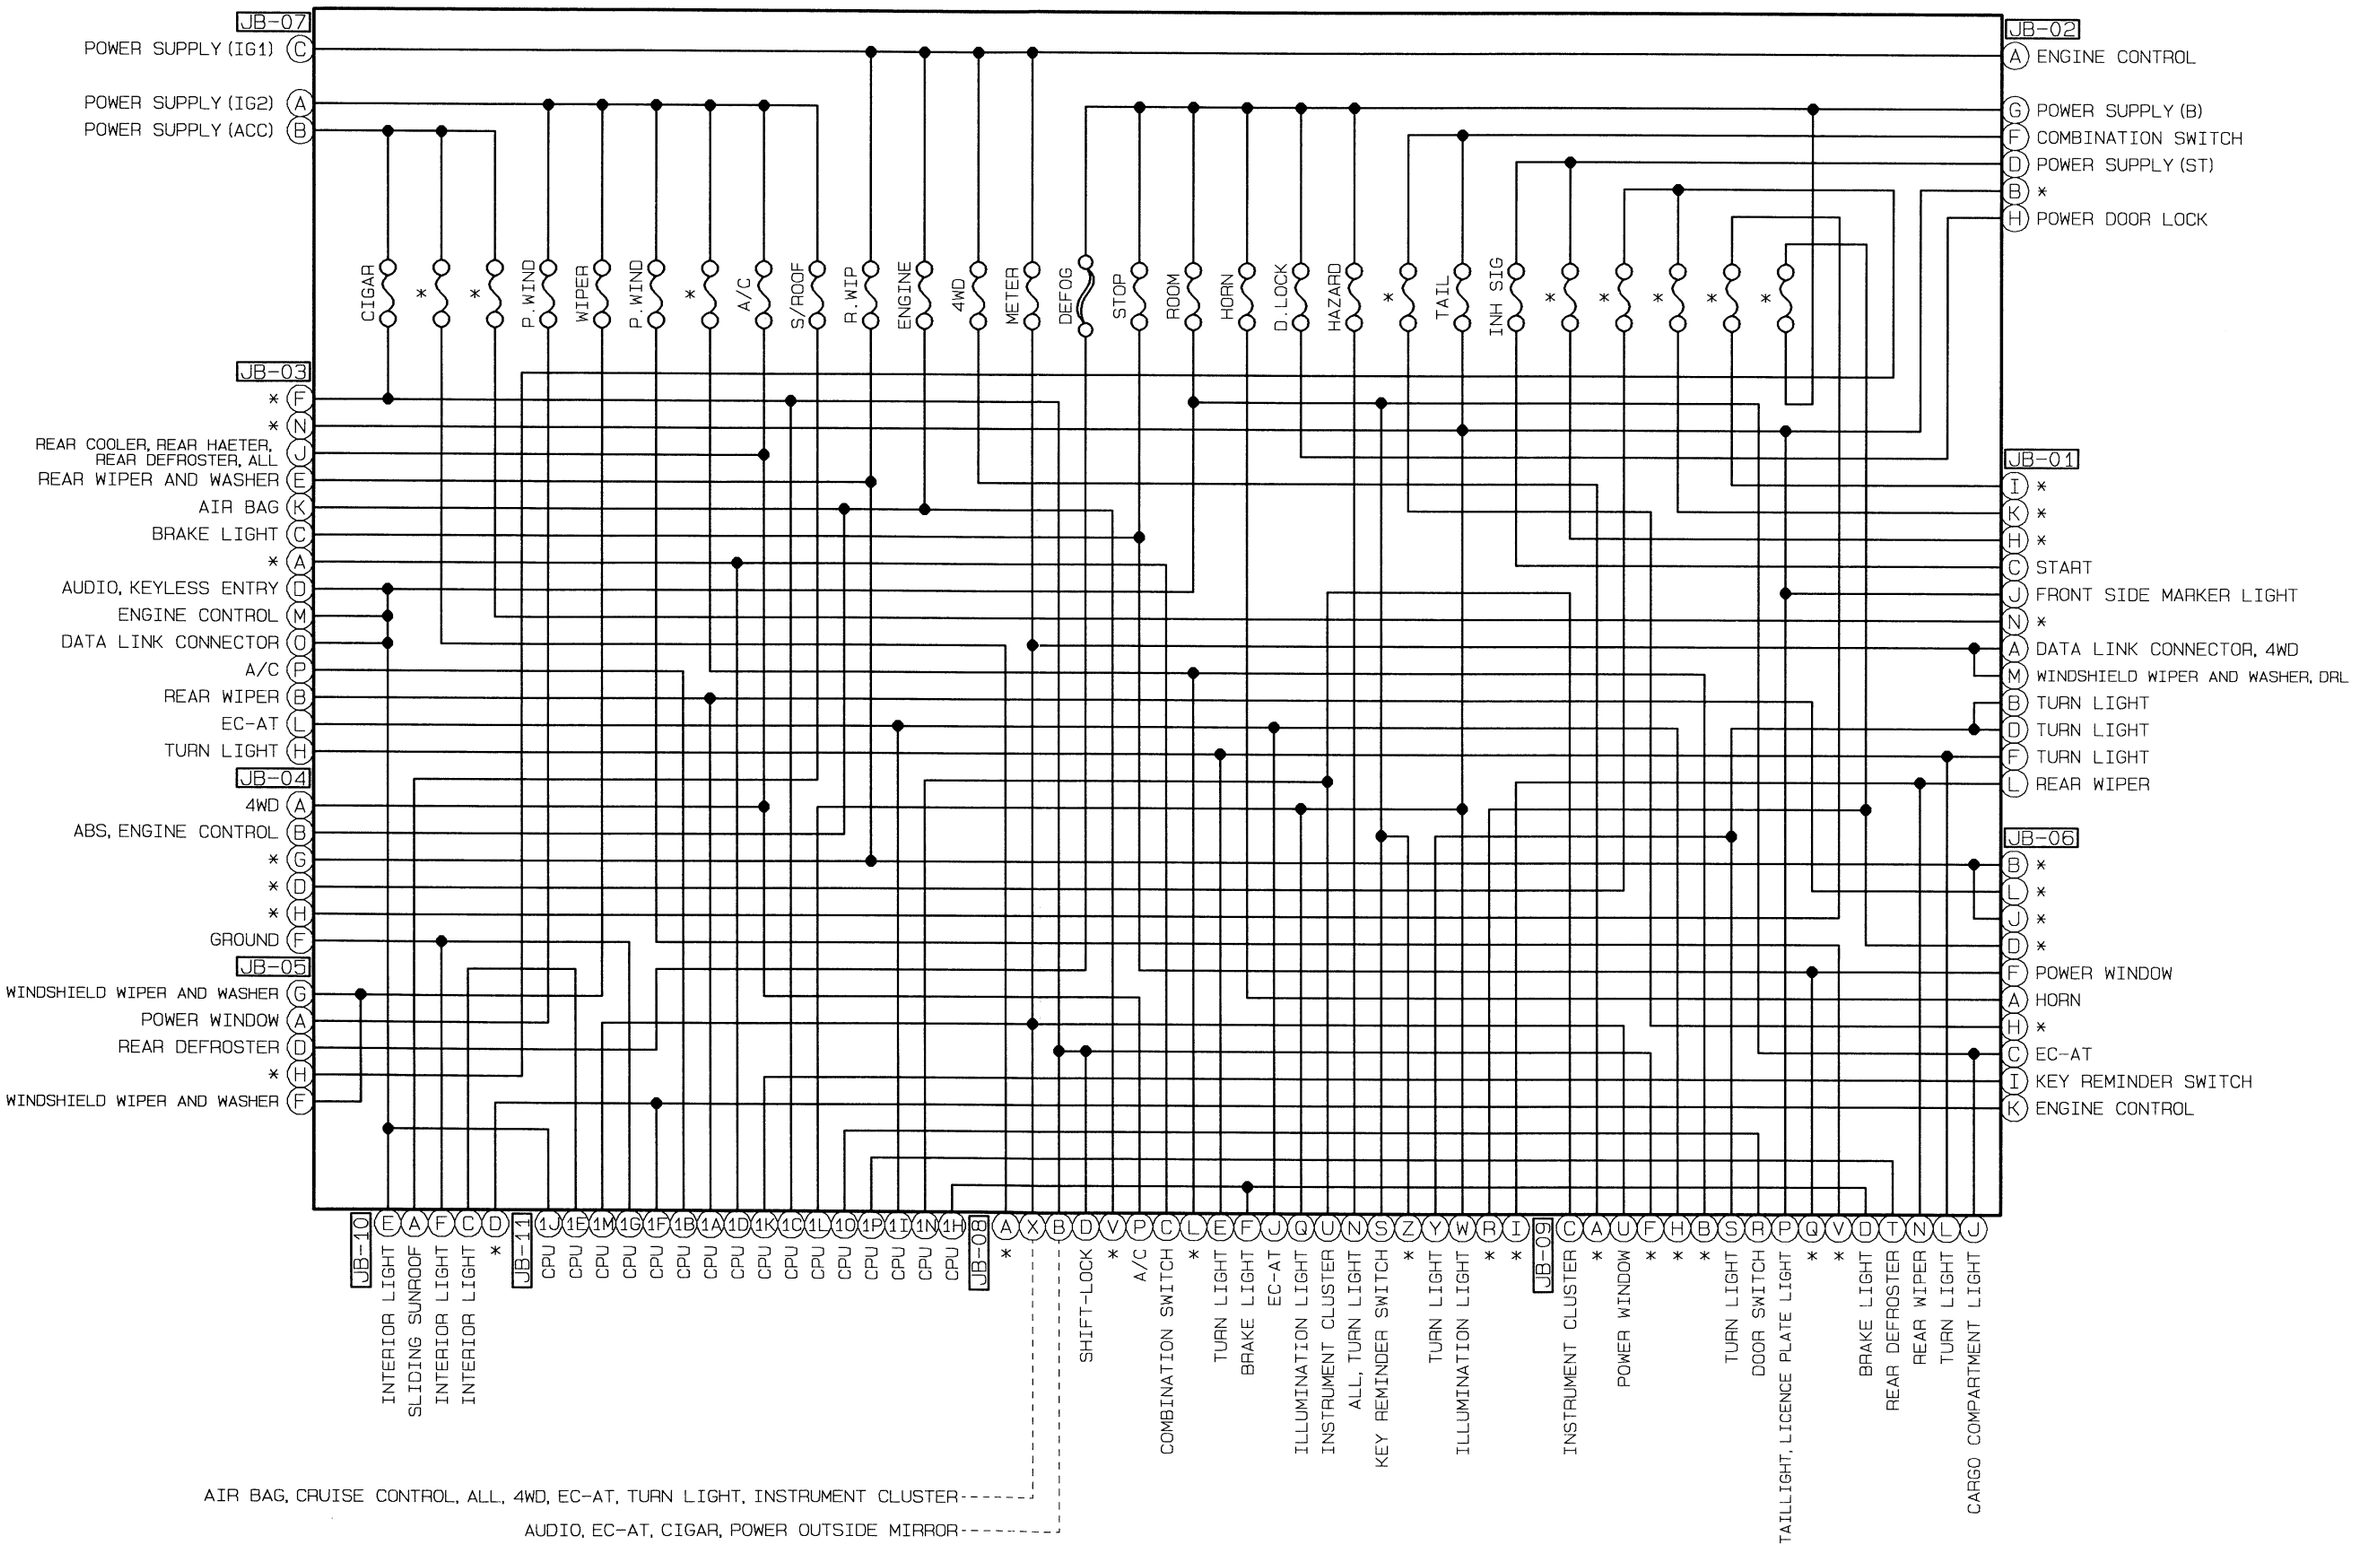

■ JOINT BOX

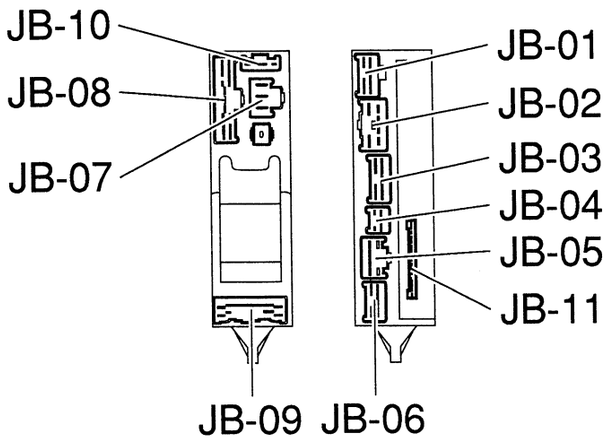

1	HAZARD	15A
2	ROOM	15A
3	S/ROOF	20A
4	METER	10A
5	P.WIND	30A
6	HORN	10A
7	*	
8	4WD	20A
9	*	
10	A/C	15A
11	*	
12	*	
13	R.WIP	15A
14	WIPER	20A
15	P.WIND	30A
16	TAIL	15A
17	*	
18	CIGAR	15A
19	ENGINE	15A
20	*	
21	STOP	20A
22	INH SIG	10A
23	*	
24	*	
25	D.LOCK	30A
26	*	
27	*	
28	*	
29	DEFOG	30A

JB-01 DASH HARNESS

M	K	I			C	A
LG	*	*			G/Y	B/Y
*	B/W	R/W	*	G/B	G/W	G/O
N	L	J	H	F	D	B

JB-02 DASH HARNESS

G		A
W/R		B/W
W/B	W/G	B/Y	*
H	F	D	B

JB-03 DASH HARNESS

O	M	K		E	C	A
L/R	L/R	LG		G/R	G/W	*
L/O	*	LG/R	L G/B	*	L/R	B/W
P	N	L	J H	F	D	B

JB-04 DASH HARNESS

G		A
*		(B/R) *
*	B	*	B/W
H	F	D	B

JB-05 DASH HARNESS

G		A
L		L/R
*	L	B/W	*
H	F	D	B

JB-06 DASH HARNESS

K	I		C	A
W	R/L		L/R	G/W
*	*	*	R/L	*	*
L	J	H	F	D	B

JB-07 DASH HARNESS

B/W	L	B/R
C	B	A

JB-08 DASH HARNESS

Y	W	U	S	Q		I	G	E	C	A
G/W	R/W	W/B	L/R	R/W		*	*	G/B	R/Y	*
*	B/Y	*		*	L B/R *	LG/R		W/G	O	L/B
Z	X	V		R	P N L	J		F	D	B

JB-09 REAR HARNESS

U	S	Q						C	A
L/R	G/W	*						W/B	*
*	P/L	P	R/W	B/W	G/B	L/R	*	*	G	*
V	T	R	P	N	L	J	H	F	D	B

JB-10 INTERIOR LIGHT HARNESS

B	L/R	*	P	*	LG/R
F	E	D	C	B	A

JB-11 CPU

1P	1O	1N	1M	1L	1K	1J	1I	1H	1G	1F	1E	1D	1C	1B	1A

4
4WD RELAYS Z-62
4WD/2WD SHIFT SWITCH Z-62

A
A/C RELAY Z-52
A/C SWITCH Z-52
ABS CONTROL MODULE Z-84
ABS WHEEL SPEED SENSORS Z-84
AFW SWITCH Z-62
ALL CONTROL MODULE Z-88
ASH TRAY ILLUMINATION Z-66
AUDIO UNIT Z-72
AUDIO UNIT ILLUMINATION Z-66

B
BACK DOOR SWITCH Z-68
BACK-UP LIGHTS Z-50
BLOWER RELAY Z-52
BRAKE FLUID LEVEL SENSOR Z-36
BRAKE LIGHTS Z-48
BRAKE SWITCH Z-48,86
BUCKLE SWITCH Z-34
BUZZER Z-32

C
CARGO COMPARTMENT LIGHT Z-68
CDCV Z-28
CENTER DIFFERENTIAL LOCK SWITCH ILLUMINATION Z-66
CENTER DIFFERENTIAL LOCK SWITCH Z-62
CHANGE MOTOR Z-62
CHECK CONNECTOR Z-88
CIGARETTE LIGHTER Z-64
CLOCK SPRING Z-48,92
COMBINATION SWITCH Z-42,44
COMP MOTOR Z-88
COMP RELAY Z-88
CONDENSER FAN Z-52
CONDENSER FAN RELAY Z-52
CPU Z-70,76,78
CRANKSHAFT POSITION SENSOR Z-26
CRUISE ACTUATOR Z-86
CRUISE CONTROL MAIN SWITCH Z-86
CRUISE CONTROL MAIN SWITCH ILLUMINATION Z-66
CRUISE CONTROL MODULE Z-86
CRUISE CONTROL SWITCH Z-86

D
DATA LINK CONNECTORS Z-94
DISTRIBUTOR Z-22
DOOR LOCK ACTUATORS Z-76
DOOR LOCK TIMER UNIT Z-76
DOOR SPEAKERS Z-72
DOOR SWITCHES Z-68
DRIVER-SIDE AIR BAG MODULE Z-92
DRL RELAY Z-42
DRL RESISTOR Z-42
DROPPING RESISTOR Z-58

E
EC-AT SOLENOID VALVE
OVER RUNNING CLUTCH Z-58
PRESSURE CONTROL Z-58
SHIFT SOLENOID A Z-58
SHIFT SOLENOID B Z-58
TORQUE CONVERTER CLUTCH Z-58
TRANSMISSION FLUID TEMPERATURE SWITCH Z-76
ECM Z-22,24,26,28
ENGINE COOLANT TEMPERATURE SENSOR ..Z-24
EXHAUST SOLENOID Z-88

F
FAN SWITCH Z-52
FILAMENT Z-64
FLASHER UNIT Z-46
FREE(AFW)SOLENOID VALVE Z-62
FRONT BLOWER MOTOR Z-52
FRONT RESISTOR Z-52
FRONT SIDE MARKER LIGHTS Z-44
FRONT TURN LIGHTS Z-46
FUEL GAUGE Z-32
FUEL GAUGE SENDER UNIT Z-32
FUEL INJECTORS Z-26
FUEL PUMP Z-30
FUEL PUMP RELAY Z-30
FUEL TANK PRESSURE SENSOR Z-24

G
G SENSOR Z-84
GENERATOR Z-20

H
HAZARD WARNING SWITCH Z-46
HAZARD WARNING SWITCH ILLUMINATION Z-66
HEADLIGHTS Z-42
HEATED OXYGEN SENSORS Z-28
HEATER CONTROL UNIT Z-52
HEATER CONTROL UNIT ILLUMINATION Z-66
HEIGHT SENSOR Z-88
HIGH-MOUNT BRAKE LIGHT Z-48
HORN RELAY Z-48
HORN SWITCH Z-48
HORNS Z-48

I
IAC VALVE Z-28
INSTRUMENT CLUSTER Z-32,34,36
INSTRUMENT CLUSTER ILLUMINATION Z-66
INTAKE AIR TEMPERATURE SENSOR Z-24
INTERIOR LIGHTS Z-68
INTERMITTENT WIPER RELAY Z-38

K
KEY REMINDER SWITCH Z-70
KEYLESS ENTRY UNIT Z-76

L
LICENCE PLATE LIGHTS Z-44
LIFTGATE LOCK ACTUATOR Z-76
LIMIT SWITCH Z-62
LOCK(AFW)SOLENOID VALVE Z-62
LOCK-LINK SWITCHES Z-78

M
MAGNETIC CLUTCH Z-52
MAGNETIC SOLENOID VALVE Z-54
MAIN RELAY Z-22
MASS AIR FLOW SENSOR Z-28
MULTI-MODE 4WD MODULE Z-62

O
O/D OFF SWITCH Z-60
OIL PRESSURE SWITCH Z-34
OUTPUT SPEED SENSOR Z-60

P
PANEL LIGHT CONTROL SWITCH Z-66
PARKING BRAKE SWITCH Z-36
PASSENGER-SIDE AIR BAG MODULE Z-48,92
POSITION SWITCH Z-62
POWER OUTSIDE MIRROR MOTORS Z-80
POWER OUTSIDE MIRROR SWITCH Z-80
POWER STEERING PRESSURE SWITCH Z-26
POWER WINDOW MAIN SWITCH Z-74
POWER WINDOW REGULATORS Z-74
POWER WINDOW SUBSWITCH Z-74
PRC SOLENOID VALVE Z-28
PURGE SOLENOID VALVE Z-28

R
REAR BLOWER MOTOR Z-54
REAR COOLER FAN SWITCH Z-54
REAR COOLER MAIN SWITCH Z-54
REAR COOLER MAIN SWITCH ILLUMINATION Z-66
REAR COOLING UNIT Z-54
REAR HEATER BLOWER MOTOR Z-56
REAR HEATER BLOWER RELAY Z-56
REAR HEATER MAIN SWITCH Z-56
REAR HEATER MAIN SWITCH ILLUMINATION .. Z-66
REAR HEATER FAN SWITCH Z-56
REAR HEATER RESISTOR Z-56
REAR HEATER UNIT Z-56
REAR RESISTOR Z-54
REAR TURN LIGHTS Z-46
REAR WASHER MOTOR Z-40
REAR WASHER SWITCH Z-40
REAR WASHER SWITCH ILLUMINATION Z-66
REAR WINDOW DEFROSTER RELAY Z-64
REAR WINDOW DEFROSTER SWITCH Z-64
REAR WINDOW DEFROSTER SWITCH ILLUMINATION Z-66
REAR WIPER MOTOR Z-40
REAR WIPER SWITCH Z-40
REAR WIPER SWITCH ILLUMINATION Z-66
REFRIGERANT PRESSURE SWITCH Z-52

S
SAS UNIT Z-92
SHIFT-LOCK SOLENOID VALVE Z-58
SPOT LIGHTS Z-68
STARTER Z-18
SUNROOF MOTOR ASSEMBLY Z-82
SUNROOF RELAY Z-82
SUNROOF SWITCH Z-82

T
TACHOMETER Z-32
TAILLIGHTS Z-44
THERMOSWITCH Z-52
THROTTLE POSITION SENSOR Z-24
TPCV Z-28
TRANSMISSION CONTROL MODULE Z-58,60
TRANSMISSION FLUID TEMPERATURE SENSOR Z-60
TRANSMISSION RANGE SWITCH Z-18,58
TURN SWITCH Z-46

V
VEHICLE SPEED SENSOR Z-32
VOLTAGE REGULATOR Z-20
VRIS SOLENOID VALVE Z-28

W
WATER TEMPERATURE GAUGE Z-32
WATER TEMPERATURE SENDER UNIT Z-32
WINDSHIELD WASHER MOTOR Z-38
WINDSHIELD WASHER SWITCH Z-38
WINDSHIELD WIPER MOTOR Z-38
WINDSHIELD WIPER SWITCH Z-38

© 1995 Mazda Motor Corporation
Printed in USA
5349-10-95I

Part No. 9999-95-024G-96