FRONT SEAT (Manual Adjuster Type)

BO4CF–01

COMPONENTS

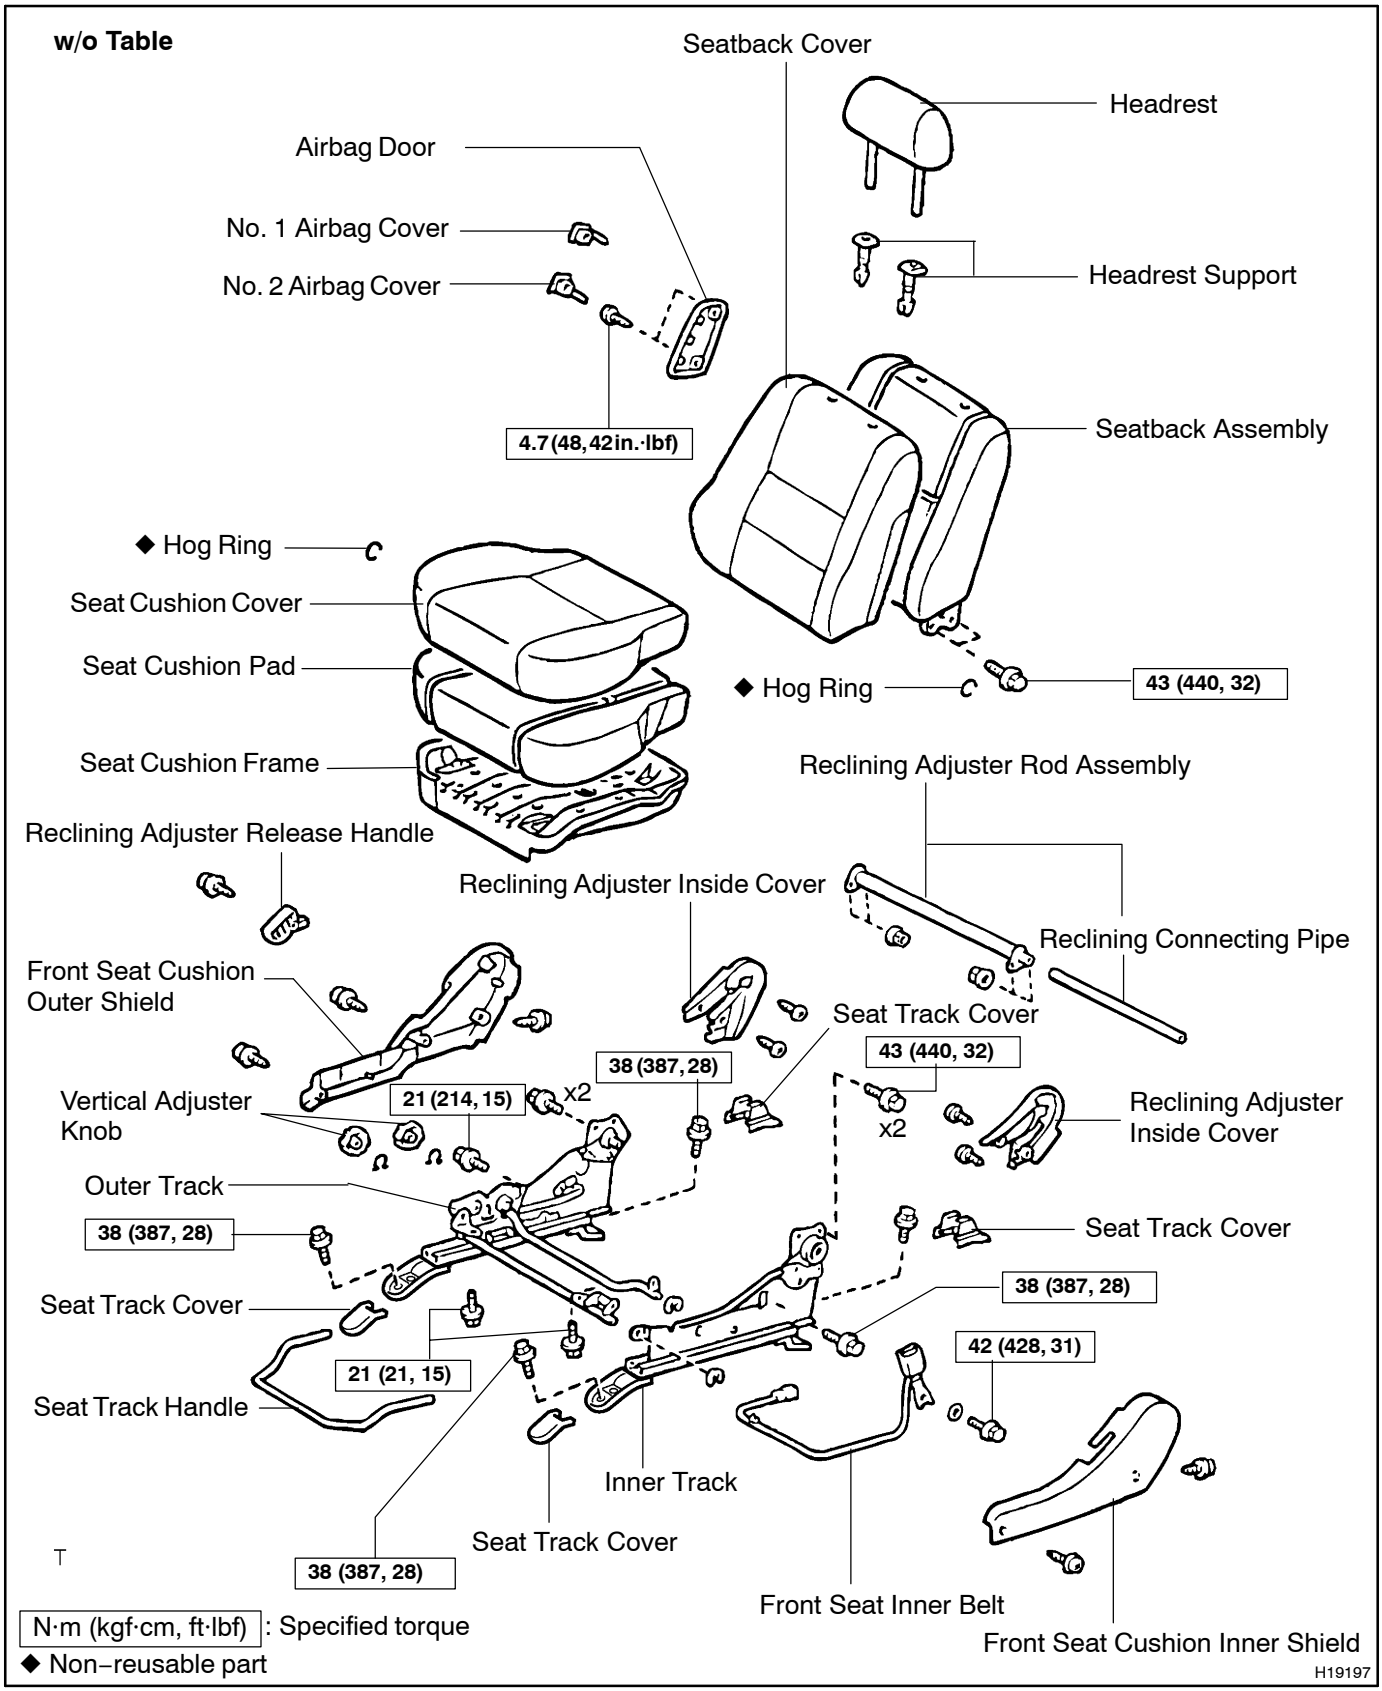

w/ Table

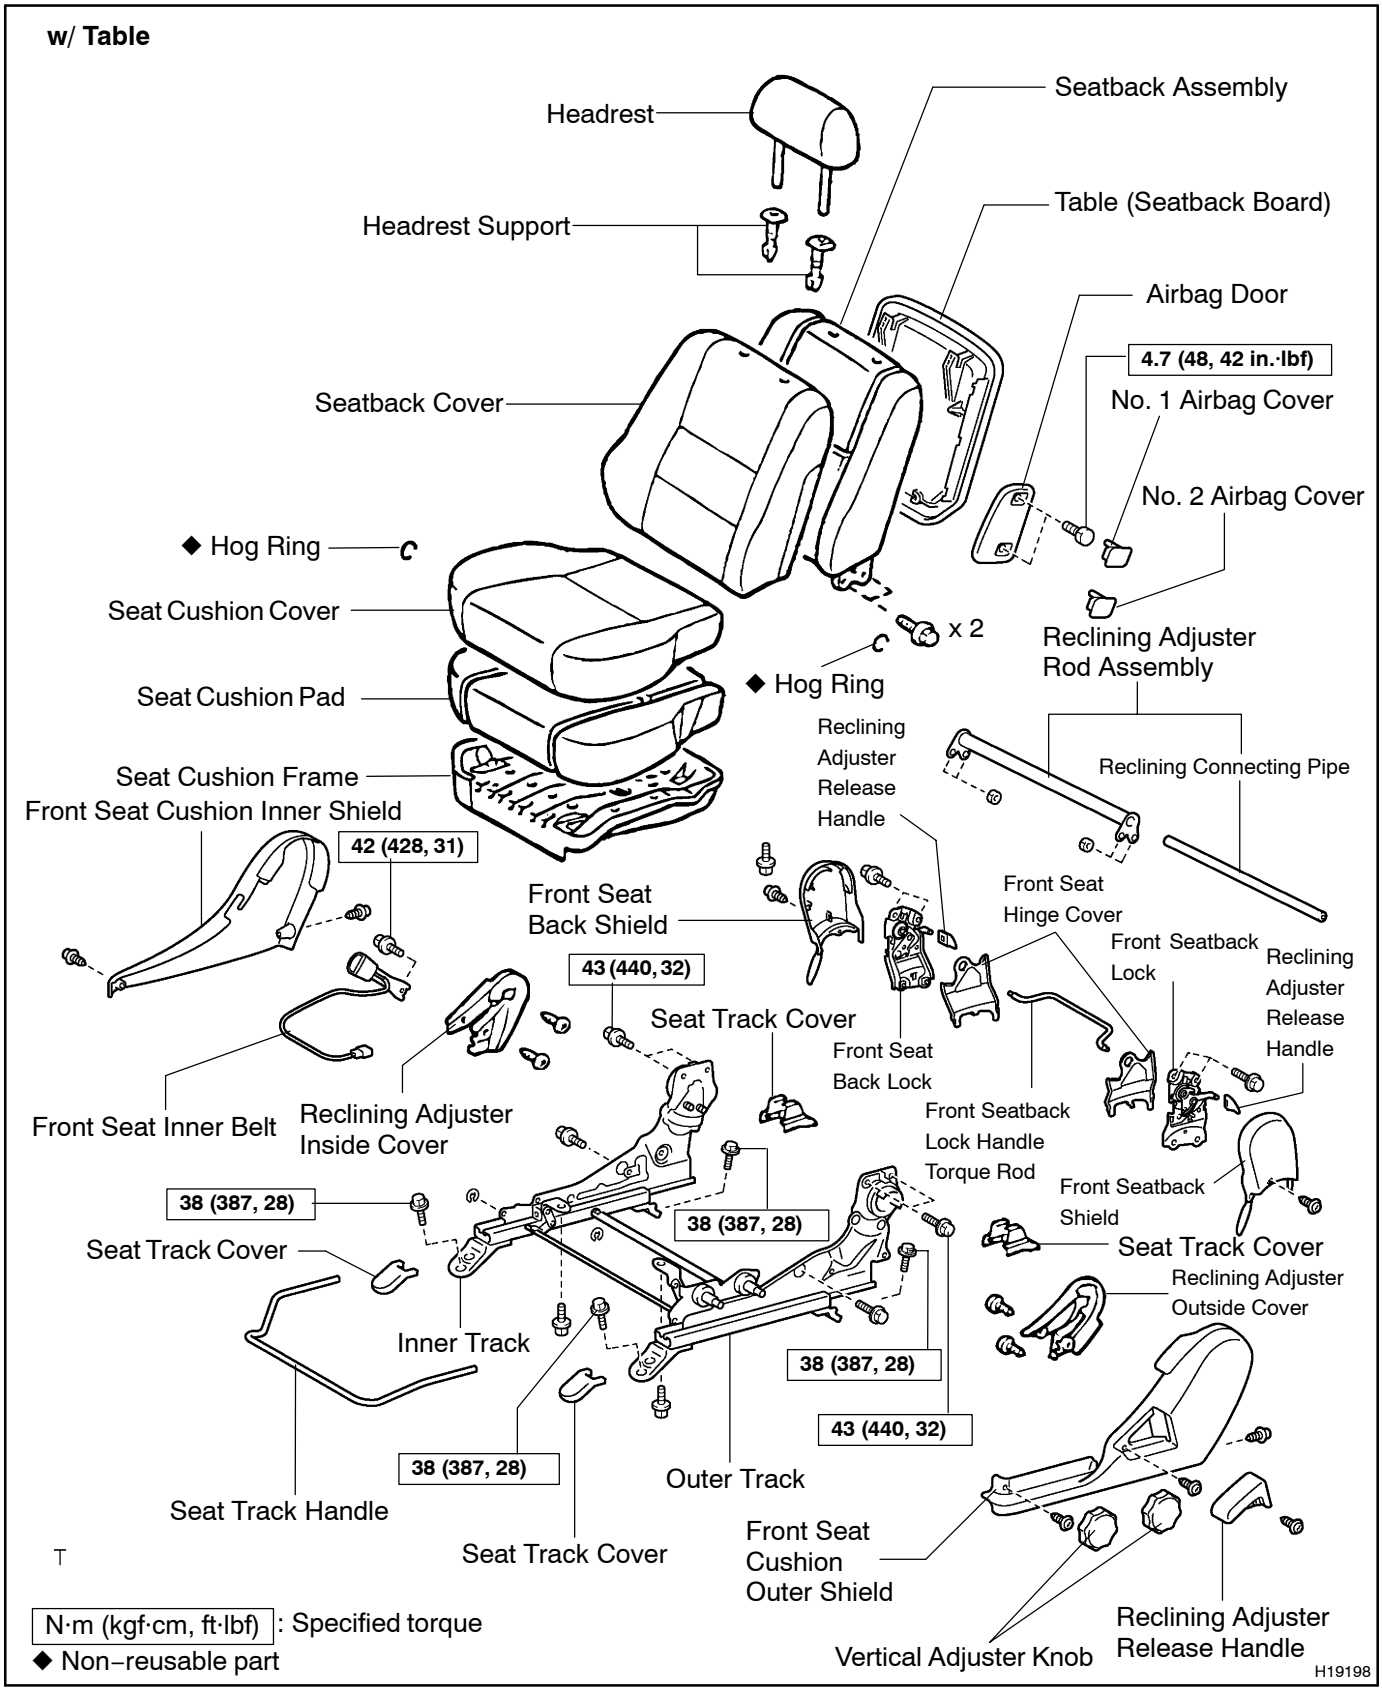
Headrest
Seatback Assembly
Headrest Support
Table (Seatback Board)
Airbag Door
4.7 (48, 42 in.·lbf)
Seatback Cover
No. 1 Airbag Cover
No. 2 Airbag Cover
◆ Hog Ring
Seat Cushion Cover
x 2
Reclining Adjuster Rod Assembly
◆ Hog Ring
Seat Cushion Pad
Reclining Adjuster Release Handle
Reclining Connecting Pipe
Seat Cushion Frame
Front Seat Cushion Inner Shield
42 (428, 31)
Front Seat Back Shield
Front Seat Hinge Cover
Front Seatback Lock
Reclining Adjuster Release Handle
43 (440, 32)
Seat Track Cover
Front Seat Back Lock
Front Seat Inner Belt
Reclining Adjuster Inside Cover
Front Seatback Lock Handle Torque Rod
Front Seatback Shield
38 (387, 28)
38 (387, 28)
Seat Track Cover
Seat Track Cover
Reclining Adjuster Outside Cover
Inner Track
38 (387, 28)
43 (440, 32)
38 (387, 28)
Outer Track
Seat Track Handle
Seat Track Cover
Front Seat Cushion Outer Shield
Reclining Adjuster Release Handle
Vertical Adjuster Knob
T
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
H19198