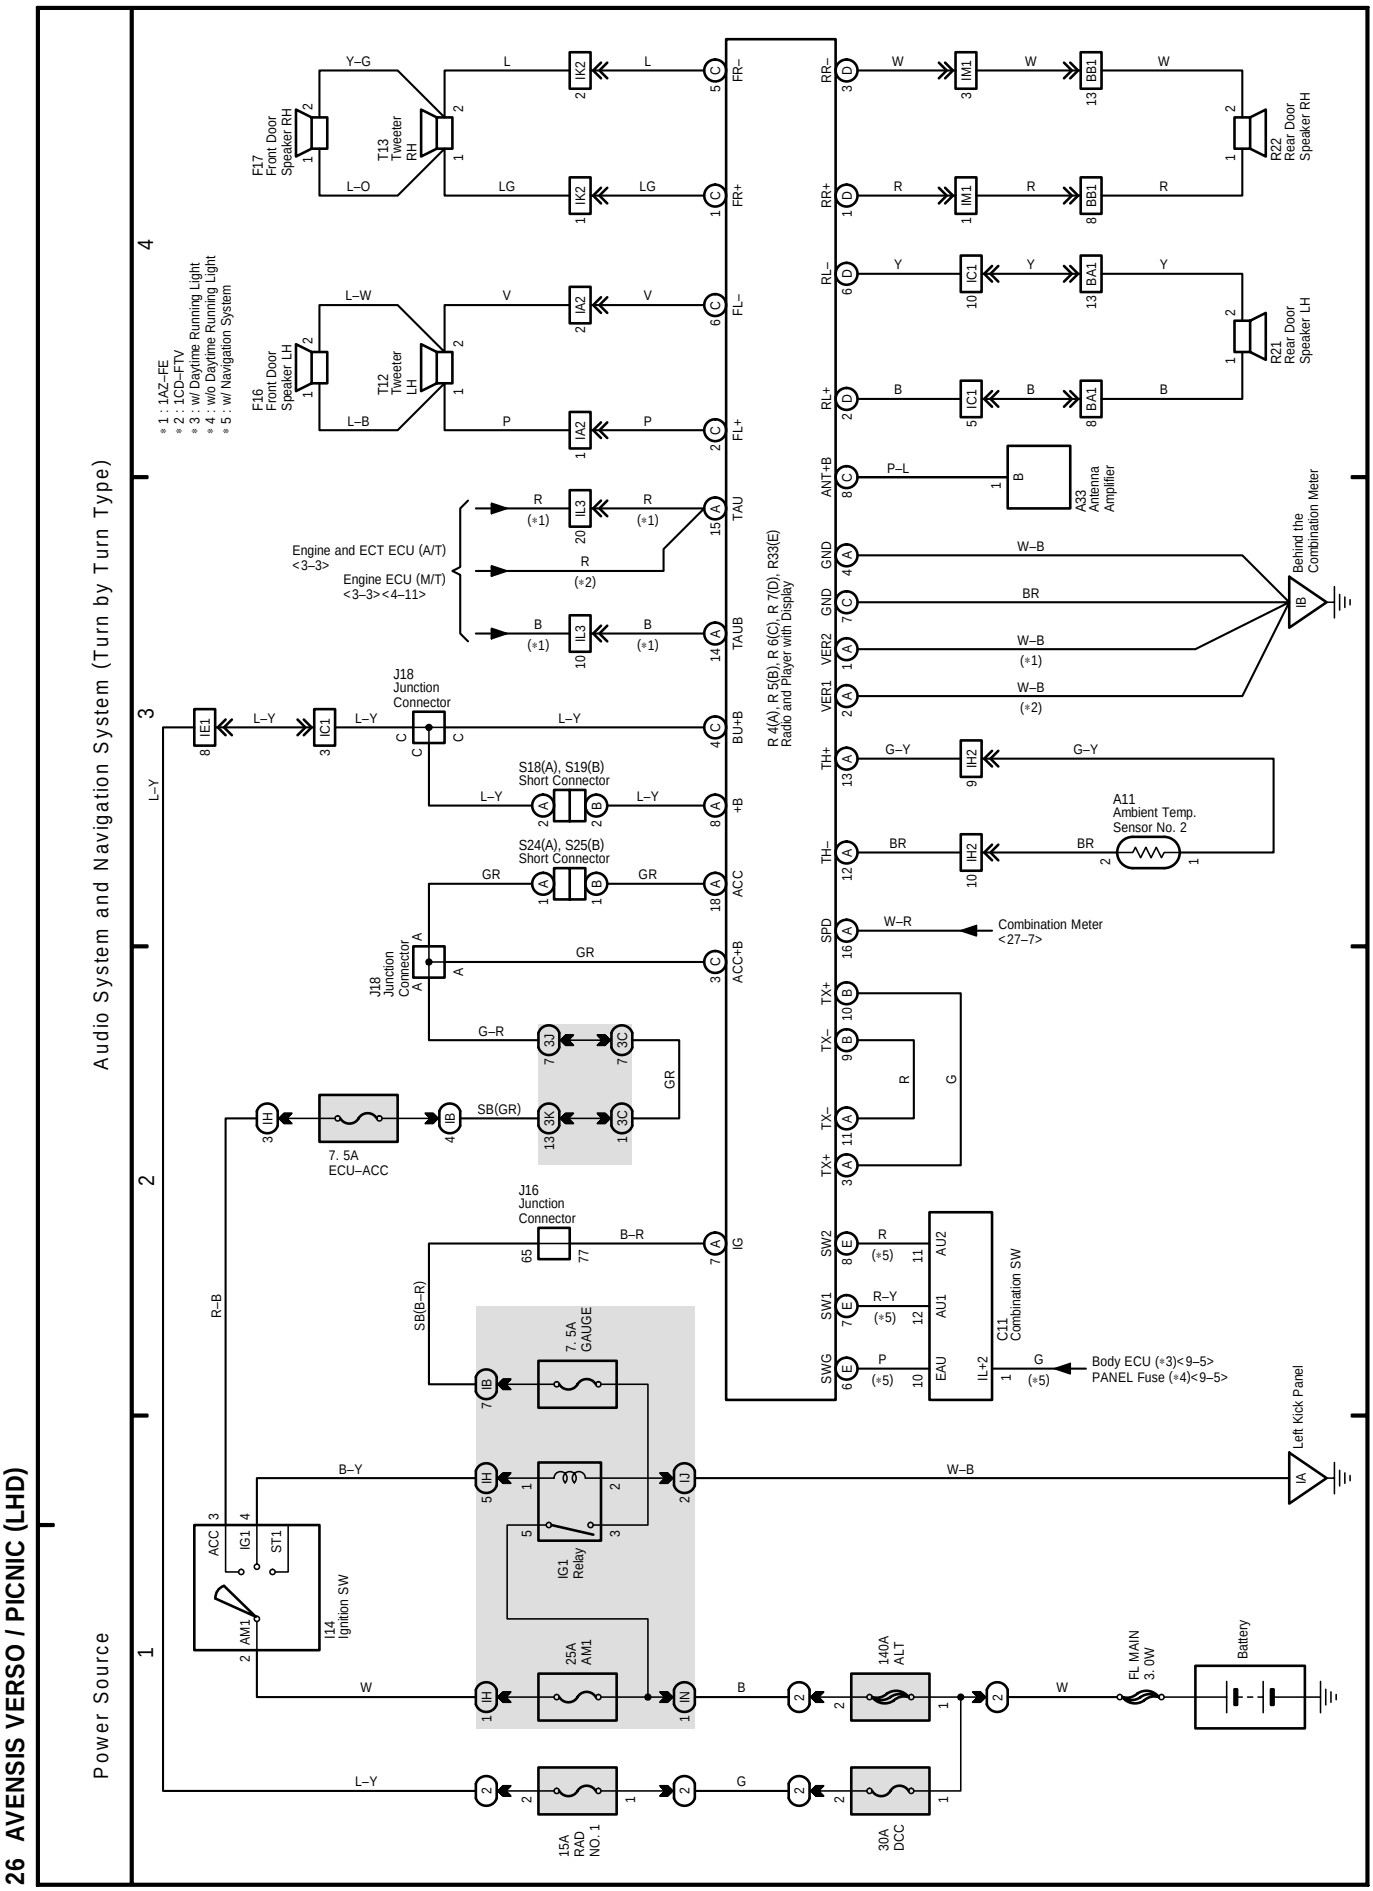
26 AVENSIS VERSO / PICNIC (LHD)
Power Source
Audio System and Navigation System (Turn by Turn Type)
* 1 : 1AZ–FE
* 2 : 1CD–FTV
* 3 : w/ Daytime Running Light
* 4 : w/o Daytime Running Light
* 5 : w/ Navigation System
F17 Front Door Speaker RH
T13 Tweeter RH
F16 Front Door Speaker LH
T12 Tweeter LH
R22 Rear Door Speaker RH
R21 Rear Door Speaker LH
Engine and ECT ECU (A/T) <3–3>
Engine ECU (M/T) <3–3><4–11>
R 4(A), R 5(B), R 6(C), R 7(D), R33(E) Radio and Player with Display
A33 Antenna Amplifier
Behind the Combination Meter
J18 Junction Connector
S18(A), S19(B) Short Connector
S24(A), S25(B) Short Connector
A11 Ambient Temp. Sensor No. 2
Combination Meter <27–7>
7. 5A ECU–ACC
J16 Junction Connector
7. 5A GAUGE
C11 Combination SW
Body ECU (*3)<9–5>
PANEL Fuse (*4)<9–5>
Left Kick Panel
I14 Ignition SW
IG1 Relay
25A AM1
140A ALT
FL MAIN 3. 0W
Battery
15A RAD NO. 1
30A DCC