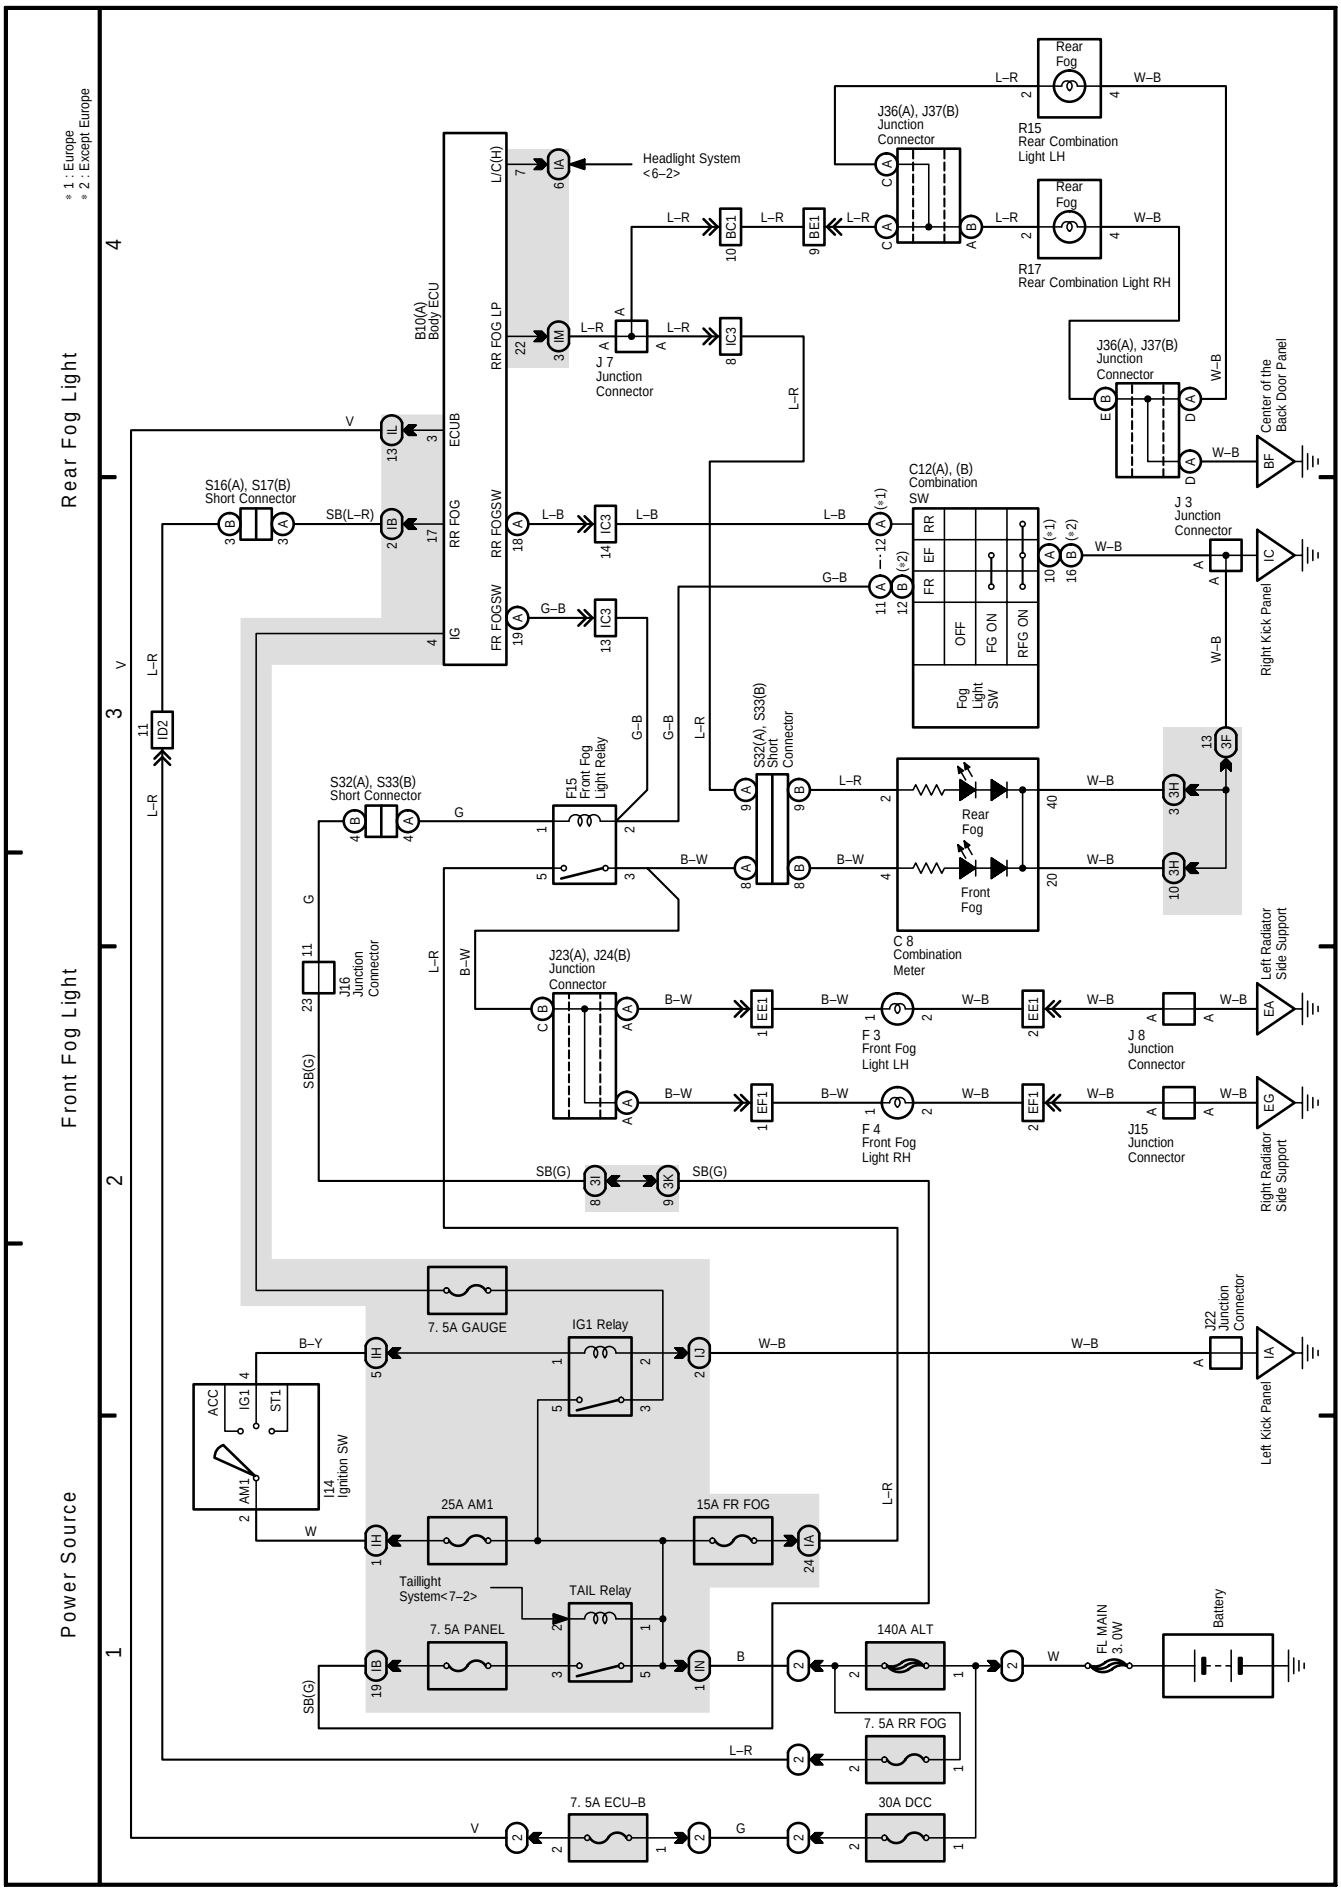
* 1 : Europe
* 2 : Except Europe
Rear Fog Light
Front Fog Light
Power Source
B10(A) Body ECU
ECUB
RR FOG
IG
L/C(H)
RR FOG LP
RR FOGSW
FR FOGSW
Headlight System <6–2>
J36(A), J37(B) Junction Connector
R15 Rear Combination Light LH
R17 Rear Combination Light RH
Rear Fog
J 7 Junction Connector
Center of the Back Door Panel
S16(A), S17(B) Short Connector
C12(A), (B) Combination SW
Fog Light SW
OFF
FG ON
RFG ON
RR
EF
FR
J 3 Junction Connector
Right Kick Panel
S32(A), S33(B) Short Connector
F15 Front Fog Light Relay
Front Fog
C 8 Combination Meter
J16 Junction Connector
J23(A), J24(B) Junction Connector
F 3 Front Fog Light LH
F 4 Front Fog Light RH
J 8 Junction Connector
J15 Junction Connector
Left Radiator Side Support
Right Radiator Side Support
7. 5A GAUGE
IG1 Relay
J22 Junction Connector
Left Kick Panel
ACC
IG1
ST1
AM1
I14 Ignition SW
25A AM1
15A FR FOG
Taillight System<7–2>
TAIL Relay
7. 5A PANEL
140A ALT
FL MAIN 3. 0W
Battery
7. 5A RR FOG
7. 5A ECU–B
30A DCC