MANUAL TRANSAXLE UNIT

COMPONENTS
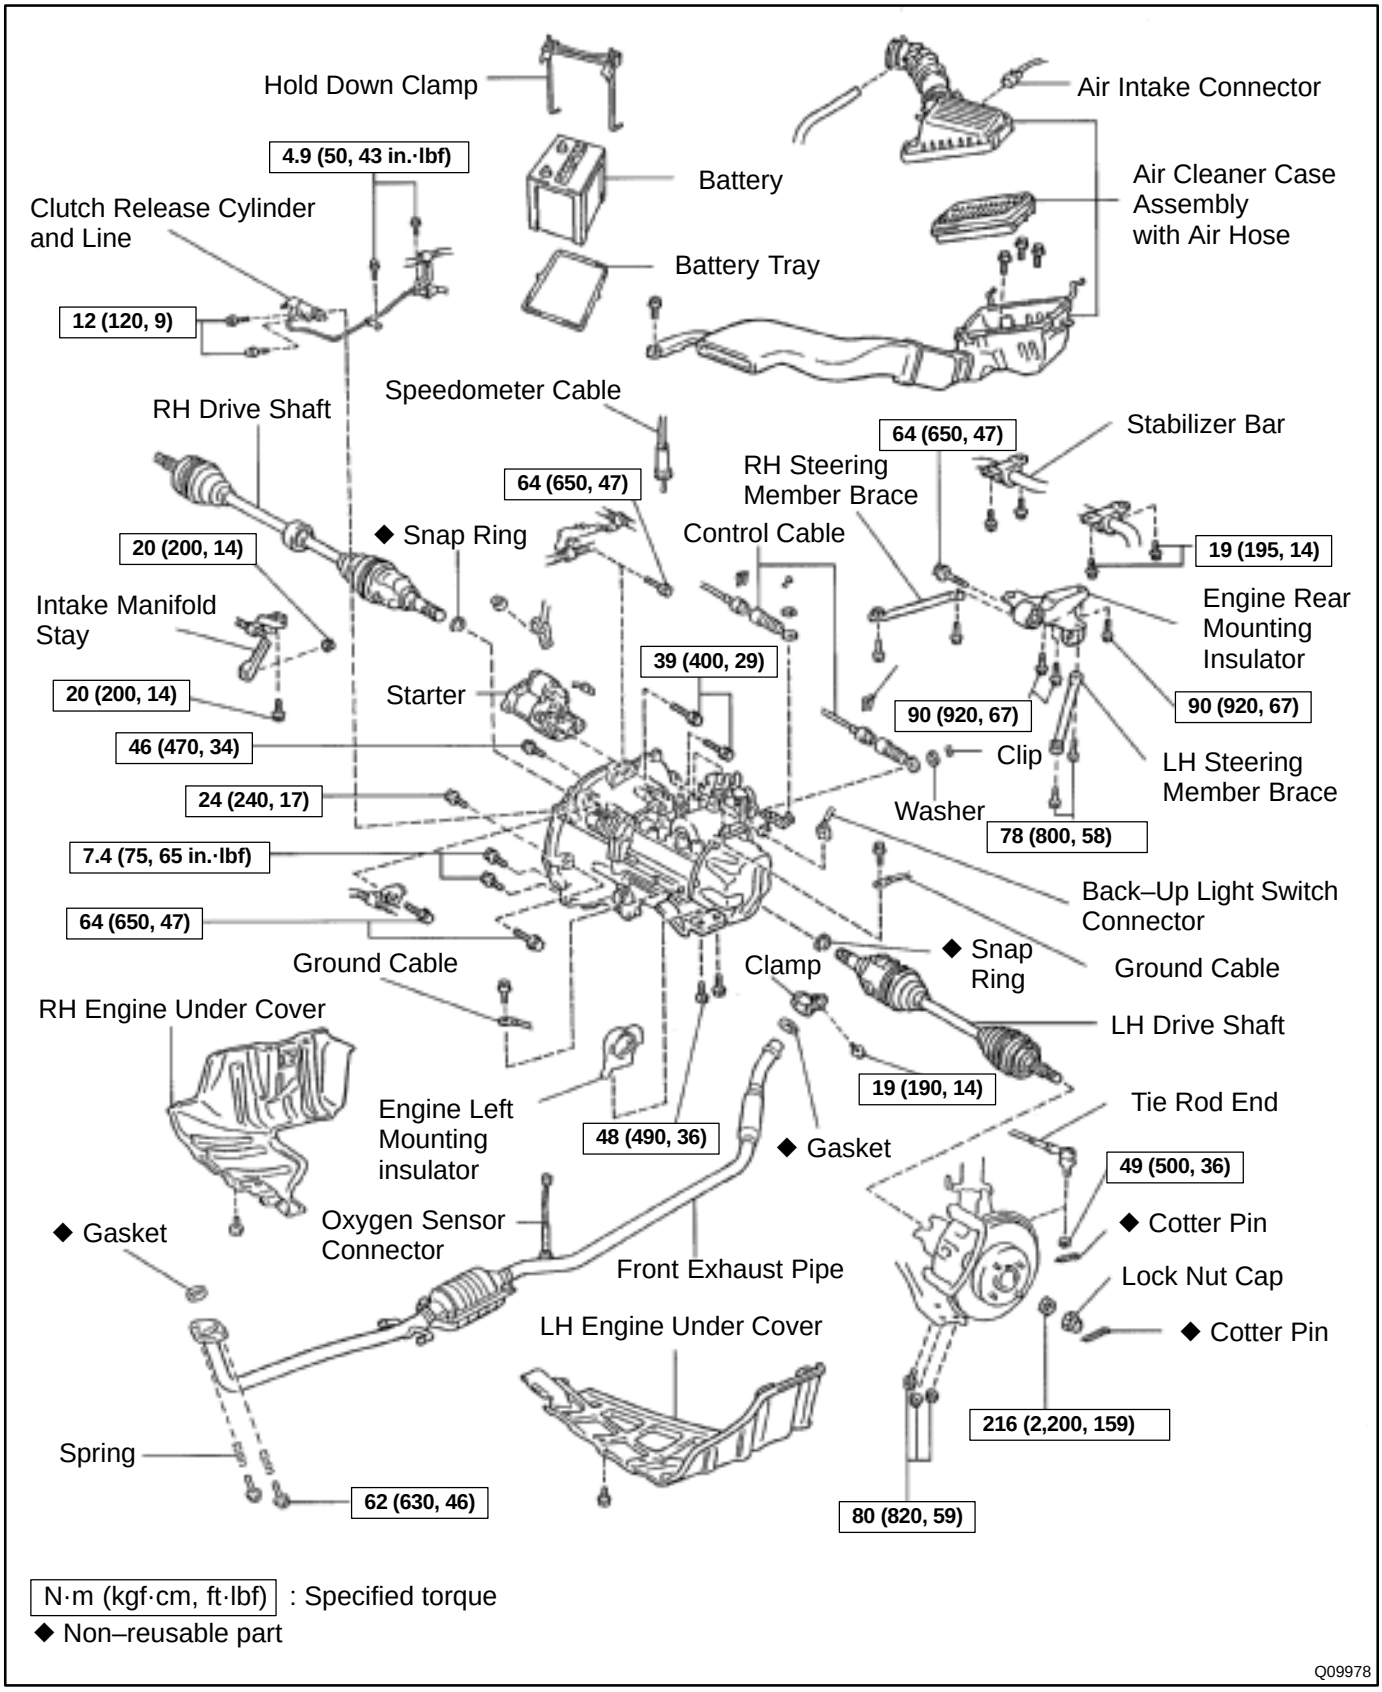
MX06S–03