


Brake Shoes

Reassembly


1. Apply brake cylinder grease to the sliding surface of the pivot pin, and insert the pin into the brake shoe.
2. Install the parking brake lever and wave washer on the pivot pin and secure with U-clip.

NOTE: Pinch the U-clip securely to prevent the pivot pin from coming out of the brake shoe.

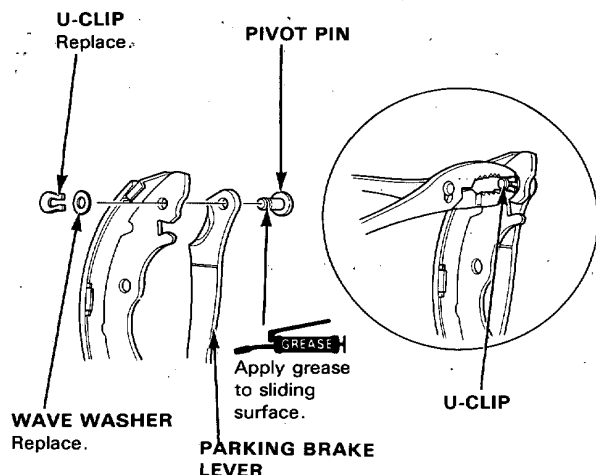


3. Connect the parking brake cable to the parking brake lever.
4. Apply grease on each sliding surface.

CAUTION: Contaminated brake linings reduce stopping power. Keep grease or oil off the brake linings. Wipe any excess grease off the parts.

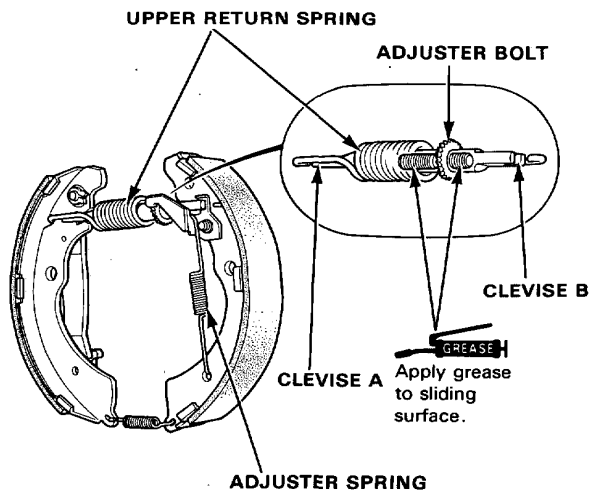


Apply grease on each sliding surface.

CAUTION: Contaminated brake linings reduce stopping power. Keep grease or oil off the brake linings. Wipe any excess grease off the parts.

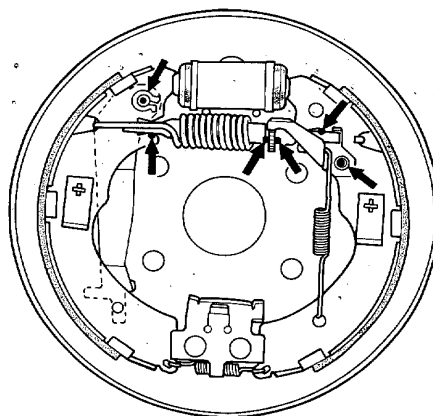

Greasing symbols: rubber grease (made by COSMO)
→ ● Moving portion

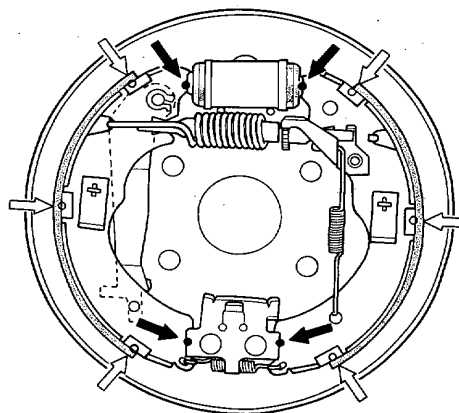

Grease symbols: MOLYKOTE 44MA
(Made by Dow Corning Co., Ltd.)

→ ● Brake shoe ends
⇨ ○ Opposite the edge of the shoe

5. Clean the threaded portions of clevises A and B. Coat the threads of the clevises with grease. To shorten the clevises, turn the adjuster bolt.
6. Hook the adjuster spring to the adjuster lever first, then to the brake shoe.